

Yokogawa CX Driver

© 2024 PTC Inc. All Rights Reserved.

Table of Contents

Yokogawa CX Driver	1
Table of Contents	2
Yokogawa CX Driver	4
Overview	4
Setup	5
Channel Properties — General	6
Tag Counts	7
Channel Properties — Ethernet Communications	8
Channel Properties — Write Optimizations	8
Channel Properties — Advanced	9
Device Properties — General	10
Operating Mode	11
Tag Counts	11
Device Properties — Scan Mode	11
Device Properties — Timing	12
Device Properties — Auto-Demotion	13
Device Properties — Tag Generation	14
Device Properties — Device Configuration	17
Device Properties — Redundancy	18
Optimizing Communications	19
Data Types Description	20
Automatic Tag Database Generation	21
Address Descriptions	23
CX1006 Addressing	23
CX1206 Addressing	27
CX2010 Addressing	34
CX2020 Addressing	38
CX2210 Addressing	42
CX2220 Addressing	49
CX2410 Addressing	55
CX2420 Addressing	62
CX2610 Addressing	68
CX2620 Addressing	75
Error Descriptions	82
Address '<address>' is out of range for the specified device or register	82

Data Type '<type>' is not valid for device address '<address>'	82
Device address '<address>' contains a syntax error	83
Device address '<address>' is Read Only	83
Missing address	83
Device '<device name>' is not responding	83
Device '<device name>' login failed. Check username and password	84
Device '<device name>' login not accepted. Choose username of 'admin' or 'user'	84
No more logins at this level on device '<device name>'	84
Unable to write to '<address>' on device '<device name>'	85
Write allowed for admin level only (Device '<device name>', Tag '<address>')	85
Write allowed for devices with math option only (Device '<device name>', Tag '<address>')	85
Winsock initialization failed (OS Error=n)	86
Winsock V1.1 or higher must be installed to use the Yokogawa CX Ethernet device driver	86
Index	87

Yokogawa CX Driver

Help version 1.028

CONTENTS

Overview

What is the Yokogawa CX Driver?

Setup

How do I configure a device for use with this driver?

Optimizing Communications

How do I get the best performance from the Yokogawa CX Driver?

Data Types Description

What data types does this driver support?

Automatic Tag Database Generation

How can I easily configure tags for the Yokogawa CX Driver?

Address Descriptions

How do I address a data location on a Yokogawa CX device?

Error Descriptions

What error messages does the Yokogawa CX Driver produce?

Overview

The Yokogawa CX Driver provides an easy and reliable way to connect Yokogawa CX Ethernet devices to OPC Client applications, including HMI, SCADA, Historian, MES, ERP and countless custom applications. It is intended for use with Yokogawa Data Acquisition and Data Recorder devices that support Ethernet TCP communications.

Setup

Supported Devices

CX1006
CX2410
CX1206
CX2420
CX2010
CX2610
CX2020
CX2620
CX2210
CX2220

Connection Timeout

This property specifies the time that the driver will wait for a connection to be made with a device. Depending on network load, the connect time may vary with each connection attempt. The valid range is 1 to 30 seconds. The default setting is 3 seconds.

Request Timeout

This property specifies the amount of time that the driver will wait for a response from the device before giving up and going on to the next request. Long timeouts will only affect performance if a device is not responding. The valid range is 100 to 30000 milliseconds. The default setting is 1000 milliseconds.

Retry Attempts

This property specifies the number of times that the driver will retry a message before giving up and going on to the next message. The valid range is 1 to 10. The default setting is 3 retries.

• *For more information on timeouts and retries, refer to the OPC server's help file.*

Channel and Device Limits

The maximum number of channels supported by this driver is 100. The maximum number of devices supported by this driver is 1024 per channel.

Device ID

Yokogawa devices are networked using standard IP addressing. In general, the Device ID has the following format: *YYY.YYY.YYY.YYY*, where *YYY* designates the device IP address. Each *YYY* byte should be in the range of 0 to 255.

Device Settings

The CX unit should be configured with the Keep Alive function enabled. This allows the CX unit to drop the connection if there are no responses to periodic test packets at the TCP level. The function is set in the Communication (Control -Login Time out-) property group in Setup Mode.

• *For more information, refer to the Yokogawa CX instruction manual.*

Channel Properties — General

This server supports the use of multiple simultaneous communications drivers. Each protocol or driver used in a server project is called a channel. A server project may consist of many channels with the same communications driver or with unique communications drivers. A channel acts as the basic building block of an OPC link. This group is used to specify general channel properties, such as the identification attributes and operating mode.

Property Groups	[-] Identification	
General	Name	
Write Optimizations	Description	
Advanced	Driver	
	[-] Diagnostics	
	Diagnostics Capture	Disable
	[-] Tag Counts	
	Static Tags	10

Identification

Name: Specify the user-defined identity of this channel. In each server project, each channel name must be unique. Although names can be up to 256 characters, some client applications have a limited display window when browsing the OPC server's tag space. The channel name is part of the OPC browser information. The property is required for creating a channel.

• For information on reserved characters, refer to "How To... Properly Name a Channel, Device, Tag, and Tag Group" in the server help.

Description: Specify user-defined information about this channel.

• Many of these properties, including Description, have an associated system tag.

Driver: Specify the protocol / driver for this channel. Specify the device driver that was selected during channel creation. It is a disabled setting in the channel properties. The property is required for creating a channel.

• **Note:** With the server's online full-time operation, these properties can be changed at any time. This includes changing the channel name to prevent clients from registering data with the server. If a client has already acquired an item from the server before the channel name is changed, the items are unaffected. If, after the channel name has been changed, the client application releases the item and attempts to re-acquire using the old channel name, the item is not accepted. Changes to the properties should not be made once a large client application has been developed. Utilize proper user role and privilege management to prevent operators from changing properties or accessing server features.

Diagnostics

Diagnostics Capture: When enabled, this option makes the channel's diagnostic information available to OPC applications. Because the server's diagnostic features require a minimal amount of overhead processing, it is recommended that they be utilized when needed and disabled when not. The default is disabled.

• **Note:** This property is not available if the driver does not support diagnostics.

• For more information, refer to *Communication Diagnostics in the server help*.

Diagnostics

Diagnostics Capture: When enabled, this option allows the usage of statistics tags that provide feedback to client applications regarding the operation of the channel. Because the server's diagnostic features require a minimal amount of overhead processing, it is recommended that they be utilized when needed and disabled when not. The default is disabled.

● **Note:** This property is not available if the driver does not support diagnostics.

● *For more information, refer to Statistics Tags in the server help.*

Tag Counts

Static Tags: Provides the total number of defined static tags at this level (device or channel). This information can be helpful in troubleshooting and load balancing.

Channel Properties — Ethernet Communications

Ethernet Communication can be used to communicate with devices.

Property Groups	[-] Ethernet Settings	
General	Network Adapter	Default
Ethernet Communications		
Write Optimizations		
Advanced		

Ethernet Settings

Network Adapter: Specify the network adapter to bind. When left blank or Default is selected, the operating system selects the default adapter.

Channel Properties — Write Optimizations

The server must ensure that the data written from the client application gets to the device on time. Given this goal, the server provides optimization properties to meet specific needs or improve application responsiveness.

Property Groups	[-] Write Optimizations	
General	Optimization Method	Write Only Latest Value for All Tags
Write Optimizations	Duty Cycle	10

Write Optimizations

Optimization Method: Controls how write data is passed to the underlying communications driver. The options are:

- **Write All Values for All Tags:** This option forces the server to attempt to write every value to the controller. In this mode, the server continues to gather write requests and add them to the server's internal write queue. The server processes the write queue and attempts to empty it by writing data to the device as quickly as possible. This mode ensures that everything written from the client applications is sent to the target device. This mode should be selected if the write operation order or the write item's content must uniquely be seen at the target device.
- **Write Only Latest Value for Non-Boolean Tags:** Many consecutive writes to the same value can accumulate in the write queue due to the time required to actually send the data to the device. If the server updates a write value that has already been placed in the write queue, far fewer writes are needed to reach the same final output value. In this way, no extra writes accumulate in the server's queue. When the user stops moving the slide switch, the value in the device is at the correct value at virtually the same time. As the mode states, any value that is not a Boolean value is updated in the server's internal write queue and sent to the device at the next possible opportunity. This can greatly improve the application performance.
 - **Note:** This option does not attempt to optimize writes to Boolean values. It allows users to optimize the operation of HMI data without causing problems with Boolean operations, such as a momentary push button.
- **Write Only Latest Value for All Tags:** This option takes the theory behind the second optimization mode and applies it to all tags. It is especially useful if the application only needs to send the latest

value to the device. This mode optimizes all writes by updating the tags currently in the write queue before they are sent. This is the default mode.

Duty Cycle: is used to control the ratio of write to read operations. The ratio is always based on one read for every one to ten writes. The duty cycle is set to ten by default, meaning that ten writes occur for each read operation. Although the application is performing a large number of continuous writes, it must be ensured that read data is still given time to process. A setting of one results in one read operation for every write operation. If there are no write operations to perform, reads are processed continuously. This allows optimization for applications with continuous writes versus a more balanced back and forth data flow.

● **Note:** It is recommended that the application be characterized for compatibility with the write optimization enhancements before being used in a production environment.

Channel Properties — Advanced

This group is used to specify advanced channel properties. Not all drivers support all properties; so the Advanced group does not appear for those devices.

Property Groups	<input type="checkbox"/> Non-Normalized Float Handling	
General	Floating-Point Values	Replace with Zero
Write Optimizations	<input type="checkbox"/> Inter-Device Delay	
Advanced	Inter-Device Delay (ms)	0

Non-Normalized Float Handling: A non-normalized value is defined as Infinity, Not-a-Number (NaN), or as a Denormalized Number. The default is Replace with Zero. Drivers that have native float handling may default to Unmodified. Non-normalized float handling allows users to specify how a driver handles non-normalized IEEE-754 floating point data. Descriptions of the options are as follows:

- **Replace with Zero:** This option allows a driver to replace non-normalized IEEE-754 floating point values with zero before being transferred to clients.
- **Unmodified:** This option allows a driver to transfer IEEE-754 denormalized, normalized, non-number, and infinity values to clients without any conversion or changes.

● **Note:** This property is disabled if the driver does not support floating-point values or if it only supports the option that is displayed. According to the channel's float normalization setting, only real-time driver tags (such as values and arrays) are subject to float normalization. For example, EFM data is not affected by this setting.

● *For more information on the floating-point values, refer to "How To ... Work with Non-Normalized Floating-Point Values" in the server help.*

Inter-Device Delay: Specify the amount of time the communications channel waits to send new requests to the next device after data is received from the current device on the same channel. Zero (0) disables the delay.

● **Note:** This property is not available for all drivers, models, and dependent settings.

Device Properties — General

A device represents a single target on a communications channel. If the driver supports multiple controllers, users must enter a device ID for each controller.

Property Groups	Identification	
General	Name	
Scan Mode	Description	
	Channel Assignment	
	Driver	
	Model	
	ID Format	Decimal
	ID	2

Identification

Name: Specify the name of the device. It is a logical user-defined name that can be up to 256 characters long and may be used on multiple channels.

● **Note:** Although descriptive names are generally a good idea, some OPC client applications may have a limited display window when browsing the OPC server's tag space. The device name and channel name become part of the browse tree information as well. Within an OPC client, the combination of channel name and device name would appear as "ChannelName.DeviceName".

● *For more information, refer to "How To... Properly Name a Channel, Device, Tag, and Tag Group" in server help.*

Description: Specify the user-defined information about this device.

● Many of these properties, including Description, have an associated system tag.

Channel Assignment: Specify the user-defined name of the channel to which this device currently belongs.

Driver: Selected protocol driver for this device.

Model: Specify the type of device that is associated with this ID. The contents of the drop-down menu depend on the type of communications driver being used. Models that are not supported by a driver are disabled. If the communications driver supports multiple device models, the model selection can only be changed when there are no client applications connected to the device.

● **Note:** If the communication driver supports multiple models, users should try to match the model selection to the physical device. If the device is not represented in the drop-down menu, select a model that conforms closest to the target device. Some drivers support a model selection called "Open," which allows users to communicate without knowing the specific details of the target device. *For more information, refer to the driver documentation.*

ID: Specify the device's driver-specific station or node. The type of ID entered depends on the communications driver being used. For many communication drivers, the ID is a numeric value. Drivers that support a Numeric ID provide users with the option to enter a numeric value whose format can be changed to suit the needs of the application or the characteristics of the selected communications driver. The format is set by the driver by default. Options include Decimal, Octal, and Hexadecimal.

● **Note:** If the driver is Ethernet-based or supports an unconventional station or node name, the device's TCP/IP address may be used as the device ID. TCP/IP addresses consist of four values that are separated by periods, with each value in the range of 0 to 255. Some device IDs are string based. There may be additional properties to configure within the ID field, depending on the driver.

Operating Mode

Property Groups	+ Identification	
General	- Operating Mode	
Scan Mode	Data Collection	Enable
	Simulated	No

Data Collection: This property controls the device's active state. Although device communications are enabled by default, this property can be used to disable a physical device. Communications are not attempted when a device is disabled. From a client standpoint, the data is marked as invalid and write operations are not accepted. This property can be changed at any time through this property or the device system tags.

Simulated: Place the device into or out of Simulation Mode. In this mode, the driver does not attempt to communicate with the physical device, but the server continues to return valid OPC data. Simulated stops physical communications with the device, but allows OPC data to be returned to the OPC client as valid data. While in Simulation Mode, the server treats all device data as reflective: whatever is written to the simulated device is read back and each OPC item is treated individually. The data is not saved if the server removes the item (such as when the server is reinitialized). The default is No.

Notes:

1. Updates are not applied until clients disconnect and reconnect.
2. The System tag (`_Simulated`) is read only and cannot be written to for runtime protection. The System tag allows this property to be monitored from the client.
3. In Simulation mode, the item's memory map is based on client update rate(s) (Group Update Rate for OPC clients or Scan Rate for native and DDE interfaces). This means that two clients that reference the same item with different update rates return different data.
4. When a device is simulated, updates may not appear faster than one (1) second in the client.

Simulation Mode is for test and simulation purposes only. It should never be used in a production environment.

Tag Counts

Property Groups	- Identification	
General	- Operating Mode	
	- Tag Counts	
	Static Tags	130

Static Tags: Provides the total number of defined static tags at this level (device or channel). This information can be helpful in troubleshooting and load balancing.

Device Properties — Scan Mode

The Scan Mode specifies the subscribed-client requested scan rate for tags that require device communications. Synchronous and asynchronous device reads and writes are processed as soon as possible; unaffected by the Scan Mode properties.

Property Groups	☐ Scan Mode	
General	Scan Mode	Respect Client-Specified Scan Rate ▼
Scan Mode	Initial Updates from Cache	Disable

Scan Mode: Specify how tags in the device are scanned for updates sent to subscribing clients. Descriptions of the options are:

- **Respect Client-Specified Scan Rate:** This mode uses the scan rate requested by the client.
- **Request Data No Faster than Scan Rate:** This mode specifies the value set as the maximum scan rate. The valid range is 10 to 99999990 milliseconds. The default is 1000 milliseconds.
 - **Note:** When the server has an active client and items for the device and the scan rate value is increased, the changes take effect immediately. When the scan rate value is decreased, the changes do not take effect until all client applications have been disconnected.
- **Request All Data at Scan Rate:** This mode forces tags to be scanned at the specified rate for subscribed clients. The valid range is 10 to 99999990 milliseconds. The default is 1000 milliseconds.
- **Do Not Scan, Demand Poll Only:** This mode does not periodically poll tags that belong to the device nor perform a read to get an item's initial value once it becomes active. It is the OPC client's responsibility to poll for updates, either by writing to the `_DemandPoll` tag or by issuing explicit device reads for individual items. *For more information, refer to "Device Demand Poll" in server help.*
- **Respect Tag-Specified Scan Rate:** This mode forces static tags to be scanned at the rate specified in their static configuration tag properties. Dynamic tags are scanned at the client-specified scan rate.

Initial Updates from Cache: When enabled, this option allows the server to provide the first updates for newly activated tag references from stored (cached) data. Cache updates can only be provided when the new item reference shares the same address, scan rate, data type, client access, and scaling properties. A device read is used for the initial update for the first client reference only. The default is disabled; any time a client activates a tag reference the server attempts to read the initial value from the device.

Device Properties — Timing

The device Timing properties allow the driver's response to error conditions to be tailored to fit the application's needs. In many cases, the environment requires changes to these properties for optimum performance. Factors such as electrically generated noise, modem delays, and poor physical connections can influence how many errors or timeouts a communications driver encounters. Timing properties are specific to each configured device.

Property Groups	☐ Communication Timeouts	
General	Connect Timeout (s)	3
Scan Mode	Request Timeout (ms)	1000
Timing	Attempts Before Timeout	3

Communications Timeouts

Connect Timeout: This property (which is used primarily by Ethernet based drivers) controls the amount of time required to establish a socket connection to a remote device. The device's connection time often takes longer than normal communications requests to that same device. The valid range is 1 to 30 seconds. The default is typically 3 seconds, but can vary depending on the driver's specific nature. If this setting is not supported by the driver, it is disabled.

● **Note:** Due to the nature of UDP connections, the connection timeout setting is not applicable when communicating via UDP.

Request Timeout: Specify an interval used by all drivers to determine how long the driver waits for a response from the target device to complete. The valid range is 50 to 9999999 milliseconds (167 minutes). The default is usually 1000 milliseconds, but can vary depending on the driver. The default timeout for most serial drivers is based on a baud rate of 9600 baud or better. When using a driver at lower baud rates, increase the timeout to compensate for the increased time required to acquire data.

Attempts Before Timeout: Specify how many times the driver issues a communications request before considering the request to have failed and the device to be in error. The valid range is 1 to 10. The default is typically 3, but can vary depending on the driver's specific nature. The number of attempts configured for an application depends largely on the communications environment. This property applies to both connection attempts and request attempts.

Timing

Inter-Request Delay: Specify how long the driver waits before sending the next request to the target device. It overrides the normal polling frequency of tags associated with the device, as well as one-time reads and writes. This delay can be useful when dealing with devices with slow turnaround times and in cases where network load is a concern. Configuring a delay for a device affects communications with all other devices on the channel. It is recommended that users separate any device that requires an inter-request delay to a separate channel if possible. Other communications properties (such as communication serialization) can extend this delay. The valid range is 0 to 300,000 milliseconds; however, some drivers may limit the maximum value due to a function of their particular design. The default is 0, which indicates no delay between requests with the target device.

● **Note:** Not all drivers support Inter-Request Delay. This setting does not appear if it is not available.

Property Groups General Scan Mode Timing	[-] Timing	
	Inter-Request Delay (ms)	0

Device Properties — Auto-Demotion

The Auto-Demotion properties can temporarily place a device off-scan in the event that a device is not responding. By placing a non-responsive device offline for a specific time period, the driver can continue to optimize its communications with other devices on the same channel. After the time period has been reached, the driver re-attempts to communicate with the non-responsive device. If the device is responsive, the device is placed on-scan; otherwise, it restarts its off-scan time period.

Property Groups General Scan Mode Timing Auto-Demotion	[-] Auto-Demotion	
	Demote on Failure	Enable
	Timeouts to Demote	3
	Demotion Period (ms)	10000
	Discard Requests when Demoted	Disable

Demote on Failure: When enabled, the device is automatically taken off-scan until it is responding again.

Tip: Determine when a device is off-scan by monitoring its demoted state using the `_AutoDemoted` system tag.

Timeouts to Demote: Specify how many successive cycles of request timeouts and retries occur before the device is placed off-scan. The valid range is 1 to 30 successive failures. The default is 3.

Demotion Period: Indicate how long the device should be placed off-scan when the timeouts value is reached. During this period, no read requests are sent to the device and all data associated with the read requests are set to bad quality. When this period expires, the driver places the device on-scan and allows for another attempt at communications. The valid range is 100 to 3600000 milliseconds. The default is 10000 milliseconds.

Discard Requests when Demoted: Select whether or not write requests should be attempted during the off-scan period. Disable to always send write requests regardless of the demotion period. Enable to discard writes; the server automatically fails any write request received from a client and does not post a message to the Event Log.

Device Properties — Tag Generation

The automatic tag database generation features make setting up an application a plug-and-play operation. Select communications drivers can be configured to automatically build a list of tags that correspond to device-specific data. These automatically generated tags (which depend on the nature of the supporting driver) can be browsed from the clients.

Not all devices and drivers support full automatic tag database generation and not all support the same data types. Consult the data types descriptions or the supported data type lists for each driver for specifics.

If the target device supports its own local tag database, the driver reads the device's tag information and uses the data to generate tags within the server. If the device does not natively support named tags, the driver creates a list of tags based on driver-specific information. An example of these two conditions is as follows:

1. If a data acquisition system supports its own local tag database, the communications driver uses the tag names found in the device to build the server's tags.
2. If an Ethernet I/O system supports detection of its own available I/O module types, the communications driver automatically generates tags in the server that are based on the types of I/O modules plugged into the Ethernet I/O rack.

Note: Automatic tag database generation's mode of operation is completely configurable. *For more information, refer to the property descriptions below.*

Property Groups	<input type="checkbox"/> Tag Generation	
General	On Device Startup	Do Not Generate on Startup
Scan Mode	On Duplicate Tag	Delete on Create
Timing	Parent Group	
Auto-Demotion	Allow Automatically Generated Subgroups	Enable
Tag Generation	Create	Create tags
Communications		
Redundancy		

On Property Change: If the device supports automatic tag generation when certain properties change, the **On Property Change** option is shown. It is set to **Yes** by default, but it can be set to **No** to control over when tag generation is performed. In this case, the **Create tags** action must be manually invoked to perform tag

generation. To invoke via the Configuration API service, access `/config/v1/project/channels/{name}/devices/{name}/services/TagGeneration`.

On Device Startup: Specify when OPC tags are automatically generated. Descriptions of the options are as follows:

- **Do Not Generate on Startup:** This option prevents the driver from adding any OPC tags to the tag space of the server. This is the default setting.
- **Always Generate on Startup:** This option causes the driver to evaluate the device for tag information. It also adds tags to the tag space of the server every time the server is launched.
- **Generate on First Startup:** This option causes the driver to evaluate the target device for tag information the first time the project is run. It also adds any OPC tags to the server tag space as needed.

● **Note:** When the option to automatically generate OPC tags is selected, any tags that are added to the server's tag space must be saved with the project. Users can configure the project to automatically save from the **Tools | Options** menu.

On Duplicate Tag: When automatic tag database generation is enabled, the server needs to know what to do with the tags that it may have previously added or with tags that have been added or modified after the communications driver since their original creation. This setting controls how the server handles OPC tags that were automatically generated and currently exist in the project. It also prevents automatically generated tags from accumulating in the server.

For example, if a user changes the I/O modules in the rack with the server configured to **Always Generate on Startup**, new tags would be added to the server every time the communications driver detected a new I/O module. If the old tags were not removed, many unused tags could accumulate in the server's tag space. The options are:

- **Delete on Create:** This option deletes any tags that were previously added to the tag space before any new tags are added. This is the default setting.
- **Overwrite as Necessary:** This option instructs the server to only remove the tags that the communications driver is replacing with new tags. Any tags that are not being overwritten remain in the server's tag space.
- **Do not Overwrite:** This option prevents the server from removing any tags that were previously generated or already existed in the server. The communications driver can only add tags that are completely new.
- **Do not Overwrite, Log Error:** This option has the same effect as the prior option, and also posts an error message to the server's Event Log when a tag overwrite would have occurred.

● **Note:** Removing OPC tags affects tags that have been automatically generated by the communications driver as well as any tags that have been added using names that match generated tags. Users should avoid adding tags to the server using names that may match tags that are automatically generated by the driver.

Parent Group: This property keeps automatically generated tags from mixing with tags that have been entered manually by specifying a group to be used for automatically generated tags. The name of the group can be up to 256 characters. This parent group provides a root branch to which all automatically generated tags are added.

Allow Automatically Generated Subgroups: This property controls whether the server automatically creates subgroups for the automatically generated tags. This is the default setting. If disabled, the server gen-

erates the device's tags in a flat list without any grouping. In the server project, the resulting tags are named with the address value. For example, the tag names are not retained during the generation process.

● **Note:** If, as the server is generating tags, a tag is assigned the same name as an existing tag, the system automatically increments to the next highest number so that the tag name is not duplicated. For example, if the generation process creates a tag named "AI22" that already exists, it creates the tag as "AI23" instead.

Create: Initiates the creation of automatically generated OPC tags. If the device's configuration has been modified, **Create tags** forces the driver to reevaluate the device for possible tag changes. Its ability to be accessed from the System tags allows a client application to initiate tag database creation.

● **Note:** **Create tags** is disabled if the Configuration edits a project offline.

Device Properties — Device Configuration

Property Groups		
General	[-] General	
Scan Mode	Port	Ethernet
Timing	Data Handling	None
Auto-Demotion	Polling Interval (ms)	1000
Tag Generation	Start Math on Start	Disable
Device Configuration	[-] Time Settings	
Redundancy	Date and Time	Device Time
	Date Format	MM/DD/YY
	Set Clock on Start	Disable
	[-] Tagnames	
	Generate Tag Database Using	Physical Channel Number
	[-] Login	
	Username	admin
	Password	*****

Descriptions of the properties are as follows:

- **Port:** This property specifies the port number the remote device will be configured to use. This driver is currently set to use the Ethernet Exclusive port (Port Number 34150) only, and requires Winsock V1.1 or higher.
 - **Data Handling:** This property specifies how the driver will return specific data values for numerical out of range and error conditions that are received from the device. Options include None, +INF, and -INF. The default setting is None. For more information, refer to [Data Handling](#).
 - **Polling Interval:** This property specifies a fixed time interval for all communications with a device. It can be used to prevent the driver from making excessive requests to the device, and to prevent the OPC client from forcing the driver to run at its maximum update rate. The default setting is 1000.
 - **Start Math on Start:** When enabled, this option will inform the driver to send a command to the device at communication startup that will start the math computation. The default setting is disabled.
- **Note:** When math is stopped manually on the device, the server must be restarted to initiate the command the next time a connection is made with a client application.
- **Date and Time:** This property specifies the origin of the data value of the Date and Time data types (which represent the date and time of the latest data). Options include Device Time and System Time. The default setting is Device Time. Descriptions of the options are as follows:
 - **Device Time:** When selected, this option will cause the Date and Time tags to return the date and time read from the device. This date and time represents the date and time that the latest data was measured or computed based on the internal device clock.
 - **System Time:** When selected, this option will cause the Date and Time tags to return the date and time that the requested data was returned from the device based on the internal system clock.
 - **Date Format:** This property specifies the format of the return string for the Date data type. Options include MM/DD/YY (month/day/year), YY/MM/DD (year/month/day), or DD/MM/YY (day/month/year).
 - **Set Clock on Start:** When enabled, this option informs the driver to send a command to the device at communication startup that will set the device clock to the date and time settings of the system clock. The default setting is disabled.

- **Generate tag database using:** This property specifies the origin of the tag name used when automatically generating a tag database. Options include Physical Channel Number and Device Tag Name. The default setting is Physical Channel Number. Descriptions of the options are as follows:
 - **Physical Channel Number:** When selected, the driver will generate tag names based on the channel number of an item. For example, "CH01" or "CH01_alarm1".
 - **Device Tag Name:** When selected, the driver will generate tag names using the tag name returned by the device for a channel. For example, "Flow" or "Flow_alarm1".
- **Username:** This property specifies the registered username that is required by CX devices for login. When the device is configured with the login function enabled, only users that are registered can login to the CX. A maximum of 16 alphanumeric characters are allowed. The username is case sensitive. The default setting is admin.
 - **Note:** Users must specify a user level to communicate with CX devices regardless of whether it is configured with the login function disabled. Enter the username "admin" or "user" to indicate the user level. In this case, a password is not required.
- **Password:** This property specifies the username's registered password for when the device is configured with the login function enabled. A maximum of 6 alphanumeric characters are allowed. The password entry will not be displayed on the screen.

Data Handling

The Data Handling property specifies how the driver will return specific data values for numerical out of range and error conditions that are received from the device. Options include None, +INF, and -INF. Descriptions of the options are as follows:

- **None:** When selected, the special data values will be returned with the actual data value received from the device. For example, the data value of a measuring channel Over Range would be returned as 32,767 and the data value of a math channel Over Range would be returned as 2,147,450,879.
- **+INF:** When selected, the special data values will be returned as a numerical representation of positive infinity (#INF). The exception is an Under Range condition, which will always be returned as negative infinity.
- **-INF:** When selected, the special data values will be returned as a numerical representation of negative infinity (-#INF). The exception is an Over Range condition, which will always be returned as positive infinity.

Device Properties — Redundancy

Property Groups	<input type="checkbox"/> Redundancy	
General	Secondary Path	Channel.Device 1 ...
Scan Mode	Operating Mode	Switch On Failure
Timing	Monitor Item	
Auto-Demotion	Monitor Interval (s)	300
Tag Generation	Return to Primary ASAP	Yes
Tag Import Settings		
Redundancy		


Redundancy is available with the Media-Level Redundancy Plug-In.

- Consult the website, a sales representative, or the [user manual](#) for more information.


Optimizing Communications

The Yokogawa CX Driver has been designed to provide the best performance with the least amount of impact on the system's overall performance. While the Yokogawa CX Driver is fast, there are a couple of guidelines that can be used to control and optimize the application and gain maximum performance.

This server refers to communications protocols like Yokogawa CX Ethernet Device as a channel. Each channel defined in the application represents a separate path of execution in the server. Once a channel has been defined, a series of devices must then be defined under that channel. Each of these devices represents a single Yokogawa CX Ethernet Device from which data will be collected. While this approach to defining the application will provide a high level of performance, it won't take full advantage of the Yokogawa CX Driver or the network. An example of how the application may appear when configured using a single channel is shown below.

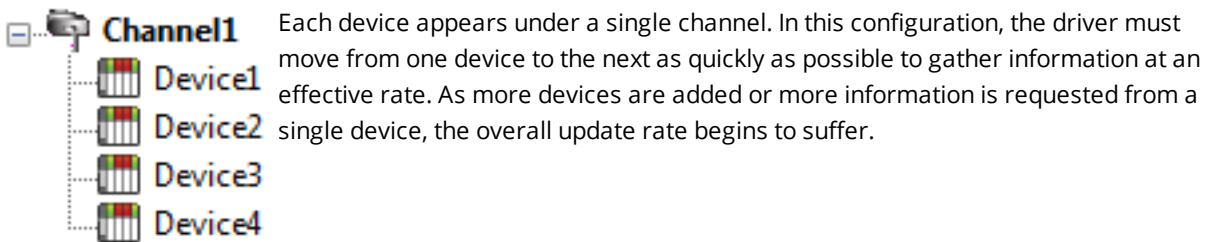

If the Yokogawa CX Driver could only define one single channel, then the example shown above would be the only option available; however, the Yokogawa CX Driver can define multiple channels. Using multiple channels distributes the data collection workload by simultaneously issuing multiple requests to the network. An example of how the same application may appear when configured using multiple channels to improve performance is shown below.

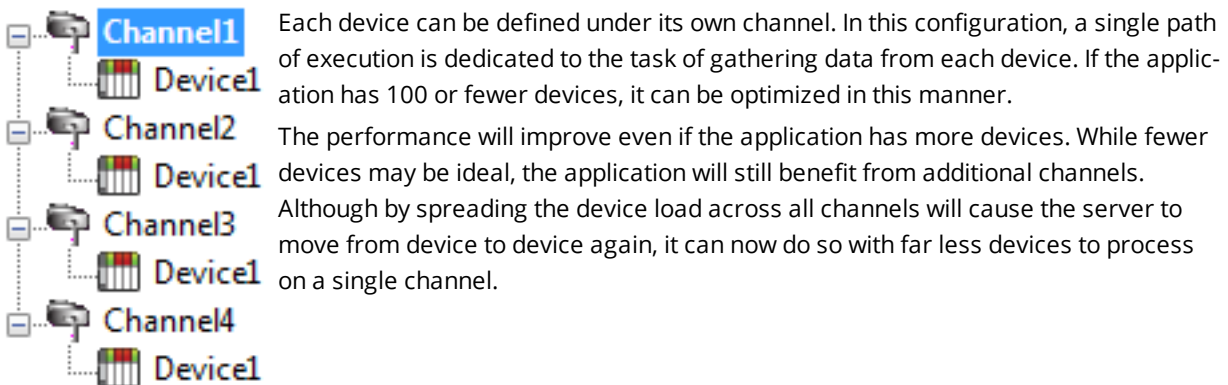

Data Types Description

Data Type	Description
Boolean	Single bit
Byte	Unsigned 8-bit value bit 0 is the low bit bit 7 is the high bit
Word	Unsigned 16-bit value bit 0 is the low bit bit 15 is the high bit
Short	Signed 16-bit value bit 0 is the low bit bit 14 is the high bit bit 15 is the sign bit
Float	32-bit floating point value
Double	64-bit floating point value
String	Null-terminated ASCII string

Automatic Tag Database Generation

This driver's Automatic OPC Tag Database Generation features have been designed to make configuring the OPC application a plug-and-play operation. This driver can be configured to automatically build a list of OPC tags within the OPC server that correspond to device-specific data. The automatically-generated OPC tags can then be browsed from the OPC client.

The OPC tags that are generated depend on the nature of the driver. If the target device supports its own local tag database, the driver will read the device's tag information and then use this data to generate OPC tags within the OPC server. If the device does not natively support its own named tags, the driver will create a list of tags based on information specific to the driver. An example of these two conditions may be as follows:

1. A Data acquisition system that supports its own local tag database. The driver will use the tags names found in the device to build the OPC server's OPC tags.
2. An Ethernet I/O system that supports the detection of an I/O module type. The driver in this case will automatically generate OPC tags in the OPC server that are based on the types of I/O modules plugged into the Ethernet I/O rack.

Automatic Tag Database Generation is completely configurable. The following property group is used to define how the OPC Server and the associated communications driver will handle Automatic OPC Tag Database Generation:

Tag Generation	
On Device Startup	Do Not Generate on Startup
On Duplicate Tag	Delete on Create
Parent Group	
Allow Automatically Generated Subgroups	Enable
Create	Create tags

The **Automatic tag database generation on device startup** selection is used to configure when OPC tags will be automatically generated. Descriptions of the options are as follows:

- **Do not generate on startup:** This option prevents the driver from adding any OPC tags to the OPC Server's tag space. It is the default setting.
- **Always generate on startup:** This option causes the driver to evaluate the device for tag information. OPC tags will be added to the tag space of the server each time the server is launched.
- **Generate on first startup:** This option causes the driver to evaluate the target device for tag information the first time the OPC Server project runs. OPC tags will be added to the server tag space as needed.

● **Note:** Any tags that are added to the server's tag space must be saved with the project. The OPC Server project can be configured to automatically save from the **Tools | Options** menu.


When automatic tag generation is enabled, the server needs to know what to do with the OPC tags that were added from previous runs (or with the OPC tags that have been added or modified after being added by the communications driver originally). The selection **Perform the following action** controls how the server will handle OPC tags that were automatically generated and currently exist in the OPC Server project. This feature prevents automatically-generated tags from piling up in the server. In the Ethernet I/O example above, this would occur if users continued to change the I/O modules in the rack while the OPC Server was configured to always generate new OPC tags on startup. Under this condition, tags would be added to the server

every time the communications driver detected a new I/O module. If the old tags are not removed, they will accumulate in the server's tag space. Descriptions of the selections are as follows:


1. **Delete on create:** This option allows the server to remove any tags that have previously been added to the tag space before any new tags can be added by the communications driver.
2. **Overwrite as necessary:** This option allows the server to only remove tags that the communications driver will replace with new tags. Any tags that are not being overwritten will remain in the server's tag space.
3. **Do not overwrite:** This option prevents the server from removing any tags that had previously been generated or that already exist in the server. With this selection, the communications driver can only add tags that are completely new.
4. **Do not overwrite, log error:** This option has the same effect as the third option, but also posts an error message to the OPC Server's Event Log when a tag overwrite would have occurred.

● **Note:** The removal of OPC tags not only affects tags that have been automatically generated by the communications driver, but also any tags that have been added using names that match generated tags. It is recommended that users avoid adding tags to the server using names that match tags that may be automatically generated by the driver.

Add generated tags to the following group can be used to keep automatically-generated tags from mixing with tags that have been entered manually. This property specifies a sub group that will be used when adding all automatically-generated tags for this device. The name of the sub group can be up to 31 characters in length. The following image displays demonstrate how this property affects where automatically-generated tags are placed in the server's tag space. It provides a root branch to which all automatically-generated tags will be added.

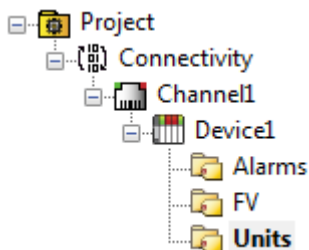

No sub group specified.

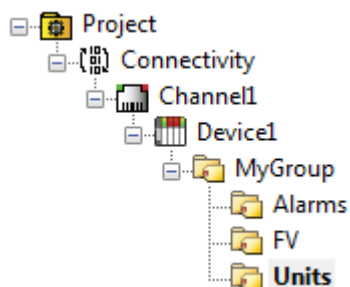

Sub group named MyGroup specified.

Auto Create manually initiates the creation of automatically-generated OPC tags, and also forces the communications driver to reevaluate the device for possible tag changes. It can be accessed from the System Tags, thus allowing the OPC client application to initiate tag database creation.

Address Descriptions

Address specifications vary depending on the model in use. Select a link from the following list to obtain specific address information for the model of interest.

[CX1006 Addressing](#)

[CX1206 Addressing](#)

[CX2010 Addressing](#)

[CX2020 Addressing](#)

[CX2210 Addressing](#)

[CX2220 Addressing](#)

[CX2410 Addressing](#)

[CX2420 Addressing](#)

[CX2610 Addressing](#)

[CX2620 Addressing](#)

CX1006 Addressing

The driver supports the following addresses for this device. The default data type for each address type is shown in **bold**.

Measured Channels

Address Type	Format	Range	Data Types	Access
Process Value of Channel	CHxx or CHxx.PV	01-06	Double , Float	Read Only
Alarm Summary of Channel	CHxx.Alarm	01-06	DWord , Short, Word, Byte	Read Only
Alarm Level1 Status of Channel	CHxx.Alarm1	01-06	Short , Word, Byte	Read Only
Alarm Level2 Status of Channel	CHxx.Alarm2	01-06	Short , Word, Byte	Read Only
Alarm Level3 Status of Channel	CHxx.Alarm3	01-06	Short , Word, Byte	Read Only
Alarm Level4 Status of Channel	CHxx.Alarm4	01-06	Short , Word, Byte	Read Only
Set and Read Level1 Alarm Setpoint	CHxx.ASP1	01-06	Double , Float	Read/Write
Set and Read Level2 Alarm Setpoint	CHxx.ASP2	01-06	Double , Float	Read/Write
Set and Read Level3 Alarm Setpoint	CHxx.ASP3	01-06	Double , Float	Read/Write
Set and Read Level4 Alarm Setpoint	CHxx.ASP4	01-06	Double , Float	Read/Write
Upper Scale Value of Channel*	CHxx.scale_Hi	01-06	Double , Float	Read Only
Lower Scale Value of Channel*	CHxx.scale_Lo	01-06	Double , Float	Read Only
Unit String of Channel*	CHxx.unit	01-06	String	Read Only
Tagname of Channel*	CHxx.tag	01-06	String	Read Only
Status of Channel*	CHxx.status	01-06	String	Read Only
Precision of Channel*	CHxx.Precision	01-06	Short , Word, Byte	Read Only
Lowest Measuring Channel*	CH.Low		Short , Word, Byte	Read Only
Highest Measuring Channel*	CH.High		Short , Word, Byte	Read Only

External Loops

Address Type	Format	Range	Data Types	Access
Process Value of External Loop	LPExx or LPExx.PV	01-04	Double , Float	Read Only
Setpoint Value of External Loop	LPExx.SP	01-04	Double , Float	Read/Write
Output Value of External Loop	LPExx.OUT	01-04	Double , Float	Read/Write
Alarm Summary of External Loop	LPExx.Alarm	01-04	DWord , Short, Word, Byte	Read Only
Alarm Level1 Status of External Loop	LPExx.Alarm1	01-04	Short , Word, Byte	Read Only
Alarm Level2 Status of External Loop	LPExx.Alarm2	01-04	Short , Word, Byte	Read Only
Alarm Level3 Status of External Loop	LPExx.Alarm3	01-04	Short , Word, Byte	Read Only
Alarm Level4 Status of External Loop	LPExx.Alarm4	01-04	Short , Word, Byte	Read Only
Upper Scale Value of External Loop*	LPExx.scale_Hi	01-04	Double , Float	Read Only
Lower Scale Value of External Loop*	LPExx.scale_Lo	01-04	Double , Float	Read Only
Unit String of External Loop (PV)*	LPExx.unit or LPExx.PV.unit	01-04	String	Read Only
Unit String of External Loop SP*	LPExx.SP.unit	01-04	String	Read Only
Unit String of External Loop OUT*	LPExx.OUT.unit	01-04	String	Read Only
Tagname of External Loop*	LPExx.tag	01-04	String	Read Only
Tagname of External Loop PV*	LPExx.PV.tag	01-04	String	Read Only
Tagname of External Loop SP*	LPExx.SP.tag	01-04	String	Read Only
Tagname of External Loop OUT*	LPExx.OUT.tag	01-04	String	Read Only
Status of External Loop (PV)*	LPExx.status or LPExx.PV.status	01-04	String	Read Only
Status of External Loop SP*	LPExx.SP.status	01-04	String	Read Only
Status of External Loop OUT*	LPExx.OUT.status	01-04	String	Read Only
Precision of External Loop (PV)*	LPExx.Precision or LPExx.PV.Precision	01-04	Short , Word, Byte	Read Only
Precision of External Loop*	LPExx.SP.Precision	01-04	Short , Word, Byte	Read Only
Precision of External Loop*	LPExx.OUT.Precision	01-04	Short , Word, Byte	Read Only
Lowest External Loop Number*	LPE.Low		Short , Word, Byte	Read Only

Address Type	Format	Range	Data Types	Access
Highest External Loop Number*	LPE.High		Short, Word, Byte	Read Only

Math Channels

Address Type	Format	Range	Data Types	Access
Process Value of Math Channel	CHxx or CHxx.PV	31-42	Double, Float	Read Only
Alarm Summary of Math Channel	CHxx.Alarm	31-42	DWord, Short, Word, Byte	Read Only
Alarm Level1 Status of Math Channel	CHxx.Alarm1	31-42	Short, Word, Byte	Read Only
Alarm Level2 Status of Math Channel	CHxx.Alarm2	31-42	Short, Word, Byte	Read Only
Alarm Level3 Status of Math Channel	CHxx.Alarm3	31-42	Short, Word, Byte	Read Only
Alarm Level4 Status of Math Channel	CHxx.Alarm4	31-42	Short, Word, Byte	Read Only
Set and Read Level1 Alarm Setpoint	CHxx.ASP1	31-42	Double, Float	Read/Write
Set and Read Level2 Alarm Setpoint	CHxx.ASP2	31-42	Double, Float	Read/Write
Set and Read Level3 Alarm Setpoint	CHxx.ASP3	31-42	Double, Float	Read/Write
Set and Read Level4 Alarm Setpoint	CHxx.ASP4	31-42	Double, Float	Read/Write
Upper Scale Value of Math Channel*	CHxx.scale_Hi	31-42	Double, Float	Read Only
Lower Scale Value of Math Channel*	CHxx.scale_Lo	31-42	Double, Float	Read Only
Unit String of Math Channel*	CHxx.unit	31-42	String	Read Only
Tagname of Math Channel*	CHxx.tag	31-42	String	Read Only
Status of Math Channel*	CHxx.status	31-42	String	Read Only
Precision of Math Channel*	CHxx.Precision	31-42	Short, Word, Byte	Read Only
Lowest Math Channel*	CHA.Low		Short, Word, Byte	Read Only
Highest Math Channel*	CHA.High		Short, Word, Byte	Read Only

*The data associated with these addresses is only read from the device at the start of a communications session. Once read, the values will not be refreshed until the server has been restarted or the Reset Tag has been invoked. To invoke a reset, write a non-zero value to the Reset Tag. Once the Reset Tag has been invoked, the driver will reinitialize all startup data from the device.

DI/DO DATA and Internal Switch Status (Style Number S3 or Later)

Address Type	Format	Range	Data Types	Access
Control Digital Inputs	DI	DI001-DI006	Boolean	Read Only
Control Digital Outputs	DO	DO001-DO006	Boolean	Read/Write
Internal Switches	SW	SW001-SW018	Boolean	Read/Write

Alarm Setpoints

Data associated with the addresses denoted in the device will be returned as +INF. Data values can only be written to Alarm Setpoints that are defined in the device: write operations to undefined Alarm Setpoints will return an error. Write operations are available only for users logged in at the Administrator level and will return an error otherwise.

Scales

Data values for Scale_Hi and Scale_Lo for channels that are skipped will be returned as +INF.

Tag Names

For devices that have unspecified tag names, the driver will construct an internal tag name based on the channel number. For example, the tag name of address 'CH01' will be returned as 'CH01'.

General Device Data

Address Type	Format	Range	Data Types	Access
Administrator Level	Admin		Boolean	Read Only
Date of Last Data	Date		String	Read Only
Time of Last Data	Time		String	Read Only
Model Name of Device	Model		String	Read Only
Host Name of Device	Hostname		String	Read Only
Serial Number of Device	SerialNumber		String	Read Only
IP Address of Device	IP		String	Read Only
Math Communication Data	CDxx	01-12	Float	Write Only
Control Math Execution	MathControl		Short, Word, Byte	Write Only
Reset Alarms	AlarmReset		Boolean	Write Only
Control Command and Response	Command		String	Read/Write
Previous Screen	PreScreen		Boolean	Write Only
Direct Reloading of Configuration	Reset		Boolean	Write Only
SetTime*	Tag		Boolean	Write Only

*The SetTime tag will cause the device time to be updated. Writing 0 or 1 to the tag will update the Device Date and Time, which can be verified from the Date tag and the Time tag. The SetTime tag will always display 0 as it is a Write Only tag. After a successful update, the following message will be posted: "Device Clock set to system time [Device <device_name>]."

Administrator Level

The Admin address type has a value of '1' or 'true' when the user has logged on at the Administrator level and a value of '0' or 'false' when the user has logged on at the User level.

Math Communication Data

The CD address type is only valid for devices equipped with the math option. Write operations to CD addresses for non-math equipped devices will return an error. Write operations are available only for users logged in at the Administrator level and will return an error otherwise.

Model Name of Device

The Model address type will have a string value of 'CX1000' or 'CX2000,' indicating the model series returned by the device.

Control Math Execution

The MathControl address type is only available for devices equipped with the math option. Write operations to the MathControl tag for non-math equipped devices will return an error.

Control Command and Response

The Command address allows the user to send a string command and receive a string response to and from the device. This allows the user to send any command to the device, including commands not directly supported by the driver. This tag is only available to users logged in at the Administrator level. Otherwise, write operations will return an error.

⚠ Use caution when performing write operations using the Command address.

● **Note:** The actual number of addresses available for each type depends on the configuration of the Yokogawa device. If the driver finds that an address is not present in the device at Runtime, it will post an error message and remove the tag from its scan list.

Addresses that have Write Only access are assigned a default access of Read/Write; however, data values are unreadable for these addresses and the associated tags are not included in the scan list. The current data value for these tags will always be 0 for numeric data types and null string for string data types.

CX1206 Addressing

The driver supports the following addresses for this device. The default data type for each address type is shown in **bold**.

Measured Channels

Address Type	Format	Range	Data Types	Access
Process Value of Channel	CHxx or CHxx.PV	01-06	Double , Float	Read Only
Alarm Summary of Channel	CHxx.Alarm	01-06	DWord , Short, Word, Byte	Read Only
Alarm Level1 Status of Channel	CHxx.Alarm1	01-06	Short , Word, Byte	Read Only
Alarm Level2 Status of Channel	CHxx.Alarm2	01-06	Short , Word, Byte	Read Only
Alarm Level3 Status of Channel	CHxx.Alarm3	01-06	Short , Word, Byte	Read Only
Alarm Level4 Status of Channel	CHxx.Alarm4	01-06	Short , Word, Byte	Read Only
Set and Read Level1 Alarm Setpoint	CHxx.ASP1	01-06	Double , Float	Read/Write
Set and Read Level2 Alarm Setpoint	CHxx.ASP2	01-06	Double , Float	Read/Write
Set and Read Level3 Alarm Setpoint	CHxx.ASP3	01-06	Double , Float	Read/Write
Set and Read Level4 Alarm Setpoint	CHxx.ASP4	01-06	Double , Float	Read/Write
Upper Scale Value of Channel*	CHxx.scale_Hi	01-06	Double , Float	Read Only
Lower Scale Value of Channel*	CHxx.scale_Lo	01-06	Double , Float	Read Only
Unit String of Channel*	CHxx.unit	01-06	String	Read Only
Tagname of Channel*	CHxx.tag	01-06	String	Read Only
Status of Channel*	CHxx.status	01-06	String	Read Only
Precision of Channel*	CHxx.Precision	01-06	Short , Word, Byte	Read Only
Lowest Measuring Channel*	CH.Low		Short , Word, Byte	Read Only

Address Type	Format	Range	Data Types	Access
Highest Measuring Channel*	CH.High		Short, Word, Byte	Read Only

Internal Loops

Address Type	Format	Range	Data Types	Access
Process Value of Internal Loop	LPxx or LPxx.PV	01-02	Double, Float	Read Only
Setpoint Value of Internal Loop for current SP number	LPxx.SP	01-02	Double, Float	Read/Write
Setpoint Value of Internal Loop for specified SP number	LPxx.SP.n	xx=01-02 n=1-8	Double, Float	Read/Write
Current SP number for Internal Loop	LPxx.SP.Num	01-02	Short, Word,	Read/Write
Output Value of Internal Loop	LPxx.OUT	01-02	Double, Float	Read/Write
Alarm Summary of Internal Loop	LPxx.Alarm	01-02	DWord, Short, Word, Byte	Read Only
Alarm Level1 Status of Internal Loop	LPxx.Alarm1	01-02	Short, Word, Byte	Read Only
Alarm Level2 Status of Internal Loop	LPxx.Alarm2	01-02	Short, Word, Byte	Read Only
Alarm Level3 Status of Internal Loop	LPxx.Alarm3	01-02	Short, Word, Byte	Read Only
Alarm Level4 Status of Internal Loop	LPxx.Alarm4	01-02	Short, Word, Byte	Read Only
Set and Read Level1 Alarm Setpoint	LPxx.ASP1	01-02	Double, Float	Read/Write
Set and Read Level2 Alarm Setpoint	LPxx.ASP2	01-02	Double, Float	Read/Write
Set and Read Level3 Alarm Setpoint	LPxx.ASP3	01-02	Double, Float	Read/Write
Set and Read Level4 Alarm Setpoint	LPxx.ASP4	01-02	Double, Float	Read/Write
Set and Read Level1 Alarm Setpoint of specified PID#	LPxx.ASP1.n	xx=01-02 n=1-8	Double, Float	Read/Write
Set and Read Level2 Alarm Setpoint of specified PID#	LPxx.ASP2.n	xx=01-02 n=1-8	Double, Float	Read/Write
Set and Read Level3 Alarm Setpoint of specified PID#	LPxx.ASP3.n	xx=01-02 n=1-8	Double, Float	Read/Write
Set and Read Level4 Alarm Setpoint of specified PID#	LPxx.ASP4.n	xx=01-02 n=1-8	Double, Float	Read/Write
Upper Scale Value of Internal Loop*	LPxx.scale_Hi	01-02	Double, Float	Read Only

Address Type	Format	Range	Data Types	Access
Lower Scale Value of Internal Loop*	LPxx.scale_Lo	01-02	Double , Float	Read Only
Unit String of Internal Loop (PV)*	LPxx.unit or LPxx.PV.unit	01-02	String	Read Only
Unit String of Internal Loop SP*	LPxx.SP.unit	01-02	String	Read Only
Unit String of Internal Loop OUT*	LPxx.OUT.unit	01-02	String	Read Only
Tagname of Internal Loop*	LPxx.tag	01-02	String	Read Only
Tagname of Internal Loop PV*	LPxx.PV.tag	01-02	String	Read Only
Tagname of Internal Loop SP*	LPxx.SP.tag	01-02	String	Read Only
Tagname of Internal Loop OUT*	LPxx.OUT.tag	01-02	String	Read Only
Status of Internal Loop (PV)*	LPxx.status or LPxx.PV.status	01-02	String	Read Only
Status of Internal Loop SP*	LPxx.SP.status	01-02	String	Read Only
Status of Internal Loop OUT*	LPxx.OUT.status	01-02	String	Read Only
Precision of Internal Loop (PV)*	LPxx.Precision or LPxx.PV.Precision	01-02	Short , Word, Byte	Read Only
Precision of Internal Loop SP*	LPxx.SP.Precision	01-02	Short , Word, Byte	Read Only
Precision of Internal Loop OUT*	LPxx.OUT.Precision	01-02	Short , Word, Byte	Read Only
Proportional band value of Internal Loop for current PID number	LPxx.PID.P	01-02	Double , Float	Read/Write
Proportional band value of Internal Loop for specified PID number	LPxx.PID.P.n	xx=01-02 n=1-8	Double , Float	Read/Write
Integral time value of Internal Loop for current PID number	LPxx.PID.I	01-02	Double , Float	Read/Write
Integral time value of Internal Loop for specified PID number	LPxx.PID.I.n	xx=01-02 n=1-8	Double , Float	Read/Write
Derivative time value of Internal Loop for current PID number	LPxx.PID.D	01-02	Double , Float	Read/Write
Derivative time value of Internal Loop for specified PID number	LPxx.PID.D.n	xx=01-02 n=1-8	Double , Float	Read/Write
Current PID number for Internal Loop	LPxx.PID.Num	01-02	Short , Word, Byte	Read Only
Set and Read Run/Stop (0=Stop, 1=Run)	LPxx.RUN	01-02	Short , Word, Byte	Read/Write

Address Type	Format	Range	Data Types	Access
Set and Read Remote/Local (0=Local, 1=Remote)	LPxx.Remote	01-02	Short , Word, Byte	Read/Write
Set and Read auto/manual/cascade (0=Auto, 1=Manual, 2=Cascade)	LPxx.Mode	01-02	Short , Word, Byte	Read/Write
Lowest Internal Loop Number*	LP.Low		Short , Word, Byte	Read Only
Highest Internal Loop Number*	LP.High		Short , Word, Byte	Read Only
Ramp Up Rate**	LPxx.RUR xx=loop number	01-02	Double , Float	Read/Write
Ramp Down Rate**	LPxx.RDR xx=loop number	01-02	Double , Float	Read/Write

External Loops

Address Type	Format	Range	Data Types	Access
Process Value of External Loop	LPExx or LPExx.PV	01-04	Double , Float	Read Only
Setpoint Value of External Loop	LPExx.SP	01-04	Double , Float	Read/Write
Output Value of External Loop	LPExx.OUT	01-04	Double , Float	Read/Write
Alarm Summary of External Loop	LPExx.Alarm	01-04	DWord , Short, Word, Byte	Read Only
Alarm Level1 Status of External Loop	LPExx.Alarm1	01-04	Short , Word, Byte	Read Only
Alarm Level2 Status of External Loop	LPExx.Alarm2	01-04	Short , Word, Byte	Read Only
Alarm Level3 Status of External Loop	LPExx.Alarm3	01-04	Short , Word, Byte	Read Only
Alarm Level4 Status of External Loop	LPExx.Alarm4	01-04	Short , Word, Byte	Read Only
Upper Scale Value of External Loop*	LPExx.scale_Hi	01-04	Double , Float	Read Only
Lower Scale Value of External Loop*	LPExx.scale_Lo	01-04	Double , Float	Read Only
Unit String of External Loop (PV)*	LPExx.unit or LPExx.PV.unit	01-04	String	Read Only
Unit String of External Loop SP*	LPExx.SP.unit	01-04	String	Read Only
Unit String of External Loop OUT*	LPExx.OUT.unit	01-04	String	Read Only

Address Type	Format	Range	Data Types	Access
Tagname of External Loop*	LPExx.tag	01-04	String	Read Only
Tagname of External Loop PV*	LPExx.PV.tag	01-04	String	Read Only
Tagname of External Loop SP*	LPExx.SP.tag	01-04	String	Read Only
Tagname of External Loop OUT*	LPExx.OUT.tag	01-04	String	Read Only
Status of External Loop (PV)*	LPExx.status or LPExx.PV.status	01-04	String	Read Only
Status of External Loop SP*	LPExx.SP.status	01-04	String	Read Only
Status of External Loop OUT*	LPExx.OUT.status	01-04	String	Read Only
Precision of External Loop (PV)*	LPExx.Precision or LPExx.PV.Precision	01-04	Short , Word, Byte	Read Only
Precision of External Loop*	LPExx.SP.Precision	01-04	Short , Word, Byte	Read Only
Precision of External Loop*	LPExx.OUT.Precision	01-04	Short , Word, Byte	Read Only
Set and Read auto/- manual/cascade (0=Auto, 1=Manual, 2=Cascade)	LPExx.MODE	01-02	Short , Word, Byte	Read/Write
Lowest External Loop Number*	LPE.Low		Short , Word, Byte	Read Only
Highest External Loop Number*	LPE.High		Short , Word, Byte	Read Only

Math Channels

Address Type	Format	Range	Data Types	Access
Process Value of Math Channel	CHxx or CHxx.PV	31-42	Double , Float	Read Only
Alarm Summary of Math Channel	CHxx.Alarm	31-42	DWord , Short, Word, Byte	Read Only
Alarm Level1 Status of Math Channel	CHxx.Alarm1	31-42	Short , Word, Byte	Read Only
Alarm Level2 Status of Math Channel	CHxx.Alarm2	31-42	Short , Word, Byte	Read Only
Alarm Level3 Status of Math Channel	CHxx.Alarm3	31-42	Short , Word, Byte	Read Only
Alarm Level4 Status of Math Channel	CHxx.Alarm4	31-42	Short , Word, Byte	Read Only
Set and Read Level1 Alarm Setpoint	CHxx.ASP1	31-42	Double , Float	Read/Write
Set and Read Level2 Alarm Setpoint	CHxx.ASP2	31-42	Double , Float	Read/Write
Set and Read Level3 Alarm Setpoint	CHxx.ASP3	31-42	Double , Float	Read/Write
Set and Read Level4 Alarm Setpoint	CHxx.ASP4	31-42	Double , Float	Read/Write

Address Type	Format	Range	Data Types	Access
Upper Scale Value of Math Channel*	CHxx.scale_Hi	31-42	Double , Float	Read Only
Lower Scale Value of Math Channel*	CHxx.scale_Lo	31-42	Double , Float	Read Only
Unit String of Math Channel*	CHxx.unit	31-42	String	Read Only
Tagname of Math Channel*	CHxx.tag	31-42	String	Read Only
Status of Math Channel*	CHxx.status	31-42	String	Read Only
Precision of Math Channel*	CHxx.Precision	31-42	Short , Word, Byte	Read Only
Lowest Math Channel*	CHA.Low		Short , Word, Byte	Read Only
Highest Math Channel*	CHA.High		Short , Word, Byte	Read Only

*The data associated with these addresses is only read from the device at the start of a communications session. Once read, the values will not be refreshed until the server has been restarted or the Reset Tag has been invoked. To invoke a reset, write a non-zero value to the Reset Tag. Once the Reset Tag has been invoked, the driver will reinitialize all startup data from the device.

**Zero (0) can be written to the tag to disable the ramp parameters. When a 0 is written to the tag, the tag will display +1.inf upon successful disabling.

DI/DO DATA and Internal Switch Status (Style Number S3 or Later)

Address Type	Format	Range	Data Types	Access
Control Digital Inputs	DI	DI001-DI006	Boolean	Read Only
Control Digital Outputs	DO	DO001-DO006	Boolean	Read/Write
Internal Switches	SW	SW001-SW018	Boolean	Read/Write

Alarm Setpoints

Data associated with the addresses denoted in the device will be returned as +INF. Data values can only be written to Alarm Setpoints that are defined in the device: write operations to undefined Alarm Setpoints will return an error. Write operations are available only for users logged in at the Administrator level and will return an error otherwise.

Scales

Data values for Scale_Hi and Scale_Lo for channels that are skipped will be returned as +INF.

Tag Names

For devices that have unspecified tag names, the driver will construct an internal tag name based on the channel number. For example, the tag name of address 'CH01' will be returned as 'CH01'.

General Device Data

Address Type	Format	Range	Data Types	Access
Administrator Level	Admin		Boolean	Read Only
Date of Last Data	Date		String	Read Only
Time of Last Data	Time		String	Read Only
Model Name of Device	Model		String	Read Only

Address Type	Format	Range	Data Types	Access
Host Name of Device	Hostname		String	Read Only
Serial Number of Device	SerialNumber		String	Read Only
IP Address of Device	IP		String	Read Only
Math Communication Data	CDxx	01-12	Float	Write Only
Control Math Execution	MathControl		Short , Word, Byte	Write Only
Reset Alarms	AlarmReset		Boolean	Write Only
Control Command and Response	Command		String	Read/Write
Previous Screen	PreScreen		Boolean	Write Only
Direct Reloading of Configuration	Reset		Boolean	Write Only
SetTime*	Tag		Boolean	Write Only

*The SetTime tag will cause the device time to be updated. Writing 0 or 1 to the tag will update the Device Date and Time, which can be verified from the Date tag and the Time tag. The SetTime tag will always display 0 as it is a Write Only tag. After a successful update, the following message will be posted: "Device Clock set to system time [Device <device_name>]."

Administrator Level

The Admin address type has a value of '1' or 'true' when the user has logged on at the Administrator level and a value of '0' or 'false' when the user has logged on at the User level.

Math Communication Data

The CD address type is only valid for devices equipped with the math option. Write operations to CD addresses for non-math equipped devices will return an error. Write operations are available only for users logged in at the Administrator level and will return an error otherwise.

Model Name of Device

The Model address type will have a string value of 'CX1000' or 'CX2000,' indicating the model series returned by the device.

Control Math Execution

The MathControl address type is only available for devices equipped with the math option. Write operations to the MathControl tag for non-math equipped devices will return an error.

Control Command and Response

The Command address allows the user to send a string command and receive a string response to and from the device. This allows the user to send any command to the device, including commands not directly supported by the driver. This tag is only available to users logged in at the Administrator level. Otherwise, write operations will return an error.

🔴 Use caution when performing write operations using the Command address.

🔴 **Note:** The actual number of addresses available for each type depends on the configuration of the Yokogawa device. If the driver finds that an address is not present in the device at Runtime, it will post an error message and remove the tag from its scan list.

Addresses that have Write Only access are assigned a default access of Read/Write; however, data values are unreadable for these addresses and the associated tags are not included in the scan list. The current data value for these tags will always be 0 for numeric data types and null string for string data types.

CX2010 Addressing

The driver supports the following addresses for this device. The default data type for each address type is shown in **bold**.

Measured Channels

Address Type	Format	Range	Data Types	Access
Process Value of Channel	CHxx or CHxx.PV	01-10	Double , Float	Read Only
Alarm Summary of Channel	CHxx.Alarm	01-10	DWord , Short, Word, Byte	Read Only
Alarm Level1 Status of Channel	CHxx.Alarm1	01-10	Short , Word, Byte	Read Only
Alarm Level2 Status of Channel	CHxx.Alarm2	01-10	Short , Word, Byte	Read Only
Alarm Level3 Status of Channel	CHxx.Alarm3	01-10	Short , Word, Byte	Read Only
Alarm Level4 Status of Channel	CHxx.Alarm4	01-10	Short , Word, Byte	Read Only
Set and Read Level1 Alarm Setpoint	CHxx.ASP1	01-10	Double , Float	Read/Write
Set and Read Level2 Alarm Setpoint	CHxx.ASP2	01-10	Double , Float	Read/Write
Set and Read Level3 Alarm Setpoint	CHxx.ASP3	01-10	Double , Float	Read/Write
Set and Read Level4 Alarm Setpoint	CHxx.ASP4	01-10	Double , Float	Read/Write
Upper Scale Value of Channel*	CHxx.scale_Hi	01-10	Double , Float	Read Only
Lower Scale Value of Channel*	CHxx.scale_Lo	01-10	Double , Float	Read Only
Unit String of Channel*	CHxx.unit	01-10	String	Read Only
Tagname of Channel*	CHxx.tag	01-10	String	Read Only
Status of Channel*	CHxx.status	01-10	String	Read Only
Precision of Channel*	CHxx.Precision	01-10	Short , Word, Byte	Read Only
Lowest Measuring Channel*	CH.Low		Short , Word, Byte	Read Only
Highest Measuring Channel*	CH.High		Short , Word, Byte	Read Only

External Loops

Address Type	Format	Range	Data Types	Access
Process Value of External Loop	LPExx or LPExx.PV	01-16	Double , Float	Read Only
Setpoint Value of External Loop	LPExx.SP	01-16	Double , Float	Read/Write
Output Value of External Loop	LPExx.OUT	01-16	Double , Float	Read/Write
Alarm Summary of External Loop	LPExx.Alarm	01-16	DWord , Short, Word, Byte	Read Only
Alarm Level1 Status of External Loop	LPExx.Alarm1	01-16	Short , Word, Byte	Read Only

Address Type	Format	Range	Data Types	Access
Alarm Level2 Status of External Loop	LPExx.Alarm2	01-16	Short , Word, Byte	Read Only
Alarm Level3 Status of External Loop	LPExx.Alarm3	01-16	Short , Word, Byte	Read Only
Alarm Level4 Status of External Loop	LPExx.Alarm4	01-16	Short , Word, Byte	Read Only
Upper Scale Value of External Loop*	LPExx.scale_Hi	01-16	Double , Float	Read Only
Lower Scale Value of External Loop*	LPExx.scale_Lo	01-16	Double , Float	Read Only
Unit String of External Loop (PV)*	LPExx.unit or LPExx.PV.unit	01-16	String	Read Only
Unit String of External Loop SP*	LPExx.SP.unit	01-16	String	Read Only
Unit String of External Loop OUT*	LPExx.OUT.unit	01-16	String	Read Only
Tagname of External Loop*	LPExx.tag	01-16	String	Read Only
Tagname of External Loop PV*	LPExx.PV.tag	01-16	String	Read Only
Tagname of External Loop SP*	LPExx.SP.tag	01-16	String	Read Only
Tagname of External Loop OUT*	LPExx.OUT.tag	01-16	String	Read Only
Status of External Loop (PV)*	LPExx.status or LPExx.PV.status	01-16	String	Read Only
Status of External Loop SP*	LPExx.SP.status	01-16	String	Read Only
Status of External Loop OUT*	LPExx.OUT.status	01-16	String	Read Only
Precision of External Loop (PV)*	LPExx.Precision or LPExx.PV.Precision	01-16	Short , Word, Byte	Read Only
Precision of External Loop*	LPExx.SP.Precision	01-16	Short , Word, Byte	Read Only
Precision of External Loop*	LPExx.OUT.Precision	01-16	Short , Word, Byte	Read Only
Lowest External Loop Number*	LPE.Low		Short , Word, Byte	Read Only
Highest External Loop Number*	LPE.High		Short , Word, Byte	Read Only

Math Channels

Address Type	Format	Range	Data Types	Access
Process Value of Math Channel	CHxx or CHxx.PV	31-60	Double , Float	Read Only
Alarm Summary of Math Channel	CHxx.Alarm	31-60	DWord , Short, Word, Byte	Read Only

Address Type	Format	Range	Data Types	Access
Alarm Level1 Status of Math Channel	CHxx.Alarm1	31-60	Short , Word, Byte	Read Only
Alarm Level2 Status of Math Channel	CHxx.Alarm2	31-60	Short , Word, Byte	Read Only
Alarm Level3 Status of Math Channel	CHxx.Alarm3	31-60	Short , Word, Byte	Read Only
Alarm Level4 Status of Math Channel	CHxx.Alarm4	31-60	Short , Word, Byte	Read Only
Set and Read Level1 Alarm Setpoint	CHxx.ASP1	31-60	Double , Float	Read/Write
Set and Read Level2 Alarm Setpoint	CHxx.ASP2	31-60	Double , Float	Read/Write
Set and Read Level3 Alarm Setpoint	CHxx.ASP3	31-60	Double , Float	Read/Write
Set and Read Level4 Alarm Setpoint	CHxx.ASP4	31-60	Double , Float	Read/Write
Upper Scale Value of Math Channel*	CHxx.scale_Hi	31-60	Double , Float	Read Only
Lower Scale Value of Math Channel*	CHxx.scale_Lo	31-60	Double , Float	Read Only
Unit String of Math Channel*	CHxx.unit	31-60	String	Read Only
Tagname of Math Channel*	CHxx.tag	31-60	String	Read Only
Status of Math Channel*	CHxx.status	31-60	String	Read Only
Precision of Math Channel*	CHxx.Precision	31-60	Short , Word, Byte	Read Only
Lowest Math Channel*	CHA.Low		Short , Word, Byte	Read Only
Highest Math Channel*	CHA.High		Short , Word, Byte	Read Only

*The data associated with these addresses is only read from the device at the start of a communications session. Once read, the values will not be refreshed until the server has been restarted or the Reset Tag has been invoked. To invoke a reset, write a non zero value to the Reset Tag. Once the Reset Tag has been invoked, the driver will reinitialize all startup data from the device.

DI/DO DATA and Internal Switch Status (Style Number S3 or Later)

Address Type	Format	Range	Data Types	Access
Control Digital Inputs	DI	DI001-DI006	Boolean	Read Only
Control Digital Outputs	DO	DO001-DO006	Boolean	Read/Write
Expansion Digital Inputs	RI	RI001-RI012	Boolean	Read/Write
Expansion Digital Outputs	Read Only	RO001-RO012	Boolean	Read/Write
Internal Switches	SW	SW001-SW036	Boolean	Read/Write

Alarm Setpoints

Data associated with the addresses denoted in the device will be returned as +INF. Data values can only be written to Alarm Setpoints that are defined in the device: write operations to undefined Alarm Setpoints will return an error. Write operations are available only for users logged in at the Administrator level and will return an error otherwise.

Scales

Data values for Scale_Hi and Scale_Lo for channels that are skipped will be returned as +INF.

Tag Names

For devices that have unspecified tag names, the driver will construct an internal tag name based on the channel number. For example, the tag name of address 'CH01' will be returned as 'CH01'.

General Device Data

Address Type	Format	Range	Data Types	Access
Administrator Level	Admin		Boolean	Read Only
Date of Last Data	Date		String	Read Only
Time of Last Data	Time		String	Read Only
Model Name of Device	Model		String	Read Only
Host Name of Device	Hostname		String	Read Only
Serial Number of Device	SerialNumber		String	Read Only
IP Address of Device	IP		String	Read Only
Math Communication Data	CDxx	01-30	Float	Write Only
Control Math Execution	MathControl		Short, Word, Byte	Write Only
Reset Alarms	AlarmReset		Boolean	Write Only
Control Command and Response	Command		String	Read/Write
Previous Screen	PreScreen		Boolean	Write Only
Direct Reloading of Configuration	Reset		Boolean	Write Only
SetTime*	Tag		Boolean	Write Only

*The SetTime tag will cause the device time to be updated. Writing 0 or 1 to the tag will update the Device Date and Time, which can be verified from the Date tag and the Time tag. The SetTime tag will always display 0 as it is a Write Only tag. After a successful update, the following message will be posted: "Device Clock set to system time [Device <device_name>]."

Administrator Level

The Admin address type has a value of '1' or 'true' when the user has logged on at the Administrator level and a value of '0' or 'false' when the user has logged on at the User level.

Math Communication Data

The CD address type is only valid for devices equipped with the math option. Write operations to CD addresses for non-math equipped devices will return an error. Write operations are available only for users logged in at the Administrator level and will return an error otherwise.

Model Name of Device

The Model address type will have a string value of 'CX1000' or 'CX2000,' indicating the model series returned by the device.

Control Math Execution

The MathControl address type is only available for devices equipped with the math option. Write operations to the MathControl tag for non-math equipped devices will return an error.

Control Command and Response

The Command address allows the user to send a string command and receive a string response to and from the device. This allows the user to send any command to the device, including commands not directly supported by the driver. This tag is only available to users logged in at the Administrator level. Otherwise, write operations will return an error.

● Use caution when performing write operations using the Command address.

● **Note:** The actual number of addresses available for each type depends on the configuration of the Yokogawa device. If the driver finds that an address is not present in the device at Runtime, it will post an error message and remove the tag from its scan list.

Addresses that have Write Only access are assigned a default access of Read/Write; however, data values are unreadable for these addresses and the associated tags are not included in the scan list. The current data value for these tags will always be 0 for numeric data types and null string for string data types.

CX2020 Addressing

The driver supports the following addresses for this device. The default data type for each address type is shown in **bold**.

Measured Channels

Address Type	Format	Range	Data Types	Access
Process Value of Channel	CHxx or CHxx.PV	01-20	Double , Float	Read Only
Alarm Summary of Channel	CHxx.Alarm	01-20	DWord , Short, Word, Byte	Read Only
Alarm Level1 Status of Channel	CHxx.Alarm1	01-20	Short , Word, Byte	Read Only
Alarm Level2 Status of Channel	CHxx.Alarm2	01-20	Short , Word, Byte	Read Only
Alarm Level3 Status of Channel	CHxx.Alarm3	01-20	Short , Word, Byte	Read Only
Alarm Level4 Status of Channel	CHxx.Alarm4	01-20	Short , Word, Byte	Read Only
Set and Read Level1 Alarm Setpoint	CHxx.ASP1	01-20	Double , Float	Read/Write
Set and Read Level2 Alarm Setpoint	CHxx.ASP2	01-20	Double , Float	Read/Write
Set and Read Level3 Alarm Setpoint	CHxx.ASP3	01-20	Double , Float	Read/Write
Set and Read Level4 Alarm Setpoint	CHxx.ASP4	01-20	Double , Float	Read/Write
Upper Scale Value of Channel*	CHxx.scale_Hi	01-20	Double , Float	Read Only
Lower Scale Value of Channel*	CHxx.scale_Lo	01-20	Double , Float	Read Only
Unit String of Channel*	CHxx.unit	01-20	String	Read Only
Tagname of Channel*	CHxx.tag	01-20	String	Read Only
Status of Channel*	CHxx.status	01-20	String	Read Only
Precision of Channel*	CHxx.Precision	01-20	Short , Word, Byte	Read Only
Lowest Measuring Channel*	CH.Low		Short , Word, Byte	Read Only
Highest Measuring Channel*	CH.High		Short , Word, Byte	Read Only

External Loops

Address Type	Format	Range	Data Types	Access
Process Value of External	LPExx or LPExx.PV	01-16	Double , Float	Read Only

Address Type	Format	Range	Data Types	Access
Loop				
Setpoint Value of External Loop	LPExx.SP	01-16	Double , Float	Read/Write
Output Value of External Loop	LPExx.OUT	01-16	Double , Float	Read/Write
Alarm Summary of External Loop	LPExx.Alarm	01-16	DWord , Short, Word, Byte	Read Only
Alarm Level1 Status of External Loop	LPExx.Alarm1	01-16	Short , Word, Byte	Read Only
Alarm Level2 Status of External Loop	LPExx.Alarm2	01-16	Short , Word, Byte	Read Only
Alarm Level3 Status of External Loop	LPExx.Alarm3	01-16	Short , Word, Byte	Read Only
Alarm Level4 Status of External Loop	LPExx.Alarm4	01-16	Short , Word, Byte	Read Only
Upper Scale Value of External Loop*	LPExx.scale_Hi	01-16	Double , Float	Read Only
Lower Scale Value of External Loop*	LPExx.scale_Lo	01-16	Double , Float	Read Only
Unit String of External Loop (PV)*	LPExx.unit or LPExx.PV.unit	01-16	String	Read Only
Unit String of External Loop SP*	LPExx.SP.unit	01-16	String	Read Only
Unit String of External Loop OUT*	LPExx.OUT.unit	01-16	String	Read Only
Tagname of External Loop*	LPExx.tag	01-16	String	Read Only
Tagname of External Loop PV*	LPExx.PV.tag	01-16	String	Read Only
Tagname of External Loop SP*	LPExx.SP.tag	01-16	String	Read Only
Tagname of External Loop OUT*	LPExx.OUT.tag	01-16	String	Read Only
Status of External Loop (PV)*	LPExx.status or LPExx.PV.status	01-16	String	Read Only
Status of External Loop SP*	LPExx.SP.status	01-16	String	Read Only
Status of External Loop OUT*	LPExx.OUT.status	01-16	String	Read Only
Precision of External Loop (PV)*	LPExx.Precision or LPExx.PV.Precision	01-16	Short , Word, Byte	Read Only
Precision of External Loop*	LPExx.SP.Precision	01-16	Short , Word, Byte	Read Only
Precision of External Loop*	LPExx.OUT.Precision	01-16	Short , Word, Byte	Read Only
Lowest External Loop Number*	LPE.Low		Short , Word, Byte	Read Only

Address Type	Format	Range	Data Types	Access
Highest External Loop Number*	LPE.High		Short , Word, Byte	Read Only

Math Channels

Address Type	Format	Range	Data Types	Access
Process Value of Math Channel	CHxx or CHxx.PV	31-60	Double , Float	Read Only
Alarm Summary of Math Channel	CHxx.Alarm	31-60	DWord , Short, Word, Byte	Read Only
Alarm Level1 Status of Math Channel	CHxx.Alarm1	31-60	Short , Word, Byte	Read Only
Alarm Level2 Status of Math Channel	CHxx.Alarm2	31-60	Short , Word, Byte	Read Only
Alarm Level3 Status of Math Channel	CHxx.Alarm3	31-60	Short , Word, Byte	Read Only
Alarm Level4 Status of Math Channel	CHxx.Alarm4	31-60	Short , Word, Byte	Read Only
Set and Read Level1 Alarm Setpoint	CHxx.ASP1	31-60	Double , Float	Read/Write
Set and Read Level2 Alarm Setpoint	CHxx.ASP2	31-60	Double , Float	Read/Write
Set and Read Level3 Alarm Setpoint	CHxx.ASP3	31-60	Double , Float	Read/Write
Set and Read Level4 Alarm Setpoint	CHxx.ASP4	31-60	Double , Float	Read/Write
Upper Scale Value of Math Channel*	CHxx.scale_Hi	31-60	Double , Float	Read Only
Lower Scale Value of Math Channel*	CHxx.scale_Lo	31-60	Double , Float	Read Only
Unit String of Math Channel*	CHxx.unit	31-60	String	Read Only
Tagname of Math Channel*	CHxx.tag	31-60	String	Read Only
Status of Math Channel*	CHxx.status	31-60	String	Read Only
Precision of Math Channel*	CHxx.Precision	31-60	Short , Word, Byte	Read Only
Lowest Math Channel*	CHA.Low		Short , Word, Byte	Read Only
Highest Math Channel*	CHA.High		Short , Word, Byte	Read Only

*The data associated with these addresses is only read from the device at the start of a communications session. Once read, the values will not be refreshed until the server has been restarted or the Reset Tag has been invoked. To invoke a reset, write a non zero value to the Reset Tag. Once the Reset Tag has been invoked, the driver will reinitialize all startup data from the device.

DI/DO DATA and Internal Switch Status (Style Number S3 or Later)

Address Type	Format	Range	Data Types	Access
Control Digital Inputs	DI	DI001-DI006	Boolean	Read Only
Control Digital Outputs	DO	DO001-DO006	Boolean	Read/Write
Expansion Digital Inputs	RI	RI001-RI012	Boolean	Read/Write
Expansion Digital Outputs	Read Only	RO001-RO012	Boolean	Read/Write

Address Type	Format	Range	Data Types	Access
Internal Switches	SW	SW001-SW036	Boolean	Read/Write

Alarm Setpoints

Data associated with the addresses denoted in the device will be returned as +INF. Data values can only be written to Alarm Setpoints that are defined in the device: write operations to undefined Alarm Setpoints will return an error. Write operations are available only for users logged in at the Administrator level and will return an error otherwise.

Scales

Data values for Scale_Hi and Scale_Lo for channels that are skipped will be returned as +INF.

Tag Names

For devices that have unspecified tag names, the driver will construct an internal tag name based on the channel number. For example, the tag name of address 'CH01' will be returned as 'CH01'.

General Device Data

Address Type	Format	Range	Data Types	Access
Administrator Level	Admin		Boolean	Read Only
Date of Last Data	Date		String	Read Only
Time of Last Data	Time		String	Read Only
Model Name of Device	Model		String	Read Only
Host Name of Device	Hostname		String	Read Only
Serial Number of Device	SerialNumber		String	Read Only
IP Address of Device	IP		String	Read Only
Math Communication Data	CDxx	01-30	Float	Write Only
Control Math Execution	MathControl		Short, Word, Byte	Write Only
Reset Alarms	AlarmReset		Boolean	Write Only
Control Command and Response	Command		String	Read/Write
Previous Screen	PreScreen		Boolean	Write Only
Direct Reloading of Configuration	Reset		Boolean	Write Only
SetTime*	Tag		Boolean	Write Only

*The SetTime tag will cause the device time to be updated. Writing 0 or 1 to the tag will update the Device Date and Time, which can be verified from the Date tag and the Time tag. The SetTime tag will always display 0 as it is a Write Only tag. After a successful update, the following message will be posted: "Device Clock set to system time [Device <device_name>]."

Administrator Level

The Admin address type has a value of '1' or 'true' when the user has logged on at the Administrator level and a value of '0' or 'false' when the user has logged on at the User level.

Math Communication Data

The CD address type is only valid for devices equipped with the math option. Write operations to CD addresses for non-math equipped devices will return an error. Write operations are available only for users logged in at the Administrator level and will return an error otherwise.

Model Name of Device

The Model address type will have a string value of 'CX1000' or 'CX2000,' indicating the model series returned by the device.

Control Math Execution

The MathControl address type is only available for devices equipped with the math option. Write operations to the MathControl tag for non-math equipped devices will return an error.

Control Command and Response

The Command address allows the user to send a string command and receive a string response to and from the device. This allows the user to send any command to the device, including commands not directly supported by the driver. This tag is only available to users logged in at the Administrator level. Otherwise, write operations will return an error.

🔴 Use caution when performing write operations using the Command address.

🔴 **Note:** The actual number of addresses available for each type depends on the configuration of the Yokogawa device. If the driver finds that an address is not present in the device at Runtime, it will post an error message and remove the tag from its scan list.

Addresses that have Write Only access are assigned a default access of Read/Write; however, data values are unreadable for these addresses and the associated tags are not included in the scan list. The current data value for these tags will always be 0 for numeric data types and null string for string data types.

CX2210 Addressing

The driver supports the following addresses for this device. The default data type for each address type is shown in **bold**.

Measured Channels

Address Type	Format	Range	Data Types	Access
Process Value of Channel	CHxx or CHxx.PV	01-10	Double , Float	Read Only
Alarm Summary of Channel	CHxx.Alarm	01-10	DWord , Short, Word, Byte	Read Only
Alarm Level1 Status of Channel	CHxx.Alarm1	01-10	Short , Word, Byte	Read Only
Alarm Level2 Status of Channel	CHxx.Alarm2	01-10	Short , Word, Byte	Read Only
Alarm Level3 Status of Channel	CHxx.Alarm3	01-10	Short , Word, Byte	Read Only
Alarm Level4 Status of Channel	CHxx.Alarm4	01-10	Short , Word, Byte	Read Only
Set and Read Level1 Alarm Setpoint	CHxx.ASP1	01-10	Double , Float	Read/Write
Set and Read Level2 Alarm Setpoint	CHxx.ASP2	01-10	Double , Float	Read/Write
Set and Read Level3 Alarm Setpoint	CHxx.ASP3	01-10	Double , Float	Read/Write
Set and Read Level4 Alarm Setpoint	CHxx.ASP4	01-10	Double , Float	Read/Write
Upper Scale Value of Channel*	CHxx.scale_Hi	01-10	Double , Float	Read Only
Lower Scale Value of Channel*	CHxx.scale_Lo	01-10	Double , Float	Read Only
Unit String of Channel*	CHxx.unit	01-10	String	Read Only

Address Type	Format	Range	Data Types	Access
Tagname of Channel*	CHxx.tag	01-10	String	Read Only
Status of Channel*	CHxx.status	01-10	String	Read Only
Precision of Channel*	CHxx.Precision	01-10	Short , Word, Byte	Read Only
Lowest Measuring Channel*	CH.Low		Short , Word, Byte	Read Only
Highest Measuring Channel*	CH.High		Short , Word, Byte	Read Only

Internal Loops

Address Type	Format	Range	Data Types	Access
Process Value of Internal Loop	LPxx or LPxx.PV	01-02	Double , Float	Read Only
Setpoint Value of Internal Loop for current SP number	LPxx.SP	01-02	Double , Float	Read/Write
Setpoint Value of Internal Loop for specified SP number	LPxx.SP.n	xx=01-02 n=1-8	Double , Float	Read/Write
Current SP number for Internal Loop	LPxx.SP.Num	01-02	Short , Word	Read/Write
Output Value of Internal Loop	LPxx.OUT	01-02	Double , Float	Read/Write
Alarm Summary of Internal Loop	LPxx.Alarm	01-02	DWord , Short, Word, Byte	Read Only
Alarm Level1 Status of Internal Loop	LPxx.Alarm1	01-02	Short , Word, Byte	Read Only
Alarm Level2 Status of Internal Loop	LPxx.Alarm2	01-02	Short , Word, Byte	Read Only
Alarm Level3 Status of Internal Loop	LPxx.Alarm3	01-02	Short , Word, Byte	Read Only
Alarm Level4 Status of Internal Loop	LPxx.Alarm4	01-02	Short , Word, Byte	Read Only
Set and Read Level1 Alarm Setpoint	LPxx.ASP1	01-02	Double , Float	Read/Write
Set and Read Level2 Alarm Setpoint	LPxx.ASP2	01-02	Double , Float	Read/Write
Set and Read Level3 Alarm Setpoint	LPxx.ASP3	01-02	Double , Float	Read/Write
Set and Read Level4 Alarm Setpoint	LPxx.ASP4	01-02	Double , Float	Read/Write
Set and Read Level1 Alarm Setpoint of specified PID#	LPxx.ASP1.n	xx=01-02 n=1-8	Double , Float	Read/Write
Set and Read Level2 Alarm Setpoint of specified PID#	LPxx.ASP2.n	xx=01-02 n=1-8	Double , Float	Read/Write
Set and Read Level3 Alarm Setpoint of specified PID#	LPxx.ASP3.n	xx=01-02 n=1-8	Double , Float	Read/Write

Address Type	Format	Range	Data Types	Access
Set and Read Level4 Alarm Setpoint of specified PID#	LPxx.ASP4.n	xx=01-02 n=1-8	Double , Float	Read/Write
Upper Scale Value of Internal Loop*	LPxx.scale_Hi	01-02	Double , Float	Read Only
Lower Scale Value of Internal Loop*	LPxx.scale_Lo	01-02	Double , Float	Read Only
Unit String of Internal Loop (PV)*	LPxx.unit or LPxx.PV.unit	01-02	String	Read Only
Unit String of Internal Loop SP*	LPxx.SP.unit	01-02	String	Read Only
Unit String of Internal Loop OUT*	LPxx.OUT.unit	01-02	String	Read Only
Tagname of Internal Loop*	LPxx.tag	01-02	String	Read Only
Tagname of Internal Loop PV*	LPxx.PV.tag	01-02	String	Read Only
Tagname of Internal Loop SP*	LPxx.SP.tag	01-02	String	Read Only
Tagname of Internal Loop OUT*	LPxx.OUT.tag	01-02	String	Read Only
Status of Internal Loop (PV)*	LPxx.status or LPxx.PV.status	01-02	String	Read Only
Status of Internal Loop SP*	LPxx.SP.status	01-02	String	Read Only
Status of Internal Loop OUT*	LPxx.OUT.status	01-02	String	Read Only
Precision of Internal Loop (PV)*	LPxx.Precision or LPxx.PV.Precision	01-02	Short , Word, Byte	Read Only
Precision of Internal Loop SP*	LPxx.SP.Precision	01-02	Short , Word, Byte	Read Only
Precision of Internal Loop OUT*	LPxx.OUT.Precision	01-02	Short , Word, Byte	Read Only
Proportional band value of Internal Loop for current PID number	LPxx.PID.P	01-02	Double , Float	Read/Write
Proportional band value of Internal Loop for specified PID number	LPxx.PID.P.n	xx=01-02 n=1-8	Double , Float	Read/Write
Integral time value of Internal Loop for current PID number	LPxx.PID.I	01-02	Double , Float	Read/Write
Integral time value of Internal Loop for specified PID number	LPxx.PID.I.n	xx=01-02 n=1-8	Double , Float	Read/Write
Derivative time value of Internal Loop for current PID number	LPxx.PID.D	01-02	Double , Float	Read/Write
Derivative time value of Internal Loop for specified PID number	LPxx.PID.D.n	xx=01-02 n=1-8	Double , Float	Read/Write
Current PID number for Internal Loop	LPxx.PID.Num	01-02	Short , Word, Byte	Read Only

Address Type	Format	Range	Data Types	Access
Set and Read Run/Stop (0=Stop, 1=Run)	LPxx.RUN	01-02	Short , Word, Byte	Read/Write
Set and Read Remote/Local (0=Local, 1=Remote)	LPxx.Remote	01-02	Short , Word, Byte	Read/Write
Set and Read auto/manual/cascade (0=Auto, 1=Manual, 2=Cascade)	LPxx.Mode	01-02	Short , Word, Byte	Read/Write
Lowest Internal Loop Number*	LP.Low		Short , Word, Byte	Read Only
Highest Internal Loop Number*	LP.High		Short , Word, Byte	Read Only
Ramp Up Rate**	LPxx.RUR xx=loop number	01-02	Double , Float	Read/Write
Ramp Down Rate**	LPxx.RDR xx=loop number	01-02	Double , Float	Read/Write

External Loops

Address Type	Format	Range	Data Types	Access
Process Value of External Loop	LPExx or LPExx.PV	01-16	Double , Float	Read Only
Setpoint Value of External Loop	LPExx.SP	01-16	Double , Float	Read/Write
Output Value of External Loop	LPExx.OUT	01-16	Double , Float	Read/Write
Alarm Summary of External Loop	LPExx.Alarm	01-16	DWord , Short, Word, Byte	Read Only
Alarm Level1 Status of External Loop	LPExx.Alarm1	01-16	Short , Word, Byte	Read Only
Alarm Level2 Status of External Loop	LPExx.Alarm2	01-16	Short , Word, Byte	Read Only
Alarm Level3 Status of External Loop	LPExx.Alarm3	01-16	Short , Word, Byte	Read Only
Alarm Level4 Status of External Loop	LPExx.Alarm4	01-16	Short , Word, Byte	Read Only
Upper Scale Value of External Loop*	LPExx.scale_Hi	01-16	Double , Float	Read Only
Lower Scale Value of External Loop*	LPExx.scale_Lo	01-16	Double , Float	Read Only
Unit String of External Loop (PV)*	LPExx.unit or LPExx.PV.unit	01-16	String	Read Only
Unit String of External Loop SP*	LPExx.SP.unit	01-16	String	Read Only
Unit String of External Loop	LPExx.OUT.unit	01-16	String	Read Only

Address Type	Format	Range	Data Types	Access
OUT*				
Tagname of External Loop*	LPExx.tag	01-16	String	Read Only
Tagname of External Loop PV*	LPExx.PV.tag	01-16	String	Read Only
Tagname of External Loop SP*	LPExx.SP.tag	01-16	String	Read Only
Tagname of External Loop OUT*	LPExx.OUT.tag	01-16	String	Read Only
Status of External Loop (PV)*	LPExx.status or LPExx.PV.status	01-16	String	Read Only
Status of External Loop SP*	LPExx.SP.status	01-16	String	Read Only
Status of External Loop OUT*	LPExx.OUT.status	01-16	String	Read Only
Precision of External Loop (PV)*	LPExx.Precision or LPExx.PV.Precision	01-16	Short , Word, Byte	Read Only
Precision of External Loop*	LPExx.SP.Precision	01-16	Short , Word, Byte	Read Only
Precision of External Loop*	LPExx.OUT.Precision	01-16	Short , Word, Byte	Read Only
Set and Read auto/- manual/cascade (0=Auto, 1=Manual, 2=Cascade)	LPExx.MODE	01-02	Short , Word, Byte	Read/Write
Lowest External Loop Number*	LPE.Low		Short , Word, Byte	Read Only
Highest External Loop Number*	LPE.High		Short , Word, Byte	Read Only

Math Channels

Address Type	Format	Range	Data Types	Access
Process Value of Math Channel	CHxx or CHxx.PV	31-60	Double , Float	Read Only
Alarm Summary of Math Channel	CHxx.Alarm	31-60	DWord , Short, Word, Byte	Read Only
Alarm Level1 Status of Math Channel	CHxx.Alarm1	31-60	Short , Word, Byte	Read Only
Alarm Level2 Status of Math Channel	CHxx.Alarm2	31-60	Short , Word, Byte	Read Only
Alarm Level3 Status of Math Channel	CHxx.Alarm3	31-60	Short , Word, Byte	Read Only
Alarm Level4 Status of Math Channel	CHxx.Alarm4	31-60	Short , Word, Byte	Read Only
Set and Read Level1 Alarm Setpoint	CHxx.ASP1	31-60	Double , Float	Read/Write
Set and Read Level2 Alarm Setpoint	CHxx.ASP2	31-60	Double , Float	Read/Write
Set and Read Level3 Alarm Setpoint	CHxx.ASP3	31-60	Double , Float	Read/Write

Address Type	Format	Range	Data Types	Access
Set and Read Level4 Alarm Setpoint	CHxx.ASP4	31-60	Double , Float	Read/Write
Upper Scale Value of Math Channel*	CHxx.scale_Hi	31-60	Double , Float	Read Only
Lower Scale Value of Math Channel*	CHxx.scale_Lo	31-60	Double , Float	Read Only
Unit String of Math Channel*	CHxx.unit	31-60	String	Read Only
Tagname of Math Channel*	CHxx.tag	31-60	String	Read Only
Status of Math Channel*	CHxx.status	31-60	String	Read Only
Precision of Math Channel*	CHxx.Precision	31-60	Short , Word, Byte	Read Only
Lowest Math Channel*	CHA.Low		Short , Word, Byte	Read Only
Highest Math Channel*	CHA.High		Short , Word, Byte	Read Only

*The data associated with these addresses is only read from the device at the start of a communications session. Once read, the values will not be refreshed until the server has been restarted or the Reset Tag has been invoked. To invoke a reset, write a non zero value to the Reset Tag. Once the Reset Tag has been invoked, the driver will reinitialize all startup data from the device.

**Zero (0) can be written to the tag to disable the ramp parameters. When a 0 is written to the tag, the tag will display +1.inf upon successful disabling.

DI/DO DATA and Internal Switch Status (Style Number S3 or Later)

Address Type	Format	Range	Data Types	Access
Control Digital Inputs	DI	DI001-DI006	Boolean	Read Only
Control Digital Outputs	DO	DO001-DO006	Boolean	Read/Write
Expansion Digital Inputs	RI	RI001-RI012	Boolean	Read/Write
Expansion Digital Outputs	Read Only	RO001-RO012	Boolean	Read/Write
Internal Switches	SW	SW001-SW036	Boolean	Read/Write

Alarm Setpoints

Data associated with the addresses denoted in the device will be returned as +INF. Data values can only be written to Alarm Setpoints that are defined in the device: write operations to undefined Alarm Setpoints will return an error. Write operations are available only for users logged in at the Administrator level and will return an error otherwise.

Scales

Data values for Scale_Hi and Scale_Lo for channels that are skipped will be returned as +INF.

Tag Names

For devices that have unspecified tag names, the driver will construct an internal tag name based on the channel number. For example, the tag name of address 'CH01' will be returned as 'CH01'.

General Device Data

Address Type	Format	Range	Data Types	Access
Administrator Level	Admin		Boolean	Read Only

Address Type	Format	Range	Data Types	Access
Date of Last Data	Date		String	Read Only
Time of Last Data	Time		String	Read Only
Model Name of Device	Model		String	Read Only
Host Name of Device	Hostname		String	Read Only
Serial Number of Device	SerialNumber		String	Read Only
IP Address of Device	IP		String	Read Only
Math Communication Data	CDxx	01-30	Float	Write Only
Control Math Execution	MathControl		Short, Word, Byte	Write Only
Reset Alarms	AlarmReset		Boolean	Write Only
Control Command and Response	Command		String	Read/Write
Previous Screen	PreScreen		Boolean	Write Only
Direct Reloading of Configuration	Reset		Boolean	Write Only
SetTime*	Tag		Boolean	Write Only

*The SetTime tag will cause the device time to be updated. Writing 0 or 1 to the tag will update the Device Date and Time, which can be verified from the Date tag and the Time tag. The SetTime tag will always display 0 as it is a Write Only tag. After a successful update, the following message will be posted: "Device Clock set to system time [Device <device_name>]."

Administrator Level

The Admin address type has a value of '1' or 'true' when the user has logged on at the Administrator level and a value of '0' or 'false' when the user has logged on at the User level.

Math Communication Data

The CD address type is only valid for devices equipped with the math option. Write operations to CD addresses for non-math equipped devices will return an error. Write operations are available only for users logged in at the Administrator level and will return an error otherwise.

Model Name of Device

The Model address type will have a string value of 'CX1000' or 'CX2000,' indicating the model series returned by the device.

Control Math Execution

The MathControl address type is only available for devices equipped with the math option. Write operations to the MathControl tag for non-math equipped devices will return an error.

Control Command and Response

The Command address allows the user to send a string command and receive a string response to and from the device. This allows the user to send any command to the device, including commands not directly supported by the driver. This tag is only available to users logged in at the Administrator level. Otherwise, write operations will return an error.

● Use caution when performing write operations using the Command address.

● **Note:** The actual number of addresses available for each type depends on the configuration of the Yokogawa device. If the driver finds that an address is not present in the device at Runtime, it will post an error message and remove the tag from its scan list.

Addresses that have Write Only access are assigned a default access of Read/Write; however, data values are unreadable for these addresses and the associated tags are not included in the scan list. The current data value for these tags will always be 0 for numeric data types and null string for string data types.

CX2220 Addressing

The driver supports the following addresses for this device. The default data type for each address type is shown in **bold**.

Measured Channels

Address Type	Format	Range	Data Types	Access
Process Value of Channel	CHxx or CHxx.PV	01-20	Double , Float	Read Only
Alarm Summary of Channel	CHxx.Alarm	01-20	DWord , Short, Word, Byte	Read Only
Alarm Level1 Status of Channel	CHxx.Alarm1	01-20	Short , Word, Byte	Read Only
Alarm Level2 Status of Channel	CHxx.Alarm2	01-20	Short , Word, Byte	Read Only
Alarm Level3 Status of Channel	CHxx.Alarm3	01-20	Short , Word, Byte	Read Only
Alarm Level4 Status of Channel	CHxx.Alarm4	01-20	Short , Word, Byte	Read Only
Set and Read Level1 Alarm Setpoint	CHxx.ASP1	01-20	Double , Float	Read/Write
Set and Read Level2 Alarm Setpoint	CHxx.ASP2	01-20	Double , Float	Read/Write
Set and Read Level3 Alarm Setpoint	CHxx.ASP3	01-20	Double , Float	Read/Write
Set and Read Level4 Alarm Setpoint	CHxx.ASP4	01-20	Double , Float	Read/Write
Upper Scale Value of Channel*	CHxx.scale_Hi	01-20	Double , Float	Read Only
Lower Scale Value of Channel*	CHxx.scale_Lo	01-20	Double , Float	Read Only
Unit String of Channel*	CHxx.unit	01-20	String	Read Only
Tagname of Channel*	CHxx.tag	01-20	String	Read Only
Status of Channel*	CHxx.status	01-20	String	Read Only
Precision of Channel*	CHxx.Precision	01-20	Short , Word, Byte	Read Only
Lowest Measuring Channel*	CH.Low		Short , Word, Byte	Read Only
Highest Measuring Channel*	CH.High		Short , Word, Byte	Read Only

Internal Loops

Address Type	Format	Range	Data Types	Access
Process Value of Internal Loop	LPxx or LPxx.PV	01-02	Double , Float	Read Only
Setpoint Value of Internal Loop for current SP number	LPxx.SP	01-02	Double , Float	Read/Write
Setpoint Value of Internal Loop for specified SP number	LPxx.SP.n	xx=01-02 n=1-8	Double , Float	Read/Write

Address Type	Format	Range	Data Types	Access
Current SP number for Internal Loop	LPxx.SP.Num	01-02	Short , Word,	Read/Write
Output Value of Internal Loop	LPxx.OUT	01-02	Double , Float	Read/Write
Alarm Summary of Internal Loop	LPxx.Alarm	01-02	DWord , Short, Word, Byte	Read Only
Alarm Level1 Status of Internal Loop	LPxx.Alarm1	01-02	Short , Word, Byte	Read Only
Alarm Level2 Status of Internal Loop	LPxx.Alarm2	01-02	Short , Word, Byte	Read Only
Alarm Level3 Status of Internal Loop	LPxx.Alarm3	01-02	Short , Word, Byte	Read Only
Alarm Level4 Status of Internal Loop	LPxx.Alarm4	01-02	Short , Word, Byte	Read Only
Set and Read Level1 Alarm Setpoint	LPxx.ASP1	01-02	Double , Float	Read/Write
Set and Read Level2 Alarm Setpoint	LPxx.ASP2	01-02	Double , Float	Read/Write
Set and Read Level3 Alarm Setpoint	LPxx.ASP3	01-02	Double , Float	Read/Write
Set and Read Level4 Alarm Setpoint	LPxx.ASP4	01-02	Double , Float	Read/Write
Set and Read Level1 Alarm Setpoint of specified PID #	LPxx.ASP1.n	xx=01-02 n=1-8	Double , Float	Read/Write
Set and Read Level2 Alarm Setpoint of specified PID #	LPxx.ASP2.n	xx=01-02 n=1-8	Double , Float	Read/Write
Set and Read Level3 Alarm Setpoint of specified PID #	LPxx.ASP3.n	xx=01-02 n=1-8	Double , Float	Read/Write
Set and Read Level4 Alarm Setpoint of specified PID #	LPxx.ASP4.n	xx=01-02 n=1-8	Double , Float	Read/Write
Upper Scale Value of Internal Loop*	LPxx.scale_Hi	01-02	Double , Float	Read Only
Lower Scale Value of Internal Loop*	LPxx.scale_Lo	01-02	Double , Float	Read Only
Unit String of Internal Loop (PV)*	LPxx.unit or LPxx.PV.unit	01-02	String	Read Only
Unit String of Internal Loop SP*	LPxx.SP.unit	01-02	String	Read Only
Unit String of Internal Loop OUT*	LPxx.OUT.unit	01-02	String	Read Only
Tagname of Internal Loop*	LPxx.tag	01-02	String	Read Only
Tagname of Internal Loop PV*	LPxx.PV.tag	01-02	String	Read Only
Tagname of Internal Loop SP*	LPxx.SP.tag	01-02	String	Read Only
Tagname of Internal Loop OUT*	LPxx.OUT.tag	01-02	String	Read Only
Status of Internal Loop (PV)*	LPxx.status or	01-02	String	Read Only

Address Type	Format	Range	Data Types	Access
	LPxx.PV.status			
Status of Internal Loop SP*	LPxx.SP.status	01-02	String	Read Only
Status of Internal Loop OUT*	LPxx.OUT.status	01-02	String	Read Only
Precision of Internal Loop (PV)*	LPxx.Precision or LPxx.PV.Precision	01-02	Short , Word, Byte	Read Only
Precision of Internal Loop SP*	LPxx.SP.Precision	01-02	Short , Word, Byte	Read Only
Precision of Internal Loop OUT*	LPxx.OUT.Precision	01-02	Short , Word, Byte	Read Only
Proportional band value of Internal Loop for current PID number	LPxx.PID.P	01-02	Double , Float	Read/Write
Proportional band value of Internal Loop for specified PID number	LPxx.PID.P.n	xx=01- 02 n=1-8	Double , Float	Read/Write
Integral time value of Internal Loop for current PID number	LPxx.PID.I	01-02	Double , Float	Read/Write
Integral time value of Internal Loop for specified PID number	LPxx.PID.I.n	xx=01- 02 n=1-8	Double , Float	Read/Write
Derivative time value of Internal Loop for current PID number	LPxx.PID.D	01-02	Double , Float	Read/Write
Derivative time value of Internal Loop for specified PID number	LPxx.PID.D.n	xx=01- 02 n=1-8	Double , Float	Read/Write
Current PID number for Internal Loop	LPxx.PID.Num	01-02	Short , Word, Byte	Read Only
Set and Read Run/Stop (0=Stop, 1=Run)	LPxx.RUN	01-02	Short , Word, Byte	Read/Write
Set and Read Remote/Local (0=Local, 1=Remote)	LPxx.Remote	01-02	Short , Word, Byte	Read/Write
Set and Read auto/manual/cascade (0=Auto, 1=Manual, 2=Cascade)	LPxx.Mode	01-02	Short , Word, Byte	Read/Write
Lowest Internal Loop Number*	LP.Low		Short , Word, Byte	Read Only
Highest Internal Loop Number*	LP.High		Short , Word, Byte	Read Only
Ramp Up Rate**	LPxx.RUR xx=loop number	01-02	Double , Float	Read/Write

Address Type	Format	Range	Data Types	Access
Ramp Down Rate**	LPxx.RDR xx=loop number	01-02	Double , Float	Read/Write

External Loops

Address Type	Format	Range	Data Types	Access
Process Value of External Loop	LPExx or LPExx.PV	01-16	Double , Float	Read Only
Setpoint Value of External Loop	LPExx.SP	01-16	Double , Float	Read/Write
Output Value of External Loop	LPExx.OUT	01-16	Double , Float	Read/Write
Alarm Summary of External Loop	LPExx.Alarm	01-16	DWord , Short, Word, Byte	Read Only
Alarm Level1 Status of External Loop	LPExx.Alarm1	01-16	Short , Word, Byte	Read Only
Alarm Level2 Status of External Loop	LPExx.Alarm2	01-16	Short , Word, Byte	Read Only
Alarm Level3 Status of External Loop	LPExx.Alarm3	01-16	Short , Word, Byte	Read Only
Alarm Level4 Status of External Loop	LPExx.Alarm4	01-16	Short , Word, Byte	Read Only
Upper Scale Value of External Loop*	LPExx.scale_Hi	01-16	Double , Float	Read Only
Lower Scale Value of External Loop*	LPExx.scale_Lo	01-16	Double , Float	Read Only
Unit String of External Loop (PV)*	LPExx.unit or LPExx.PV.unit	01-16	String	Read Only
Unit String of External Loop SP*	LPExx.SP.unit	01-16	String	Read Only
Unit String of External Loop OUT*	LPExx.OUT.unit	01-16	String	Read Only
Tagname of External Loop*	LPExx.tag	01-16	String	Read Only
Tagname of External Loop PV*	LPExx.PV.tag	01-16	String	Read Only
Tagname of External Loop SP*	LPExx.SP.tag	01-16	String	Read Only
Tagname of External Loop OUT*	LPExx.OUT.tag	01-16	String	Read Only
Status of External Loop (PV)*	LPExx.status or LPExx.PV.status	01-16	String	Read Only
Status of External Loop SP*	LPExx.SP.status	01-16	String	Read Only
Status of External Loop OUT*	LPExx.OUT.status	01-16	String	Read Only
Precision of External Loop (PV)*	LPExx.Precision or LPExx.PV.Precision	01-16	Short , Word, Byte	Read Only

Address Type	Format	Range	Data Types	Access
Precision of External Loop*	LPExx.SP.Precision	01-16	Short , Word, Byte	Read Only
Precision of External Loop*	LPExx.OUT.Precision	01-16	Short , Word, Byte	Read Only
Set and Read auto/- manual/cascade (0=Auto, 1=Manual, 2=Cascade)	LPExx.MODE	01-02	Short , Word, Byte	Read/Write
Lowest External Loop Number*	LPE.Low		Short , Word, Byte	Read Only
Highest External Loop Number*	LPE.High		Short , Word, Byte	Read Only

Math Channels

Address Type	Format	Range	Data Types	Access
Process Value of Math Channel	CHxx or CHxx.PV	31-60	Double , Float	Read Only
Alarm Summary of Math Channel	CHxx.Alarm	31-60	DWord , Short, Word, Byte	Read Only
Alarm Level1 Status of Math Channel	CHxx.Alarm1	31-60	Short , Word, Byte	Read Only
Alarm Level2 Status of Math Channel	CHxx.Alarm2	31-60	Short , Word, Byte	Read Only
Alarm Level3 Status of Math Channel	CHxx.Alarm3	31-60	Short , Word, Byte	Read Only
Alarm Level4 Status of Math Channel	CHxx.Alarm4	31-60	Short , Word, Byte	Read Only
Set and Read Level1 Alarm Setpoint	CHxx.ASP1	31-60	Double , Float	Read/Write
Set and Read Level2 Alarm Setpoint	CHxx.ASP2	31-60	Double , Float	Read/Write
Set and Read Level3 Alarm Setpoint	CHxx.ASP3	31-60	Double , Float	Read/Write
Set and Read Level4 Alarm Setpoint	CHxx.ASP4	31-60	Double , Float	Read/Write
Upper Scale Value of Math Channel*	CHxx.scale_Hi	31-60	Double , Float	Read Only
Lower Scale Value of Math Channel*	CHxx.scale_Lo	31-60	Double , Float	Read Only
Unit String of Math Channel*	CHxx.unit	31-60	String	Read Only
Tagname of Math Channel*	CHxx.tag	31-60	String	Read Only
Status of Math Channel*	CHxx.status	31-60	String	Read Only
Precision of Math Channel*	CHxx.Precision	31-60	Short , Word, Byte	Read Only
Lowest Math Channel*	CHA.Low		Short , Word, Byte	Read Only
Highest Math Channel*	CHA.High		Short , Word, Byte	Read Only

*The data associated with these addresses is only read from the device at the start of a communications session. Once read, the values will not be refreshed until the server has been restarted or the Reset Tag has

been invoked. To invoke a reset, write a non zero value to the Reset Tag. Once the Reset Tag has been invoked, the driver will reinitialize all startup data from the device.

**Zero (0) can be written to the tag to disable the ramp parameters. When a 0 is written to the tag, the tag will display +1.inf upon successful disabling.

DI/DO DATA and Internal Switch Status (Style Number S3 or Later)

Address Type	Format	Range	Data Types	Access
Control Digital Inputs	DI	DI001-DI006	Boolean	Read Only
Control Digital Outputs	DO	DO001-DO006	Boolean	Read/Write
Expansion Digital Inputs	RI	RI001-RI012	Boolean	Read/Write
Expansion Digital Outputs	Read Only	RO001-RO012	Boolean	Read/Write
Internal Switches	SW	SW001-SW036	Boolean	Read/Write

Alarm Setpoints

Data associated with the addresses denoted in the device will be returned as +INF. Data values can only be written to Alarm Setpoints that are defined in the device: write operations to undefined Alarm Setpoints will return an error. Write operations are available only for users logged in at the Administrator level and will return an error otherwise.

Scales

Data values for Scale_Hi and Scale_Lo for channels that are skipped will be returned as +INF.

Tag Names

For devices that have unspecified tag names, the driver will construct an internal tag name based on the channel number. For example, the tag name of address 'CH01' will be returned as 'CH01'.

General Device Data

Address Type	Format	Range	Data Types	Access
Administrator Level	Admin		Boolean	Read Only
Date of Last Data	Date		String	Read Only
Time of Last Data	Time		String	Read Only
Model Name of Device	Model		String	Read Only
Host Name of Device	Hostname		String	Read Only
Serial Number of Device	SerialNumber		String	Read Only
IP Address of Device	IP		String	Read Only
Math Communication Data	CDxx	01-30	Float	Write Only
Control Math Execution	MathControl		Short, Word, Byte	Write Only
Reset Alarms	AlarmReset		Boolean	Write Only
Control Command and Response	Command		String	Read/Write
Previous Screen	PreScreen		Boolean	Write Only
Direct Reloading of Configuration	Reset		Boolean	Write Only
SetTime*	Tag		Boolean	Write Only

*The SetTime tag will cause the device time to be updated. Writing 0 or 1 to the tag will update the Device Date and Time, which can be verified from the Date tag and the Time tag. The SetTime tag will always display 0 as it is a Write Only tag. After a successful update, the following message will be posted: "Device Clock set to system time [Device <device_name>]."

Administrator Level

The Admin address type has a value of '1' or 'true' when the user has logged on at the Administrator level and a value of '0' or 'false' when the user has logged on at the User level.

Math Communication Data

The CD address type is only valid for devices equipped with the math option. Write operations to CD addresses for non-math equipped devices will return an error. Write operations are available only for users logged in at the Administrator level and will return an error otherwise.

Model Name of Device

The Model address type will have a string value of 'CX1000' or 'CX2000,' indicating the model series returned by the device.

Control Math Execution

The MathControl address type is only available for devices equipped with the math option. Write operations to the MathControl tag for non-math equipped devices will return an error.

Control Command and Response

The Command address allows the user to send a string command and receive a string response to and from the device. This allows the user to send any command to the device, including commands not directly supported by the driver. This tag is only available to users logged in at the Administrator level. Otherwise, write operations will return an error.

🔴 Use caution when performing write operations using the Command address.

🔴 **Note:** The actual number of addresses available for each type depends on the configuration of the Yokogawa device. If the driver finds that an address is not present in the device at Runtime, it will post an error message and remove the tag from its scan list.

Addresses that have Write Only access are assigned a default access of Read/Write; however, data values are unreadable for these addresses and the associated tags are not included in the scan list. The current data value for these tags will always be 0 for numeric data types and null string for string data types.

CX2410 Addressing

The driver supports the following addresses for this device. The default data type for each address type is shown in **bold**.

Measured Channels

Address Type	Format	Range	Data Types	Access
Process Value of Channel	CHxx or CHxx.PV	01-10	Double , Float	Read Only
Alarm Summary of Channel	CHxx.Alarm	01-10	DWord , Short, Word, Byte	Read Only
Alarm Level1 Status of Channel	CHxx.Alarm1	01-10	Short , Word, Byte	Read Only

Address Type	Format	Range	Data Types	Access
Alarm Level2 Status of Channel	CHxx.Alarm2	01-10	Short , Word, Byte	Read Only
Alarm Level3 Status of Channel	CHxx.Alarm3	01-10	Short , Word, Byte	Read Only
Alarm Level4 Status of Channel	CHxx.Alarm4	01-10	Short , Word, Byte	Read Only
Set and Read Level1 Alarm Setpoint	CHxx.ASP1	01-10	Double , Float	Read/Write
Set and Read Level2 Alarm Setpoint	CHxx.ASP2	01-10	Double , Float	Read/Write
Set and Read Level3 Alarm Setpoint	CHxx.ASP3	01-10	Double , Float	Read/Write
Set and Read Level4 Alarm Setpoint	CHxx.ASP4	01-10	Double , Float	Read/Write
Upper Scale Value of Channel*	CHxx.scale_Hi	01-10	Double , Float	Read Only
Lower Scale Value of Channel*	CHxx.scale_Lo	01-10	Double , Float	Read Only
Unit String of Channel*	CHxx.unit	01-10	String	Read Only
Tagname of Channel*	CHxx.tag	01-10	String	Read Only
Status of Channel*	CHxx.status	01-10	String	Read Only
Precision of Channel*	CHxx.Precision	01-10	Short , Word, Byte	Read Only
Lowest Measuring Channel*	CH.Low		Short , Word, Byte	Read Only
Highest Measuring Channel*	CH.High		Short , Word, Byte	Read Only

Internal Loops

Address Type	Format	Range	Data Types	Access
Process Value of Internal Loop	LPxx or LPxx.PV	01-04	Double , Float	Read Only
Setpoint Value of Internal Loop for current SP number	LPxx.SP	01-04	Double , Float	Read/Write
Setpoint Value of Internal Loop for specified SP number	LPxx.SP.n	xx=01-04 n=1-8	Double , Float	Read/Write
Current SP number for Internal Loop	LPxx.SP.Num	01-04	Short , Word,	Read/Write
Output Value of Internal Loop	LPxx.OUT	01-04	Double , Float	Read/Write
Alarm Summary of Internal Loop	LPxx.Alarm	01-04	DWord , Short, Word, Byte	Read Only
Alarm Level1 Status of Internal Loop	LPxx.Alarm1	01-04	Short , Word, Byte	Read Only
Alarm Level2 Status of Internal Loop	LPxx.Alarm2	01-04	Short , Word, Byte	Read Only
Alarm Level3 Status of Internal Loop	LPxx.Alarm3	01-04	Short , Word, Byte	Read Only
Alarm Level4 Status of Internal Loop	LPxx.Alarm4	01-04	Short , Word, Byte	Read Only
Set and Read Level1 Alarm Setpoint	LPxx.ASP1	01-04	Double , Float	Read/Write
Set and Read Level2 Alarm Setpoint	LPxx.ASP2	01-04	Double , Float	Read/Write
Set and Read Level3 Alarm Setpoint	LPxx.ASP3	01-04	Double , Float	Read/Write
Set and Read Level4 Alarm Setpoint	LPxx.ASP4	01-04	Double , Float	Read/Write

Address Type	Format	Range	Data Types	Access
Set and Read Level1 Alarm Setpoint of specified PID #	LPxx.ASP1.n	xx=01-04 n=1-8	Double , Float	Read/Write
Set and Read Level2 Alarm Setpoint of specified PID #	LPxx.ASP2.n	xx=01-04 n=1-8	Double , Float	Read/Write
Set and Read Level3 Alarm Setpoint of specified PID #	LPxx.ASP3.n	xx=01-04 n=1-8	Double , Float	Read/Write
Set and Read Level4 Alarm Setpoint of specified PID #	LPxx.ASP4.n	xx=01-04 n=1-8	Double , Float	Read/Write
Upper Scale Value of Internal Loop*	LPxx.scale_Hi	01-04	Double , Float	Read Only
Lower Scale Value of Internal Loop*	LPxx.scale_Lo	01-04	Double , Float	Read Only
Unit String of Internal Loop (PV)*	LPxx.unit or LPxx.PV.unit	01-04	String	Read Only
Unit String of Internal Loop SP*	LPxx.SP.unit	01-04	String	Read Only
Unit String of Internal Loop OUT*	LPxx.OUT.unit	01-04	String	Read Only
Tagname of Internal Loop*	LPxx.tag	01-04	String	Read Only
Tagname of Internal Loop PV*	LPxx.PV.tag	01-04	String	Read Only
Tagname of Internal Loop SP*	LPxx.SP.tag	01-04	String	Read Only
Tagname of Internal Loop OUT*	LPxx.OUT.tag	01-04	String	Read Only
Status of Internal Loop (PV)*	LPxx.status or LPxx.PV.status	01-04	String	Read Only
Status of Internal Loop SP*	LPxx.SP.status	01-04	String	Read Only
Status of Internal Loop OUT*	LPxx.OUT.status	01-04	String	Read Only
Precision of Internal Loop (PV)*	LPxx.Precision or LPxx.PV.Precision	01-04	Short , Word, Byte	Read Only
Precision of Internal Loop SP*	LPxx.SP.Precision	01-04	Short , Word, Byte	Read Only
Precision of Internal Loop OUT*	LPxx.OUT.Precision	01-04	Short , Word, Byte	Read Only
Proportional band value of Internal Loop for current PID number	LPxx.PID.P	01-04	Double , Float	Read/Write
Proportional band value of Internal Loop for specified PID number	LPxx.PID.P.n	xx=01-04 n=1-8	Double , Float	Read/Write
Integral time value of Internal Loop for current PID number	LPxx.PID.I	01-04	Double , Float	Read/Write

Address Type	Format	Range	Data Types	Access
Integral time value of Internal Loop for specified PID number	LPxx.PID.I.n	xx=01-04 n=1-8	Double , Float	Read/Write
Derivative time value of Internal Loop for current PID number	LPxx.PID.D	01-04	Double , Float	Read/Write
Derivative time value of Internal Loop for specified PID number	LPxx.PID.D.n	xx=01-04 n=1-8	Double , Float	Read/Write
Current PID number for Internal Loop	LPxx.PID.Num	01-04	Short , Word, Byte	Read Only
Set and Read Run/Stop (0=Stop, 1=Run)	LPxx.RUN	01-04	Short , Word, Byte	Read/Write
Set and Read Remote/Local (0=Local, 1=Remote)	LPxx.Remote	01-04	Short , Word, Byte	Read/Write
Set and Read auto/manual/cascade (0=Auto, 1=Manual, 2=Cascade)	LPxx.Mode	01-04	Short , Word, Byte	Read/Write
Lowest Internal Loop Number*	LP.Low		Short , Word, Byte	Read Only
Highest Internal Loop Number*	LP.High		Short , Word, Byte	Read Only
Ramp Up Rate**	LPxx.RUR xx=loop number	01-04	Double , Float	Read/Write
Ramp Down Rate**	LPxx.RDR xx=loop number	01-04	Double , Float	Read/Write

External Loops

Address Type	Format	Range	Data Types	Access
Process Value of External Loop	LPExx or LPExx.PV	01-16	Double , Float	Read Only
Setpoint Value of External Loop	LPExx.SP	01-16	Double , Float	Read/Write
Output Value of External Loop	LPExx.OUT	01-16	Double , Float	Read/Write
Alarm Summary of External Loop	LPExx.Alarm	01-16	DWord , Short, Word, Byte	Read Only
Alarm Level1 Status of External Loop	LPExx.Alarm1	01-16	Short , Word, Byte	Read Only
Alarm Level2 Status of External Loop	LPExx.Alarm2	01-16	Short , Word, Byte	Read Only
Alarm Level3 Status of External Loop	LPExx.Alarm3	01-16	Short , Word, Byte	Read Only
Alarm Level4 Status of External	LPExx.Alarm4	01-16	Short , Word, Byte	Read Only

Address Type	Format	Range	Data Types	Access
Loop				
Upper Scale Value of External Loop*	LPExx.scale_Hi	01-16	Double , Float	Read Only
Lower Scale Value of External Loop*	LPExx.scale_Lo	01-16	Double , Float	Read Only
Unit String of External Loop (PV)*	LPExx.unit or LPExx.PV.unit	01-16	String	Read Only
Unit String of External Loop SP*	LPExx.SP.unit	01-16	String	Read Only
Unit String of External Loop OUT*	LPExx.OUT.unit	01-16	String	Read Only
Tagname of External Loop*	LPExx.tag	01-16	String	Read Only
Tagname of External Loop PV*	LPExx.PV.tag	01-16	String	Read Only
Tagname of External Loop SP*	LPExx.SP.tag	01-16	String	Read Only
Tagname of External Loop OUT*	LPExx.OUT.tag	01-16	String	Read Only
Status of External Loop (PV)*	LPExx.status or LPExx.PV.status	01-16	String	Read Only
Status of External Loop SP*	LPExx.SP.status	01-16	String	Read Only
Status of External Loop OUT*	LPExx.OUT.status	01-16	String	Read Only
Precision of External Loop (PV)*	LPExx.Precision or LPExx.PV.Precision	01-16	Short , Word, Byte	Read Only
Precision of External Loop*	LPExx.SP.Precision	01-16	Short , Word, Byte	Read Only
Precision of External Loop*	LPExx.OUT.Precision	01-16	Short , Word, Byte	Read Only
Set and Read auto/ manual/cascade (0=Auto, 1=Manual, 2=Cascade)	LPExx.MODE	01-02	Short , Word, Byte	Read/Write
Lowest External Loop Number*	LPE.Low		Short , Word, Byte	Read Only
Highest External Loop Number*	LPE.High		Short , Word, Byte	Read Only

Math Channels

Address Type	Format	Range	Data Types	Access
Process Value of Math Channel	CHxx or CHxx.PV	31-60	Double , Float	Read Only
Alarm Summary of Math Channel	CHxx.Alarm	31-60	DWord , Short, Word, Byte	Read Only
Alarm Level1 Status of Math Channel	CHxx.Alarm1	31-60	Short , Word, Byte	Read Only
Alarm Level2 Status of Math Channel	CHxx.Alarm2	31-60	Short , Word, Byte	Read Only
Alarm Level3 Status of Math Channel	CHxx.Alarm3	31-60	Short , Word, Byte	Read Only
Alarm Level4 Status of Math Channel	CHxx.Alarm4	31-60	Short , Word, Byte	Read Only

Address Type	Format	Range	Data Types	Access
Set and Read Level1 Alarm Setpoint	CHxx.ASP1	31-60	Double , Float	Read/Write
Set and Read Level2 Alarm Setpoint	CHxx.ASP2	31-60	Double , Float	Read/Write
Set and Read Level3 Alarm Setpoint	CHxx.ASP3	31-60	Double , Float	Read/Write
Set and Read Level4 Alarm Setpoint	CHxx.ASP4	31-60	Double , Float	Read/Write
Upper Scale Value of Math Channel*	CHxx.scale_Hi	31-60	Double , Float	Read Only
Lower Scale Value of Math Channel*	CHxx.scale_Lo	31-60	Double , Float	Read Only
Unit String of Math Channel*	CHxx.unit	31-60	String	Read Only
Tagname of Math Channel*	CHxx.tag	31-60	String	Read Only
Status of Math Channel*	CHxx.status	31-60	String	Read Only
Precision of Math Channel*	CHxx.Precision	31-60	Short , Word, Byte	Read Only
Lowest Math Channel*	CHA.Low		Short , Word, Byte	Read Only
Highest Math Channel*	CHA.High		Short , Word, Byte	Read Only

*The data associated with these addresses is only read from the device at the start of a communications session. Once read, the values will not be refreshed until the server has been restarted or the Reset Tag has been invoked. To invoke a reset, write a non zero value to the Reset Tag. Once the Reset Tag has been invoked, the driver will reinitialize all startup data from the device.

**Zero (0) can be written to the tag to disable the ramp parameters. When a 0 is written to the tag, the tag will display +1.inf upon successful disabling.

DI/DO DATA and Internal Switch Status (Style Number S3 or Later)

Address Type	Format	Range	Data Types	Access
Control Digital Inputs	DI	DI001-DI006	Boolean	Read Only
Control Digital Outputs	DO	DO001-DO006	Boolean	Read/Write
Expansion Digital Inputs	RI	RI001-RI012	Boolean	Read/Write
Expansion Digital Outputs	Read Only	RO001-RO012	Boolean	Read/Write
Internal Switches	SW	SW001-SW036	Boolean	Read/Write

Alarm Setpoints

Data associated with the addresses denoted in the device will be returned as +INF. Data values can only be written to Alarm Setpoints that are defined in the device: write operations to undefined Alarm Setpoints will return an error. Write operations are available only for users logged in at the Administrator level and will return an error otherwise.

Scales

Data values for Scale_Hi and Scale_Lo for channels that are skipped will be returned as +INF.

Tag Names

For devices that have unspecified tag names, the driver will construct an internal tag name based on the channel number. For example, the tag name of address 'CH01' will be returned as 'CH01'.

General Device Data

Address Type	Format	Range	Data Types	Access
Administrator Level	Admin		Boolean	Read Only
Date of Last Data	Date		String	Read Only
Time of Last Data	Time		String	Read Only
Model Name of Device	Model		String	Read Only
Host Name of Device	Hostname		String	Read Only
Serial Number of Device	SerialNumber		String	Read Only
IP Address of Device	IP		String	Read Only
Math Communication Data	CDxx	01-30	Float	Write Only
Control Math Execution	MathControl		Short, Word, Byte	Write Only
Reset Alarms	AlarmReset		Boolean	Write Only
Control Command and Response	Command		String	Read/Write
Previous Screen	PreScreen		Boolean	Write Only
Direct Reloading of Configuration	Reset		Boolean	Write Only
SetTime*	Tag		Boolean	Write Only

*The SetTime tag will cause the device time to be updated. Writing 0 or 1 to the tag will update the Device Date and Time, which can be verified from the Date tag and the Time tag. The SetTime tag will always display 0 as it is a Write Only tag. After a successful update, the following message will be posted: "Device Clock set to system time [Device <device_name>]."

Administrator Level

The Admin address type has a value of '1' or 'true' when the user has logged on at the Administrator level and a value of '0' or 'false' when the user has logged on at the User level.

Math Communication Data

The CD address type is only valid for devices equipped with the math option. Write operations to CD addresses for non-math equipped devices will return an error. Write operations are available only for users logged in at the Administrator level and will return an error otherwise.

Model Name of Device


The Model address type will have a string value of 'CX1000' or 'CX2000,' indicating the model series returned by the device.

Control Math Execution

The MathControl address type is only available for devices equipped with the math option. Write operations to the MathControl tag for non-math equipped devices will return an error.

Control Command and Response

The Command address allows the user to send a string command and receive a string response to and from the device. This allows the user to send any command to the device, including commands not directly supported by the driver. This tag is only available to users logged in at the Administrator level. Otherwise, write operations will return an error.

 Use caution when performing write operations using the Command address.

● **Note:** The actual number of addresses available for each type depends on the configuration of the Yokogawa device. If the driver finds that an address is not present in the device at Runtime, it will post an error message and remove the tag from its scan list.

Addresses that have Write Only access are assigned a default access of Read/Write; however, data values are unreadable for these addresses and the associated tags are not included in the scan list. The current data value for these tags will always be 0 for numeric data types and null string for string data types.

CX2420 Addressing

The driver supports the following addresses for this device. The default data type for each address type is shown in **bold**.

Measured Channels

Address Type	Format	Range	Data Types	Access
Process Value of Channel	CHxx or CHxx.PV	01-20	Double , Float	Read Only
Alarm Summary of Channel	CHxx.Alarm	01-20	DWord , Short, Word, Byte	Read Only
Alarm Level1 Status of Channel	CHxx.Alarm1	01-20	Short , Word, Byte	Read Only
Alarm Level2 Status of Channel	CHxx.Alarm2	01-20	Short , Word, Byte	Read Only
Alarm Level3 Status of Channel	CHxx.Alarm3	01-20	Short , Word, Byte	Read Only
Alarm Level4 Status of Channel	CHxx.Alarm4	01-20	Short , Word, Byte	Read Only
Set and Read Level1 Alarm Setpoint	CHxx.ASP1	01-20	Double , Float	Read/Write
Set and Read Level2 Alarm Setpoint	CHxx.ASP2	01-20	Double , Float	Read/Write
Set and Read Level3 Alarm Setpoint	CHxx.ASP3	01-20	Double , Float	Read/Write
Set and Read Level4 Alarm Setpoint	CHxx.ASP4	01-20	Double , Float	Read/Write
Upper Scale Value of Channel*	CHxx.scale_Hi	01-20	Double , Float	Read Only
Lower Scale Value of Channel*	CHxx.scale_Lo	01-20	Double , Float	Read Only
Unit String of Channel*	CHxx.unit	01-20	String	Read Only
Tagname of Channel*	CHxx.tag	01-20	String	Read Only
Status of Channel*	CHxx.status	01-20	String	Read Only
Precision of Channel*	CHxx.Precision	01-20	Short , Word, Byte	Read Only
Lowest Measuring Channel*	CH.Low		Short , Word, Byte	Read Only
Highest Measuring Channel*	CH.High		Short , Word, Byte	Read Only

Internal Loops

Address Type	Format	Range	Data Types	Access
Process Value of Internal Loop	LPxx or LPxx.PV	01-04	Double , Float	Read Only
Setpoint Value of Internal Loop for current SP number	LPxx.SP	01-04	Double , Float	Read/Write
Setpoint Value of Internal Loop for specified SP number	LPxx.SP.n	xx=01-04 n=1-8	Double , Float	Read/Write

Address Type	Format	Range	Data Types	Access
Current SP number for Internal Loop	LPxx.SP.Num	01-04	Short , Word,	Read/Write
Output Value of Internal Loop	LPxx.OUT	01-04	Double , Float	Read/Write
Alarm Summary of Internal Loop	LPxx.Alarm	01-04	DWord , Short, Word, Byte	Read Only
Alarm Level1 Status of Internal Loop	LPxx.Alarm1	01-04	Short , Word, Byte	Read Only
Alarm Level2 Status of Internal Loop	LPxx.Alarm2	01-04	Short , Word, Byte	Read Only
Alarm Level3 Status of Internal Loop	LPxx.Alarm3	01-04	Short , Word, Byte	Read Only
Alarm Level4 Status of Internal Loop	LPxx.Alarm4	01-04	Short , Word, Byte	Read Only
Set and Read Level1 Alarm Setpoint	LPxx.ASP1	01-04	Double , Float	Read/Write
Set and Read Level2 Alarm Setpoint	LPxx.ASP2	01-04	Double , Float	Read/Write
Set and Read Level3 Alarm Setpoint	LPxx.ASP3	01-04	Double , Float	Read/Write
Set and Read Level4 Alarm Setpoint	LPxx.ASP4	01-04	Double , Float	Read/Write
Set and Read Level1 Alarm Setpoint of specified PID#	LPxx.ASP1.n	xx=01-04 n=1-8	Double , Float	Read/Write
Set and Read Level2 Alarm Setpoint of specified PID#	LPxx.ASP2.n	xx=01-04 n=1-8	Double , Float	Read/Write
Set and Read Level3 Alarm Setpoint of specified PID#	LPxx.ASP3.n	xx=01-04 n=1-8	Double , Float	Read/Write
Set and Read Level4 Alarm Setpoint of specified PID#	LPxx.ASP4.n	xx=01-04 n=1-8	Double , Float	Read/Write
Upper Scale Value of Internal Loop*	LPxx.scale_Hi	01-04	Double , Float	Read Only
Lower Scale Value of Internal Loop*	LPxx.scale_Lo	01-04	Double , Float	Read Only
Unit String of Internal Loop (PV)*	LPxx.unit or LPxx.PV.unit	01-04	String	Read Only
Unit String of Internal Loop SP*	LPxx.SP.unit	01-04	String	Read Only
Unit String of Internal Loop OUT*	LPxx.OUT.unit	01-04	String	Read Only
Tagname of Internal Loop*	LPxx.tag	01-04	String	Read Only
Tagname of Internal Loop PV*	LPxx.PV.tag	01-04	String	Read Only
Tagname of Internal Loop SP*	LPxx.SP.tag	01-04	String	Read Only
Tagname of Internal Loop OUT*	LPxx.OUT.tag	01-04	String	Read Only
Status of Internal Loop (PV)*	LPxx.status or	01-04	String	Read Only

Address Type	Format	Range	Data Types	Access
	LPxx.PV.status			
Status of Internal Loop SP*	LPxx.SP.status	01-04	String	Read Only
Status of Internal Loop OUT*	LPxx.OUT.status	01-04	String	Read Only
Precision of Internal Loop (PV)*	LPxx.Precision or LPxx.PV.Precision	01-04	Short , Word, Byte	Read Only
Precision of Internal Loop SP*	LPxx.SP.Precision	01-04	Short , Word, Byte	Read Only
Precision of Internal Loop OUT*	LPxx.OUT.Precision	01-04	Short , Word, Byte	Read Only
Proportional band value of Internal Loop for current PID number	LPxx.PID.P	01-04	Double , Float	Read/Write
Proportional band value of Internal Loop for specified PID number	LPxx.PID.P.n	xx=01- 04 n=1-8	Double , Float	Read/Write
Integral time value of Internal Loop for current PID number	LPxx.PID.I	01-04	Double , Float	Read/Write
Integral time value of Internal Loop for specified PID number	LPxx.PID.I.n	xx=01- 04 n=1-8	Double , Float	Read/Write
Derivative time value of Internal Loop for current PID number	LPxx.PID.D	01-04	Double , Float	Read/Write
Derivative time value of Internal Loop for specified PID number	LPxx.PID.D.n	xx=01- 04 n=1-8	Double , Float	Read/Write
Current PID number for Internal Loop	LPxx.PID.Num	01-04	Short , Word, Byte	Read Only
Set and Read Run/Stop (0=Stop, 1=Run)	LPxx.RUN	01-04	Short , Word, Byte	Read/Write
Set and Read Remote/Local (0=Local, 1=Remote)	LPxx.Remote	01-04	Short , Word, Byte	Read/Write
Set and Read auto/manual/cascade (0=Auto, 1=Manual, 2=Cascade)	LPxx.Mode	01-04	Short , Word, Byte	Read/Write
Lowest Internal Loop Number*	LP.Low		Short , Word, Byte	Read Only
Highest Internal Loop Number*	LP.High		Short , Word, Byte	Read Only
Ramp Up Rate**	LPxx.RUR xx=loop number	01-04	Double , Float	Read/Write

Address Type	Format	Range	Data Types	Access
Ramp Down Rate**	LPxx.RDR xx=loop number	01-04	Double , Float	Read/Write

External Loops

Address Type	Format	Range	Data Types	Access
Process Value of External Loop	LPExx or LPExx.PV	01-16	Double , Float	Read Only
Setpoint Value of External Loop	LPExx.SP	01-16	Double , Float	Read/Write
Output Value of External Loop	LPExx.OUT	01-16	Double , Float	Read/Write
Alarm Summary of External Loop	LPExx.Alarm	01-16	DWord , Short, Word, Byte	Read Only
Alarm Level1 Status of External Loop	LPExx.Alarm1	01-16	Short , Word, Byte	Read Only
Alarm Level2 Status of External Loop	LPExx.Alarm2	01-16	Short , Word, Byte	Read Only
Alarm Level3 Status of External Loop	LPExx.Alarm3	01-16	Short , Word, Byte	Read Only
Alarm Level4 Status of External Loop	LPExx.Alarm4	01-16	Short , Word, Byte	Read Only
Upper Scale Value of External Loop*	LPExx.scale_Hi	01-16	Double , Float	Read Only
Lower Scale Value of External Loop	LPExx.scale_Lo	01-16	Double , Float	Read Only
Unit String of External Loop (PV)*	LPExx.unit or LPExx.PV.unit	01-16	String	Read Only
Unit String of External Loop SP*	LPExx.SP.unit	01-16	String	Read Only
Unit String of External Loop OUT*	LPExx.OUT.unit	01-16	String	Read Only
Tagname of External Loop*	LPExx.tag	01-16	String	Read Only
Tagname of External Loop PV*	LPExx.PV.tag	01-16	String	Read Only
Tagname of External Loop SP*	LPExx.SP.tag	01-16	String	Read Only
Tagname of External Loop OUT*	LPExx.OUT.tag	01-16	String	Read Only
Status of External Loop (PV)*	LPExx.status or LPExx.PV.status	01-16	String	Read Only
Status of External Loop SP*	LPExx.SP.status	01-16	String	Read Only
Status of External Loop OUT*	LPExx.OUT.status	01-16	String	Read Only
Precision of External Loop	LPExx.Precision or	01-16	Short , Word, Byte	Read Only

Address Type	Format	Range	Data Types	Access
(PV)*	LPExx.PV.Precision			
Precision of External Loop*	LPExx.SP.Precision	01-16	Short , Word, Byte	Read Only
Precision of External Loop*	LPExx.OUT.Precision	01-16	Short , Word, Byte	Read Only
Set and Read auto/- manual/cascade (0=Auto, 1=Manual, 2=Cascade)	LPExx.MODE	01-02	Short , Word, Byte	Read/Write
Lowest External Loop Number*	LPE.Low		Short , Word, Byte	Read Only
Highest External Loop Number*	LPE.High		Short , Word, Byte	Read Only

Math Channels

Address Type	Format	Range	Data Types	Access
Process Value of Math Channel	CHxx or CHxx.PV	31-60	Double , Float	Read Only
Alarm Summary of Math Channel	CHxx.Alarm	31-60	DWord , Short, Word, Byte	Read Only
Alarm Level1 Status of Math Channel	CHxx.Alarm1	31-60	Short , Word, Byte	Read Only
Alarm Level2 Status of Math Channel	CHxx.Alarm2	31-60	Short , Word, Byte	Read Only
Alarm Level3 Status of Math Channel	CHxx.Alarm3	31-60	Short , Word, Byte	Read Only
Alarm Level4 Status of Math Channel	CHxx.Alarm4	31-60	Short , Word, Byte	Read Only
Set and Read Level1 Alarm Setpoint	CHxx.ASP1	31-60	Double , Float	Read/Write
Set and Read Level2 Alarm Setpoint	CHxx.ASP2	31-60	Double , Float	Read/Write
Set and Read Level3 Alarm Setpoint	CHxx.ASP3	31-60	Double , Float	Read/Write
Set and Read Level4 Alarm Setpoint	CHxx.ASP4	31-60	Double , Float	Read/Write
Upper Scale Value of Math Channel*	CHxx.scale_Hi	31-60	Double , Float	Read Only
Lower Scale Value of Math Channel*	CHxx.scale_Lo	31-60	Double , Float	Read Only
Unit String of Math Channel*	CHxx.unit	31-60	String	Read Only
Tagname of Math Channel*	CHxx.tag	31-60	String	Read Only
Status of Math Channel*	CHxx.status	31-60	String	Read Only
Precision of Math Channel*	CHxx.Precision	31-60	Short , Word, Byte	Read Only
Lowest Math Channel*	CHA.Low		Short , Word, Byte	Read Only
Highest Math Channel*	CHA.High		Short , Word, Byte	Read Only

*The data associated with these addresses is only read from the device at the start of a communications session. Once read, the values will not be refreshed until the server has been restarted or the Reset Tag has

been invoked. To invoke a reset, write a non zero value to the Reset Tag. Once the Reset Tag has been invoked, the driver will reinitialize all startup data from the device.

**Zero (0) can be written to the tag to disable the ramp parameters. When a 0 is written to the tag, the tag will display +1.inf upon successful disabling.

DI/DO DATA and Internal Switch Status (Style Number S3 or Later)

Address Type	Format	Range	Data Types	Access
Control Digital Inputs	DI	DI001-DI006	Boolean	Read Only
Control Digital Outputs	DO	DO001-DO006	Boolean	Read/Write
Expansion Digital Inputs	RI	RI001-RI012	Boolean	Read/Write
Expansion Digital Outputs	Read Only	RO001-RO012	Boolean	Read/Write
Internal Switches	SW	SW001-SW036	Boolean	Read/Write

Alarm Setpoints

Data associated with the addresses denoted in the device will be returned as +INF. Data values can only be written to Alarm Setpoints that are defined in the device: write operations to undefined Alarm Setpoints will return an error. Write operations are available only for users logged in at the Administrator level and will return an error otherwise.

Scales

Data values for Scale_Hi and Scale_Lo for channels that are skipped will be returned as +INF.

Tag Names

For devices that have unspecified tag names, the driver will construct an internal tag name based on the channel number. For example, the tag name of address 'CH01' will be returned as 'CH01'.

General Device Data

Address Type	Format	Range	Data Types	Access
Administrator Level	Admin		Boolean	Read Only
Date of Last Data	Date		String	Read Only
Time of Last Data	Time		String	Read Only
Model Name of Device	Model		String	Read Only
Host Name of Device	Hostname		String	Read Only
Serial Number of Device	SerialNumber		String	Read Only
IP Address of Device	IP		String	Read Only
Math Communication Data	CDxx	01-30	Float	Write Only
Control Math Execution	MathControl		Short, Word, Byte	Write Only
Reset Alarms	AlarmReset		Boolean	Write Only
Control Command and Response	Command		String	Read/Write
Previous Screen	PreScreen		Boolean	Write Only
Direct Reloading of Configuration	Reset		Boolean	Write Only
SetTime*	Tag		Boolean	Write Only

*The SetTime tag will cause the device time to be updated. Writing 0 or 1 to the tag will update the Device Date and Time, which can be verified from the Date tag and the Time tag. The SetTime tag will always display 0 as it is a Write Only tag. After a successful update, the following message will be posted: "Device Clock set to system time [Device <device_name>]."

Administrator Level

The Admin address type has a value of '1' or 'true' when the user has logged on at the Administrator level and a value of '0' or 'false' when the user has logged on at the User level.

Math Communication Data

The CD address type is only valid for devices equipped with the math option. Write operations to CD addresses for non-math equipped devices will return an error. Write operations are available only for users logged in at the Administrator level and will return an error otherwise.

Model Name of Device

The Model address type will have a string value of 'CX1000' or 'CX2000,' indicating the model series returned by the device.

Control Math Execution

The MathControl address type is only available for devices equipped with the math option. Write operations to the MathControl tag for non-math equipped devices will return an error.

Control Command and Response

The Command address allows the user to send a string command and receive a string response to and from the device. This allows the user to send any command to the device, including commands not directly supported by the driver. This tag is only available to users logged in at the Administrator level. Otherwise, write operations will return an error.

⚠ Use caution when performing write operations using the Command address.

📌 **Note:** The actual number of addresses available for each type depends on the configuration of the Yokogawa device. If the driver finds that an address is not present in the device at Runtime, it will post an error message and remove the tag from its scan list.

Addresses that have Write Only access are assigned a default access of Read/Write; however, data values are unreadable for these addresses and the associated tags are not included in the scan list. The current data value for these tags will always be 0 for numeric data types and null string for string data types.

CX2610 Addressing

The driver supports the following addresses for this device. The default data type for each address type is shown in **bold**.

Measured Channels

Address Type	Format	Range	Data Types	Access
Process Value of Channel	CHxx or CHxx.PV	01-10	Double , Float	Read Only
Alarm Summary of Channel	CHxx.Alarm	01-10	DWord , Short, Word, Byte	Read Only
Alarm Level1 Status of Channel	CHxx.Alarm1	01-10	Short , Word, Byte	Read Only

Address Type	Format	Range	Data Types	Access
Alarm Level2 Status of Channel	CHxx.Alarm2	01-10	Short , Word, Byte	Read Only
Alarm Level3 Status of Channel	CHxx.Alarm3	01-10	Short , Word, Byte	Read Only
Alarm Level4 Status of Channel	CHxx.Alarm4	01-10	Short , Word, Byte	Read Only
Set and Read Level1 Alarm Setpoint	CHxx.ASP1	01-10	Double , Float	Read/Write
Set and Read Level2 Alarm Setpoint	CHxx.ASP2	01-10	Double , Float	Read/Write
Set and Read Level3 Alarm Setpoint	CHxx.ASP3	01-10	Double , Float	Read/Write
Set and Read Level4 Alarm Setpoint	CHxx.ASP4	01-10	Double , Float	Read/Write
Upper Scale Value of Channel*	CHxx.scale_Hi	01-10	Double , Float	Read Only
Lower Scale Value of Channel*	CHxx.scale_Lo	01-10	Double , Float	Read Only
Unit String of Channel*	CHxx.unit	01-10	String	Read Only
Tagname of Channel*	CHxx.tag	01-10	String	Read Only
Status of Channel*	CHxx.status	01-10	String	Read Only
Precision of Channel*	CHxx.Precision	01-10	Short , Word, Byte	Read Only
Lowest Measuring Channel*	CH.Low		Short , Word, Byte	Read Only
Highest Measuring Channel*	CH.High		Short , Word, Byte	Read Only

Internal Loops

Address Type	Format	Range	Data Types	Access
Process Value of Internal Loop	LPxx or LPxx.PV	01-06	Double , Float	Read Only
Setpoint Value of Internal Loop for current SP number	LPxx.SP	01-06	Double , Float	Read/Write
Setpoint Value of Internal Loop for specified SP number	LPxx.SP.n	xx=01-06 n=1-8	Double , Float	Read/Write
Current SP number for Internal Loop	LPxx.SP.Num	01-06	Short , Word,	Read/Write
Output Value of Internal Loop	LPxx.OUT	01-06	Double , Float	Read/Write
Alarm Summary of Internal Loop	LPxx.Alarm	01-06	DWord , Short, Word, Byte	Read Only
Alarm Level1 Status of Internal Loop	LPxx.Alarm1	01-06	Short , Word, Byte	Read Only
Alarm Level2 Status of Internal Loop	LPxx.Alarm2	01-06	Short , Word, Byte	Read Only
Alarm Level3 Status of Internal Loop	LPxx.Alarm3	01-06	Short , Word, Byte	Read Only
Alarm Level4 Status of Internal Loop	LPxx.Alarm4	01-06	Short , Word, Byte	Read Only
Set and Read Level1 Alarm Setpoint	LPxx.ASP1	01-06	Double , Float	Read/Write
Set and Read Level2 Alarm Setpoint	LPxx.ASP2	01-06	Double , Float	Read/Write
Set and Read Level3 Alarm Setpoint	LPxx.ASP3	01-06	Double , Float	Read/Write
Set and Read Level4 Alarm Setpoint	LPxx.ASP4	01-06	Double , Float	Read/Write

Address Type	Format	Range	Data Types	Access
Set and Read Level1 Alarm Setpoint of specified PID#	LPxx.ASP1.n	xx=01-06 n=1-8	Double , Float	Read/Write
Set and Read Level2 Alarm Setpoint of specified PID#	LPxx.ASP2.n	xx=01-06 n=1-8	Double , Float	Read/Write
Set and Read Level3 Alarm Setpoint of specified PID#	LPxx.ASP3.n	xx=01-06 n=1-8	Double , Float	Read/Write
Set and Read Level4 Alarm Setpoint of specified PID#	LPxx.ASP4.n	xx=01-06 n=1-8	Double , Float	Read/Write
Upper Scale Value of Internal Loop*	LPxx.scale_Hi	01-06	Double , Float	Read Only
Lower Scale Value of Internal Loop*	LPxx.scale_Lo	01-06	Double , Float	Read Only
Unit String of Internal Loop (PV)*	LPxx.unit or LPxx.PV.unit	01-06	String	Read Only
Unit String of Internal Loop SP*	LPxx.SP.unit	01-06	String	Read Only
Unit String of Internal Loop OUT*	LPxx.OUT.unit	01-06	String	Read Only
Tagname of Internal Loop*	LPxx.tag	01-06	String	Read Only
Tagname of Internal Loop PV*	LPxx.PV.tag	01-06	String	Read Only
Tagname of Internal Loop SP*	LPxx.SP.tag	01-06	String	Read Only
Tagname of Internal Loop OUT*	LPxx.OUT.tag	01-06	String	Read Only
Status of Internal Loop (PV)*	LPxx.status or LPxx.PV.status	01-06	String	Read Only
Status of Internal Loop SP*	LPxx.SP.status	01-06	String	Read Only
Status of Internal Loop OUT*	LPxx.OUT.status	01-06	String	Read Only
Precision of Internal Loop (PV)*	LPxx.Precision or LPxx.PV.Precision	01-06	Short , Word, Byte	Read Only
Precision of Internal Loop SP*	LPxx.SP.Precision	01-06	Short , Word, Byte	Read Only
Precision of Internal Loop OUT*	LPxx.OUT.Precision	01-06	Short , Word, Byte	Read Only
Proportional band value of Internal Loop for current PID number	LPxx.PID.P	01-06	Double , Float	Read/Write
Proportional band value of Internal Loop for specified PID number	LPxx.PID.P.n	xx=01-06 n=1-8	Double , Float	Read/Write
Integral time value of Internal Loop for current PID number	LPxx.PID.I	01-06	Double , Float	Read/Write

Address Type	Format	Range	Data Types	Access
Integral time value of Internal Loop for specified PID number	LPxx.PID.I.n	xx=01-06 n=1-8	Double , Float	Read/Write
Derivative time value of Internal Loop for current PID number	LPxx.PID.D	01-06	Double , Float	Read/Write
Derivative time value of Internal Loop for specified PID number	LPxx.PID.D.n	xx=01-06 n=1-8	Double , Float	Read/Write
Current PID number for Internal Loop	LPxx.PID.Num	01-06	Short , Word, Byte	Read Only
Set and Read Run/Stop (0=Stop, 1=Run)	LPxx.RUN	01-06	Short , Word, Byte	Read/Write
Set and Read Remote/Local (0=Local, 1=Remote)	LPxx.Remote	01-06	Short , Word, Byte	Read/Write
Set and Read auto/manual/cascade (0=Auto, 1=Manual, 2=Cascade)	LPxx.Mode	01-06	Short , Word, Byte	Read/Write
Lowest Internal Loop Number*	LP.Low		Short , Word, Byte	Read Only
Highest Internal Loop Number*	LP.High		Short , Word, Byte	Read Only
Ramp Up Rate**	LPxx.RUR xx=loop number	01-06	Double , Float	Read/Write
Ramp Down Rate**	LPxx.RDR xx=loop number	01-06	Double , Float	Read/Write

External Loops

Address Type	Format	Range	Data Types	Access
Process Value of External Loop	LPExx or LPExx.PV	01-16	Double , Float	Read Only
Setpoint Value of External Loop	LPExx.SP	01-16	Double , Float	Read/Write
Output Value of External Loop	LPExx.OUT	01-16	Double , Float	Read/Write
Alarm Summary of External Loop	LPExx.Alarm	01-16	DWord , Short, Word, Byte	Read Only
Alarm Level1 Status of External Loop	LPExx.Alarm1	01-16	Short , Word, Byte	Read Only
Alarm Level2 Status of External Loop	LPExx.Alarm2	01-16	Short , Word, Byte	Read Only

Address Type	Format	Range	Data Types	Access
Alarm Level3 Status of External Loop	LPExx.Alarm3	01-16	Short , Word, Byte	Read Only
Alarm Level4 Status of External Loop	LPExx.Alarm4	01-16	Short , Word, Byte	Read Only
Upper Scale Value of External Loop*	LPExx.scale_Hi	01-16	Double , Float	Read Only
Lower Scale Value of External Loop*	LPExx.scale_Lo	01-16	Double , Float	Read Only
Unit String of External Loop (PV)*	LPExx.unit or LPExx.PV.unit	01-16	String	Read Only
Unit String of External Loop SP*	LPExx.SP.unit	01-16	String	Read Only
Unit String of External Loop OUT*	LPExx.OUT.unit	01-16	String	Read Only
Tagname of External Loop*	LPExx.tag	01-16	String	Read Only
Tagname of External Loop PV*	LPExx.PV.tag	01-16	String	Read Only
Tagname of External Loop SP*	LPExx.SP.tag	01-16	String	Read Only
Tagname of External Loop OUT*	LPExx.OUT.tag	01-16	String	Read Only
Status of External Loop (PV)*	LPExx.status or LPExx.PV.status	01-16	String	Read Only
Status of External Loop SP*	LPExx.SP.status	01-16	String	Read Only
Status of External Loop OUT*	LPExx.OUT.status	01-16	String	Read Only
Precision of External Loop (PV)*	LPExx.Precision or LPExx.PV.Precision	01-16	Short , Word, Byte	Read Only
Precision of External Loop*	LPExx.SP.Precision	01-16	Short , Word, Byte	Read Only
Precision of External Loop*	LPExx.OUT.Precision	01-16	Short , Word, Byte	Read Only
Set and Read auto/-manual/cascade (0=Auto, 1=Manual, 2=Cascade)	LPExx.MODE	01-02	Short , Word, Byte	Read/Write
Lowest External Loop Number*	LPE.Low		Short , Word, Byte	Read Only
Highest External Loop Number*	LPE.High		Short , Word, Byte	Read Only

Math Channels

Address Type	Format	Range	Data Types	Access
Process Value of Math Channel	CHxx or CHxx.PV	31-60	Double , Float	Read Only

Address Type	Format	Range	Data Types	Access
Alarm Summary of Math Channel	CHxx.Alarm	31-60	DWord , Short, Word, Byte	Read Only
Alarm Level1 Status of Math Channel	CHxx.Alarm1	31-60	Short , Word, Byte	Read Only
Alarm Level2 Status of Math Channel	CHxx.Alarm2	31-60	Short , Word, Byte	Read Only
Alarm Level3 Status of Math Channel	CHxx.Alarm3	31-60	Short , Word, Byte	Read Only
Alarm Level4 Status of Math Channel	CHxx.Alarm4	31-60	Short , Word, Byte	Read Only
Set and Read Level1 Alarm Setpoint	CHxx.ASP1	31-60	Double , Float	Read/Write
Set and Read Level2 Alarm Setpoint	CHxx.ASP2	31-60	Double , Float	Read/Write
Set and Read Level3 Alarm Setpoint	CHxx.ASP3	31-60	Double , Float	Read/Write
Set and Read Level4 Alarm Setpoint	CHxx.ASP4	31-60	Double , Float	Read/Write
Upper Scale Value of Math Channel*	CHxx.scale_Hi	31-60	Double , Float	Read Only
Lower Scale Value of Math Channel*	CHxx.scale_Lo	31-60	Double , Float	Read Only
Unit String of Math Channel*	CHxx.unit	31-60	String	Read Only
Tagname of Math Channel*	CHxx.tag	31-60	String	Read Only
Status of Math Channel*	CHxx.status	31-60	String	Read Only
Precision of Math Channel*	CHxx.Precision	31-60	Short , Word, Byte	Read Only
Lowest Math Channel*	CHA.Low		Short , Word, Byte	Read Only
Highest Math Channel*	CHA.High		Short , Word, Byte	Read Only

*The data associated with these addresses is only read from the device at the start of a communications session. Once read, the values will not be refreshed until the server has been restarted or the Reset Tag has been invoked. To invoke a reset, write a non zero value to the Reset Tag. Once the Reset Tag has been invoked, the driver will reinitialize all startup data from the device.

**Zero (0) can be written to the tag to disable the ramp parameters. When a 0 is written to the tag, the tag will display +1.inf upon successful disabling.

DI/DO DATA and Internal Switch Status (Style Number S3 or Later)

Address Type	Format	Range	Data Types	Access
Control Digital Inputs	DI	DI001-DI006	Boolean	Read Only
Control Digital Outputs	DO	DO001-DO006	Boolean	Read/Write
Expansion Digital Inputs	RI	RI001-RI012	Boolean	Read/Write
Expansion Digital Outputs	Read Only	RO001-RO012	Boolean	Read/Write
Internal Switches	SW	SW001-SW036	Boolean	Read/Write

Alarm Setpoints

Data associated with the addresses denoted in the device will be returned as +INF. Data values can only be written to Alarm Setpoints that are defined in the device: write operations to undefined Alarm Setpoints will

return an error. Write operations are available only for users logged in at the Administrator level and will return an error otherwise.

Scales

Data values for Scale_Hi and Scale_Lo for channels that are skipped will be returned as +INF.

Tag Names

For devices that have unspecified tag names, the driver will construct an internal tag name based on the channel number. For example, the tag name of address 'CH01' will be returned as 'CH01'.

General Device Data

Address Type	Format	Range	Data Types	Access
Administrator Level	Admin		Boolean	Read Only
Date of Last Data	Date		String	Read Only
Time of Last Data	Time		String	Read Only
Model Name of Device	Model		String	Read Only
Host Name of Device	Hostname		String	Read Only
Serial Number of Device	SerialNumber		String	Read Only
IP Address of Device	IP		String	Read Only
Math Communication Data	CDxx	01-30	Float	Write Only
Control Math Execution	MathControl		Short, Word, Byte	Write Only
Reset Alarms	AlarmReset		Boolean	Write Only
Control Command and Response	Command		String	Read/Write
Previous Screen	PreScreen		Boolean	Write Only
Direct Reloading of Configuration	Reset		Boolean	Write Only
SetTime*	Tag		Boolean	Write Only

*The SetTime tag will cause the device time to be updated. Writing 0 or 1 to the tag will update the Device Date and Time, which can be verified from the Date tag and the Time tag. The SetTime tag will always display 0 as it is a Write Only tag. After a successful update, the following message will be posted: "Device Clock set to system time [Device <device_name>]."

Administrator Level

The Admin address type has a value of '1' or 'true' when the user has logged on at the Administrator level and a value of '0' or 'false' when the user has logged on at the User level.

Math Communication Data

The CD address type is only valid for devices equipped with the math option. Write operations to CD addresses for non-math equipped devices will return an error. Write operations are available only for users logged in at the Administrator level and will return an error otherwise.

Model Name of Device

The Model address type will have a string value of 'CX1000' or 'CX2000,' indicating the model series returned by the device.

Control Math Execution

The MathControl address type is only available for devices equipped with the math option. Write operations to the MathControl tag for non-math equipped devices will return an error.

Control Command and Response

The Command address allows the user to send a string command and receive a string response to and from the device. This allows the user to send any command to the device, including commands not directly supported by the driver. This tag is only available to users logged in at the Administrator level. Otherwise, write operations will return an error.

● Use caution when performing write operations using the Command address.

● **Note:** The actual number of addresses available for each type depends on the configuration of the Yokogawa device. If the driver finds that an address is not present in the device at Runtime, it will post an error message and remove the tag from its scan list.

Addresses that have Write Only access are assigned a default access of Read/Write; however, data values are unreadable for these addresses and the associated tags are not included in the scan list. The current data value for these tags will always be 0 for numeric data types and null string for string data types.

CX2620 Addressing

The driver supports the following addresses for this device. The default data type for each address type is shown in **bold**.

Measured Channels

Address Type	Format	Range	Data Types	Access
Process Value of Channel	CHxx or CHxx.PV	01-20	Double , Float	Read Only
Alarm Summary of Channel	CHxx.Alarm	01-20	DWord , Short, Word, Byte	Read Only
Alarm Level1 Status of Channel	CHxx.Alarm1	01-20	Short , Word, Byte	Read Only
Alarm Level2 Status of Channel	CHxx.Alarm2	01-20	Short , Word, Byte	Read Only
Alarm Level3 Status of Channel	CHxx.Alarm3	01-20	Short , Word, Byte	Read Only
Alarm Level4 Status of Channel	CHxx.Alarm4	01-20	Short , Word, Byte	Read Only
Set and Read Level1 Alarm Setpoint	CHxx.ASP1	01-20	Double , Float	Read/Write
Set and Read Level2 Alarm Setpoint	CHxx.ASP2	01-20	Double , Float	Read/Write
Set and Read Level3 Alarm Setpoint	CHxx.ASP3	01-20	Double , Float	Read/Write
Set and Read Level4 Alarm Setpoint	CHxx.ASP4	01-20	Double , Float	Read/Write
Upper Scale Value of Channel*	CHxx.scale_Hi	01-20	Double , Float	Read Only
Lower Scale Value of Channel*	CHxx.scale_Lo	01-20	Double , Float	Read Only
Unit String of Channel*	CHxx.unit	01-20	String	Read Only
Tagname of Channel*	CHxx.tag	01-20	String	Read Only
Status of Channel*	CHxx.status	01-20	String	Read Only
Precision of Channel*	CHxx.Precision	01-20	Short , Word, Byte	Read Only
Lowest Measuring Channel*	CH.Low		Short , Word, Byte	Read Only
Highest Measuring Channel*	CH.High		Short , Word, Byte	Read Only

Internal Loops

Address Type	Format	Range	Data Types	Access
Process Value of Internal Loop	LPxx or LPxx.PV	01-06	Double , Float	Read Only
Setpoint Value of Internal Loop for current SP number	LPxx.SP	01-06	Double , Float	Read/Write
Setpoint Value of Internal Loop for specified SP number	LPxx.SP.n	xx=01-06 n=1-8	Double , Float	Read/Write
Current SP number for Internal Loop	LPxx.SP.Num	01-06	Short , Word,	Read/Write
Output Value of Internal Loop	LPxx.OUT	01-06	Double , Float	Read/Write
Alarm Summary of Internal Loop	LPxx.Alarm	01-06	DWord , Short, Word, Byte	Read Only
Alarm Level1 Status of Internal Loop	LPxx.Alarm1	01-06	Short , Word, Byte	Read Only
Alarm Level2 Status of Internal Loop	LPxx.Alarm2	01-06	Short , Word, Byte	Read Only
Alarm Level3 Status of Internal Loop	LPxx.Alarm3	01-06	Short , Word, Byte	Read Only
Alarm Level4 Status of Internal Loop	LPxx.Alarm4	01-06	Short , Word, Byte	Read Only
Set and Read Level1 Alarm Setpoint	LPxx.ASP1	01-06	Double , Float	Read/Write
Set and Read Level2 Alarm Setpoint	LPxx.ASP2	01-06	Double , Float	Read/Write
Set and Read Level3 Alarm Setpoint	LPxx.ASP3	01-06	Double , Float	Read/Write
Set and Read Level4 Alarm Setpoint	LPxx.ASP4	01-06	Double , Float	Read/Write
Set and Read Level1 Alarm Setpoint of specified PID#	LPxx.ASP1.n	xx=01-06 n=1-8	Double , Float	Read/Write
Set and Read Level2 Alarm Setpoint of specified PID#	LPxx.ASP2.n	xx=01-06 n=1-8	Double , Float	Read/Write
Set and Read Level3 Alarm Setpoint of specified PID#	LPxx.ASP3.n	xx=01-06 n=1-8	Double , Float	Read/Write
Set and Read Level4 Alarm Setpoint of specified PID#	LPxx.ASP4.n	xx=01-06 n=1-8	Double , Float	Read/Write
Upper Scale Value of Internal Loop*	LPxx.scale_Hi	01-06	Double , Float	Read Only
Lower Scale Value of Internal Loop*	LPxx.scale_Lo	01-06	Double , Float	Read Only
Unit String of Internal Loop (PV)*	LPxx.unit or LPxx.PV.unit	01-06	String	Read Only

Address Type	Format	Range	Data Types	Access
Unit String of Internal Loop SP*	LPxx.SP.unit	01-06	String	Read Only
Unit String of Internal Loop OUT*	LPxx.OUT.unit	01-06	String	Read Only
Tagname of Internal Loop*	LPxx.tag	01-06	String	Read Only
Tagname of Internal Loop PV*	LPxx.PV.tag	01-06	String	Read Only
Tagname of Internal Loop SP*	LPxx.SP.tag	01-06	String	Read Only
Tagname of Internal Loop OUT*	LPxx.OUT.tag	01-06	String	Read Only
Status of Internal Loop (PV)*	LPxx.status or LPxx.PV.status	01-06	String	Read Only
Status of Internal Loop SP*	LPxx.SP.status	01-06	String	Read Only
Status of Internal Loop OUT*	LPxx.OUT.status	01-06	String	Read Only
Precision of Internal Loop (PV)*	LPxx.Precision or LPxx.PV.Precision	01-06	Short , Word, Byte	Read Only
Precision of Internal Loop SP*	LPxx.SP.Precision	01-06	Short , Word, Byte	Read Only
Precision of Internal Loop OUT*	LPxx.OUT.Precision	01-06	Short , Word, Byte	Read Only
Proportional band value of Internal Loop for current PID number	LPxx.PID.P	01-06	Double , Float	Read/Write
Proportional band value of Internal Loop for specified PID number	LPxx.PID.P.n	xx=01-06 n=1-8	Double , Float	Read/Write
Integral time value of Internal Loop for current PID number	LPxx.PID.I	01-06	Double , Float	Read/Write
Integral time value of Internal Loop for specified PID number	LPxx.PID.I.n	xx=01-06 n=1-8	Double , Float	Read/Write
Derivative time value of Internal Loop for current PID number	LPxx.PID.D	01-06	Double , Float	Read/Write
Derivative time value of Internal Loop for specified PID number	LPxx.PID.D.n	xx=01-06 n=1-8	Double , Float	Read/Write
Current PID number for Internal Loop	LPxx.PID.Num	01-06	Short , Word, Byte	Read Only
Set and Read Run/Stop (0=Stop, 1=Run)	LPxx.RUN	01-06	Short , Word, Byte	Read/Write
Set and Read Remote/Local (0=Local, 1=Remote)	LPxx.Remote	01-06	Short , Word, Byte	Read/Write
Set and Read auto/manual/cascade (0=Auto, 1=Manual, 2=Cascade)	LPxx.Mode	01-06	Short , Word, Byte	Read/Write

Address Type	Format	Range	Data Types	Access
Lowest Internal Loop Number*	LP.Low		Short , Word, Byte	Read Only
Highest Internal Loop Number*	LP.High		Short , Word, Byte	Read Only
Ramp Up Rate**	LPxx.RUR xx=loop number	01-06	Double , Float	Read/Write
Ramp Down Rate**	LPxx.RDR xx=loop number	01-06	Double , Float	Read/Write

External Loops

Address Type	Format	Range	Data Types	Access
Process Value of External Loop	LPExx or LPExx.PV	01-16	Double , Float	Read Only
Setpoint Value of External Loop	LPExx.SP	01-16	Double , Float	Read/Write
Output Value of External Loop	LPExx.OUT	01-16	Double , Float	Read/Write
Alarm Summary of External Loop	LPExx.Alarm	01-16	DWord , Short, Word, Byte	Read Only
Alarm Level1 Status of External Loop	LPExx.Alarm1	01-16	Short , Word, Byte	Read Only
Alarm Level2 Status of External Loop	LPExx.Alarm2	01-16	Short , Word, Byte	Read Only
Alarm Level3 Status of External Loop	LPExx.Alarm3	01-16	Short , Word, Byte	Read Only
Alarm Level4 Status of External Loop	LPExx.Alarm4	01-16	Short , Word, Byte	Read Only
Upper Scale Value of External Loop*	LPExx.scale_Hi	01-16	Double , Float	Read Only
Lower Scale Value of External Loop*	LPExx.scale_Lo	01-16	Double , Float	Read Only
Unit String of External Loop (PV)*	LPExx.unit or LPExx.PV.unit	01-16	String	Read Only
Unit String of External Loop SP*	LPExx.SP.unit	01-16	String	Read Only
Unit String of External Loop OUT*	LPExx.OUT.unit	01-16	String	Read Only
Tagname of External Loop*	LPExx.tag	01-16	String	Read Only
Tagname of External Loop PV*	LPExx.PV.tag	01-16	String	Read Only
Tagname of External Loop SP*	LPExx.SP.tag	01-16	String	Read Only
Tagname of External Loop	LPExx.OUT.tag	01-16	String	Read Only

Address Type	Format	Range	Data Types	Access
OUT*				
Status of External Loop (PV)*	LPExx.status or LPExx.PV.status	01-16	String	Read Only
Status of External Loop SP*	LPExx.SP.status	01-16	String	Read Only
Status of External Loop OUT*	LPExx.OUT.status	01-16	String	Read Only
Precision of External Loop (PV)*	LPExx.Precision or LPExx.PV.Precision	01-16	Short , Word, Byte	Read Only
Precision of External Loop*	LPExx.SP.Precision	01-16	Short , Word, Byte	Read Only
Precision of External Loop*	LPExx.OUT.Precision	01-16	Short , Word, Byte	Read Only
Set and Read auto/-manual/cascade (0=Auto, 1=Manual, 2=Cascade)	LPExx.MODE	01-02	Short , Word, Byte	Read/Write
Lowest External Loop Number*	LPE.Low		Short , Word, Byte	Read Only
Highest External Loop Number*	LPE.High		Short , Word, Byte	Read Only

Math Channels

Address Type	Format	Range	Data Types	Access
Process Value of Math Channel	CHxx or CHxx.PV	31-60	Double , Float	Read Only
Alarm Summary of Math Channel	CHxx.Alarm	31-60	DWord , Short, Word, Byte	Read Only
Alarm Level1 Status of Math Channel	CHxx.Alarm1	31-60	Short , Word, Byte	Read Only
Alarm Level2 Status of Math Channel	CHxx.Alarm2	31-60	Short , Word, Byte	Read Only
Alarm Level3 Status of Math Channel	CHxx.Alarm3	31-60	Short , Word, Byte	Read Only
Alarm Level4 Status of Math Channel	CHxx.Alarm4	31-60	Short , Word, Byte	Read Only
Set and Read Level1 Alarm Setpoint	CHxx.ASP1	31-60	Double , Float	Read/Write
Set and Read Level2 Alarm Setpoint	CHxx.ASP2	31-60	Double , Float	Read/Write
Set and Read Level3 Alarm Setpoint	CHxx.ASP3	31-60	Double , Float	Read/Write
Set and Read Level4 Alarm Setpoint	CHxx.ASP4	31-60	Double , Float	Read/Write
Upper Scale Value of Math Channel*	CHxx.scale_Hi	31-60	Double , Float	Read Only
Lower Scale Value of Math Channel*	CHxx.scale_Lo	31-60	Double , Float	Read Only
Unit String of Math Channel*	CHxx.unit	31-60	String	Read Only
Tagname of Math Channel*	CHxx.tag	31-60	String	Read Only

Address Type	Format	Range	Data Types	Access
Status of Math Channel*	CHxx.status	31-60	String	Read Only
Precision of Math Channel*	CHxx.Precision	31-60	Short , Word, Byte	Read Only
Lowest Math Channel*	CHA.Low		Short , Word, Byte	Read Only
Highest Math Channel*	CHA.High		Short , Word, Byte	Read Only

*The data associated with these addresses is only read from the device at the start of a communications session. Once read, the values will not be refreshed until the server has been restarted or the Reset Tag has been invoked. To invoke a reset, write a non zero value to the Reset Tag. Once the Reset Tag has been invoked, the driver will reinitialize all startup data from the device.

**Zero (0) can be written to the tag to disable the ramp parameters. When a 0 is written to the tag, the tag will display +1.inf upon successful disabling.

DI/DO DATA and Internal Switch Status (Style Number S3 or Later)

Address Type	Format	Range	Data Types	Access
Control Digital Inputs	DI	DI001-DI006	Boolean	Read Only
Control Digital Outputs	DO	DO001-DO006	Boolean	Read/Write
Expansion Digital Inputs	RI	RI001-RI012	Boolean	Read/Write
Expansion Digital Outputs	Read Only	RO001-RO012	Boolean	Read/Write
Internal Switches	SW	SW001-SW036	Boolean	Read/Write

Alarm Setpoints

Data associated with the addresses denoted in the device will be returned as +INF. Data values can only be written to Alarm Setpoints that are defined in the device: write operations to undefined Alarm Setpoints will return an error. Write operations are available only for users logged in at the Administrator level and will return an error otherwise.

Scales

Data values for Scale_Hi and Scale_Lo for channels that are skipped will be returned as +INF.

Tag Names

For devices that have unspecified tag names, the driver will construct an internal tag name based on the channel number. For example, the tag name of address 'CH01' will be returned as 'CH01'.

General Device Data

Address Type	Format	Range	Data Types	Access
Administrator Level	Admin		Boolean	Read Only
Date of Last Data	Date		String	Read Only
Time of Last Data	Time		String	Read Only
Model Name of Device	Model		String	Read Only
Host Name of Device	Hostname		String	Read Only
Serial Number of Device	SerialNumber		String	Read Only
IP Address of Device	IP		String	Read Only

Address Type	Format	Range	Data Types	Access
Math Communication Data	CDxx	01-30	Float	Write Only
Control Math Execution	MathControl		Short , Word, Byte	Write Only
Reset Alarms	AlarmReset		Boolean	Write Only
Control Command and Response	Command		String	Read/Write
Previous Screen	PreScreen		Boolean	Write Only
Direct Reloading of Configuration	Reset		Boolean	Write Only
SetTime*	Tag		Boolean	Write Only

*The SetTime tag will cause the device time to be updated. Writing 0 or 1 to the tag will update the Device Date and Time, which can be verified from the Date tag and the Time tag. The SetTime tag will always display 0 as it is a Write Only tag. After a successful update, the following message will be posted: "Device Clock set to system time [Device <device_name>]."

Administrator Level

The Admin address type has a value of '1' or 'true' when the user has logged on at the Administrator level and a value of '0' or 'false' when the user has logged on at the User level.

Math Communication Data

The CD address type is only valid for devices equipped with the math option. Write operations to CD addresses for non-math equipped devices will return an error. Write operations are available only for users logged in at the Administrator level and will return an error otherwise.

Model Name of Device

The Model address type will have a string value of 'CX1000' or 'CX2000,' indicating the model series returned by the device.

Control Math Execution

The MathControl address type is only available for devices equipped with the math option. Write operations to the MathControl tag for non-math equipped devices will return an error.

Control Command and Response

The Command address allows the user to send a string command and receive a string response to and from the device. This allows the user to send any command to the device, including commands not directly supported by the driver. This tag is only available to users logged in at the Administrator level. Otherwise, write operations will return an error.

🔴 Use caution when performing write operations using the Command address.

🔴 **Note:** The actual number of addresses available for each type depends on the configuration of the Yokogawa device. If the driver finds that an address is not present in the device at Runtime, the driver will post an error message and remove the tag from its scan list.

Addresses that have Write Only access are assigned a default access of Read/Write; however, data values are unreadable for these addresses and the associated tags are not included in the scan list. The current data value for these tags will always be 0 for numeric data types and null string for string data types.

Error Descriptions

The following error/warning messages may be generated. Click on the link for a description of the message.

Address Validation

[Address '<address>' is out of range for the specified device or register](#)

[Data Type '<type>' is not valid for device address '<address>'](#)

[Device address '<address>' contains a syntax error](#)

[Device address '<address>' is Read Only](#)

[Missing address](#)

Device Status Messages

[Device '<device name>' is not responding](#)

[Device '<device name>' login failed. Check username and password](#)

[Device '<device name>' login not accepted. Choose username of 'admin' or 'user'](#)

[No more logins at this level on device '<device name>'](#)

[Unable to write to '<address>' on device '<device name>'](#)

[Write allowed for admin level only \(Device '<device name>', Tag '<address>'\)](#)

[Write allowed for devices with math option only \(Device '<device name>', Tag '<address>'\)](#)

Driver Error Messages

[Winsock initialization failed \(OS Error=n\)](#)

[Winsock V1.1 or higher must be installed to use the Yokogawa CX Ethernet device driver](#)

Address '<address>' is out of range for the specified device or register

Error Type:

Warning

Possible Cause:

A tag address that has been specified statically references a location that is beyond the range of supported locations for the device.

Solution:

Verify that the address is correct; if it is not, re-enter it in the client application.

Data Type '<type>' is not valid for device address '<address>'

Error Type:

Warning

Possible Cause:

A tag address that has been specified statically has been assigned an invalid data type.

Solution:

Modify the requested data type in the client application.

Device address '<address>' contains a syntax error

Error Type:

Warning

Possible Cause:

A tag address that has been specified statically contains one or more invalid characters.

Solution:

Re-enter the address in the client application.

Device address '<address>' is Read Only

Error Type:

Warning

Possible Cause:

A tag address that has been specified statically has a requested access mode that is not compatible with what the device supports for that address.

Solution:

Change the access mode in the client application.

Missing address

Error Type:

Warning

Possible Cause:

A tag address that has been specified statically has no length.

Solution:

Re-enter the address in the client application.

Device '<device name>' is not responding

Error Type:

Serious

Possible Cause:

1. The connection between the device and the Host PC is broken.
2. The IP address assigned to the device is incorrect.
3. The connection cannot be established in the specified timeout period.
4. The response from the device took longer to receive than the amount of time specified in the "Request Timeout" device property.

Solution:

1. Verify the cabling between the PC and the PLC device.
2. Verify the IP address given to the named device matches that of the actual device.
3. Increase the Connect Timeout value in the Timeout property group of Device Properties.
4. Increase the Request Timeout property so that the entire response can be handled.

Device '<device name>' login failed. Check username and password

Error Type:

Serious

Possible Cause:

1. The username and password required for login to the device have not been specified in Device Configuration.
2. The username and password were entered incorrectly or entered in non-matching case.
3. The username and/or password specified in Device Configuration is not registered in the device.

Solution:

Re-enter the correct username and password in Device Configuration.

Device '<device name>' login not accepted. Choose username of 'admin' or 'user'

Error Type:

Serious

Possible Cause:

1. The password protected login feature of the device is disabled and the username specified in Device Configuration does not contain the expected user level required for login to the device.
2. The user level was entered incorrectly or entered in non-matching case.

Solution:

Re-enter the correct user level (either 'admin' or 'user') in the username field in Device Configuration.

No more logins at this level on device '<device name>'

Error Type:

Serious

Possible Cause:

There are no more users permitted to login at this user level. Other users may be connected to the device, or a connection may have been made and broken without logging off or disconnecting.

Solution:

1. Check for other user connections that are blocking connection.
2. Make sure that the Keep Alive feature for Ethernet communications is enabled in the device. This will cause the device to disconnect if there is a break in communications.

Unable to write to '<address>' on device '<device name>'

Error Type:

Serious

Possible Cause:

1. The connection between the device and the Host PC is broken.
2. The named device may have been assigned an incorrect IP address.
3. The address specified may be Read Only or may not exist in the current device.

Solution:

1. Verify the cabling between the PC and the PLC device.
2. Verify the IP address given to the named device matches that of the actual device.
3. Check address availability for the device.

Write allowed for admin level only (Device '<device name>', Tag '<address>')

Error Type:

Warning

Possible Cause:

The user is logged on to the named device at the user level and is attempting to write to a tag that is writeable at the administrator level only.

Solution:

Verify the user/admin level used for login.

Write allowed for devices with math option only (Device '<device name>', Tag '<address>')

Error Type:

Warning

Possible Cause:

The named device is not equipped with the math option and a write was attempted to a tag that is available for math operations only.

Solution:

Verify that the tag address exists for the device.

Winsock initialization failed (OS Error=n)

Error Type:

Fatal

OS Error	Indication	Possible Solution
10091	Indicates that the underlying network sub-system is not ready for network communication.	Wait a few seconds and restart the driver.
10067	Limit on the number of tasks supported by the Windows Sockets implementation has been reached.	Close one or more applications that may be using Winsock and restart the driver.

Winsock V1.1 or higher must be installed to use the Yokogawa CX Ethernet device driver

Error Type:

Fatal

Possible Cause:

The version number of the Winsock DLL found on the system is less than 1.1.

Solution:

Upgrade Winsock to version 1.1 or higher.

Index

A

Address '<address>' is out of range for the specified device or register 82

Address Descriptions 23

Allow Sub Groups 16

Attempts Before Timeout 13

Auto-Demotion 13

Automatic Tag Database Generation 21

C

Channel Assignment 10

Channel Properties — Advanced 9

Channel Properties — Ethernet Communications 8

Channel Properties — General 6

Channel Properties — Write Optimizations 8

Communications Timeouts 12

Connect Timeout 12

Create 16

CX1006 Addressing 23

CX1206 Addressing 27

CX2010 Addressing 34

CX2020 Addressing 38

CX2210 Addressing 42

CX2220 Addressing 49

CX2410 Addressing 55

CX2420 Addressing 62

CX2610 Addressing 68

CX2620 Addressing 75

D

Data Collection 11

Data Type '<type>' is not valid for device address '<address>' 82

Data Types Description 20

Delete 15

Demote on Failure 13
Demotion Period 14
Device '<device name>' login failed. Check username and password 84
Device '<device name>' login not accepted. Choose username of 'admin' or 'user' 84
Device '<device name>' is not responding 83
Device address '<address>' contains a syntax error 83
Device address '<address>' is Read Only 83
Device Configuration 17
Device Properties — Auto-Demotion 13
Device Properties — General 10
Device Properties — Redundancy 18
Device Properties — Tag Generation 14
Device Properties — Timing 12
Device Setup 5
Diagnostics 6
Discard Requests when Demoted 14
Do Not Scan, Demand Poll Only 12
Driver 10
Duty Cycle 9

E

Error Descriptions 82
Ethernet Settings 8

G

General 10
Generate 15

H

Help Contents 4

I

ID 10
Identification 6, 10

Initial Updates from Cache 12

Inter-Device Delay 9

M

Missing address 83

Model 10

N

Name 10

Network Adapter 8

No more logins at this level on device '<device name>' 84

Non-Normalized Float Handling 9

O

On Device Startup 15

On Duplicate Tag 15

On Property Change 15

Operating Mode 11

Optimization Method 8

Optimizing Communications 19

Overview 4

Overwrite 15

P

Parent Group 15

R

Redundancy 18

Replace with Zero 9

Request Timeout 13

Respect Tag-Specified Scan Rate 12

S

Scan Mode 12

Simulated 11

T

Tag Counts 7, 11

Tag Generation 14

Timeouts to Demote 14

Timing 12

U

Unable to write to '<address>' on device '<device name>' 85

Unmodified 9

W

Winsock initialization failed (OS Error=n) 86

Winsock V1.1 or higher must be installed to use the Yokogawa CX Ethernet device driver 86

Write All Values for All Tags 8

Write allowed for admin level only Device '<device name>'_ Tag '<address>') 85

Write allowed for devices with math option only (Device '<device name>', Tag '<address>') 85

Write Only Latest Value for All Tags 9

Write Only Latest Value for Non-Boolean Tags 8