# IoT Gateway

© 2025 PTC Inc. All Rights Reserved.

# Table of Contents

IoT Gateway	. 1
Table of Contents	. 2
IoT Gateway	. 6
Overview	. 6
Architectural Summary	. 7
External Dependencies	. 8
General Operation	. 8
Configure the Gateway	
Configuring a Certificate for the REST Server Agent	
Importing a Client-Side Certificate for the MQTT Client Agent	
Importing a Server-Side Certificate for Authentication with Client Agents	
Command Line Steps	12
Windows Console Steps	.12
User Interface	.16
Configuring an Agent	17
Agent Properties – General	. 18
Agent Properties – MQTT Client Connection	.19
Agent Properties – Message	.20
Agent Properties – Security for MQTT Agents	21
Agent Properties – Last Will	.22
Agent Properties – Subscriptions	. 22
Agent Properties – REST Client Connection	. 23
Agent Properties – Header	.24
Agent Properties – Message	.25
Agent Properties – Security for Rest Agents	.26
Agent Properties – REST Server Connection	.26
Working with a REST Server	
Agent Properties – Licensing	. 28
Data	29
Standard Template Data Format	.29
Advanced Template Data Format	30
Adding Tags to an Agent	.33
Add a Single Tag to a Publishing Agent	.33
Add Multiple Tags to a Publishing Agent	. 34
Add a Single Tag to a Non-Publishing Agent	.36
Add Multiple Tags to a Non-Publishing Agent	.37
System Tags	.39
Importing / Exporting CSV Files	.39
Troubleshooting	40
Event Log Messages	.40
Browse rejected: no user credentials were provided in the request and anonymous requests are cur-	42

MQTT agent <agent name=""> failed to process write request on topic <mqtt topic="">. Reason - <json error="">.</json></mqtt></agent>	51
MQTT agent <agent name=""> failed to publish. Reason - <broker url="">.</broker></agent>	52
MQTT agent <agent name=""> failed to publish. Reason - Connection reset.</agent>	52
MQTT agent <agent name=""> failed to publish. Reason - Unable to connect to server.</agent>	52
MQTT agent <agent name=""> publish failed. Reason: <reason>.</reason></agent>	53
MQTT agent <agent name=""> publish failed. Reason - The template is invalid.</agent>	. 53
MQTT agent <agent name=""> is connected to broker <broker url="">.</broker></agent>	53
The MQTT client certificate is expired. Use the Administration utility to import a valid certificate.	. 53
Read rejected for item <tag>: no user credentials were provided in the request and anonymous requests are currently disabled.</tag>	53
Read rejected for item <tag>: the credentials for user <user> are invalid.</user></tag>	54
Read rejected for item <tag>. The tag is disabled.</tag>	54
Read rejected for item <tag>. The tag has not been added to the plug-in.</tag>	54
REST client <agent name=""> published events buffer is full. Dropping new data change events.</agent>	. 54
REST client <agent name=""> failed to parse payload.</agent>	55
REST client <agent name=""> failed to parse payload template.</agent>	55
REST client <agent name=""> processing update.</agent>	. 55
REST client <agent name=""> publish failed. Reason - Connection refused: connect.</agent>	55
REST client <agent name=""> publish failed. Reason - Read timed out.</agent>	56
REST client <agent name=""> publish failed. Reason: <reason>.</reason></agent>	56
REST client <agent name=""> publish failed. Reason - SSL configuration error.</agent>	56
REST client <agent name=""> publish failed. Reason - The template is invalid.</agent>	. 57
REST client <agent name=""> publish failed. Reason - Unexpected EOF.</agent>	57
REST client <agent name=""> returned HTTP error <http error="">, buffering records.</http></agent>	57
REST client <agent name=""> started publishing to <rest server="" url="">.</rest></agent>	57
REST server <agent name=""> started at <url and="" port="">.</url></agent>	. 58
REST server <agent name=""> - failed to start on <url and="" port="">. Reason - Address already in use: bind.</url></agent>	. 58
Running with Java <full java="" version="">.</full>	58
Template error on line <number>: found: <string>.</string></number>	58
The REST server certificate has been reissued.	58
The REST server certificate has been imported.	59
The REST server certificate has expired. Please use the Administration utility to re-issue the certificate	. 59
Unable to send data for item <tag> on connection <agent name="">. The licensed item count of <li>count&gt; items has been reached.</li></agent></tag>	59
Unable to start secure REST server <agent name=""> at <url and="" port="">: missing or invalid certificate</url></agent>	59
Unable to use network adapter <network adapter=""> for REST server <agent name="">. Binding to localhos only.</agent></network>	
Unsupported JVM: please install or configure a 32-bit Java 1.7 or higher JRE or JDK.	60
Write request failed on item <tag>. The write data type <data type=""> cannot be converted to the tag data type <data type="">.</data></data></tag>	
Write rejected for item <tag>; invalid write format.</tag>	
Write rejected for item <tag>: no user credentials were provided in the request and anonymous request</tag>	
are currently disabled.	
Write rejected for item <tag>: the credentials for user <user> are invalid.</user></tag>	
Write rejected for item <tag>; unsupported data type <type>.</type></tag>	61

Write rejected for item <tag>. The tag is disabled.</tag>	61
Write rejected for item <tag>. The tag has not been added to the plug-in.</tag>	61
Index	63

# IoT Gateway

Help version 1.079

# CONTENTS

#### **Overview**

What is the IoT Gateway? What can the plug-in do? What other software is needed to run the IoT Gateway? What is the data format?

#### **Configuring Agents**

How do I add an agent connection? How do I add an IoT Gateway tag item?

#### Troubleshooting

How do I find and correct issues? What messages does the IoT Gateway produce?

© 2025 PTC Inc. All Rights Reserved.

# Overview

The "Internet of Things" IoT Gateway is an optional feature that allows system and device tags to be published to third-party endpoints through industry standard IP based protocols. When the value for a configured tag changes or when a publish rate is met, an update is sent to the corresponding third-party endpoint with a configurable payload of tag ID, value, quality and timestamp in a standard JSON format. The IoT Gateway offers the following features:


- Ability to publish data consisting of a name, value, quality, and timestamp from any data source in the server (e.g. drivers, plug-ins, or system tags)
- Standard human readable JSON data format
- Support for publishing via MQTT and REST Client agents
- · Support for reading data from MQTT Client and REST Server agents
- Configurable data collection rate, as frequent as 10 milliseconds up to once per 27.77 hours (99999990 milliseconds) for the REST and MQTT Client
- Configurable data publish rate, as frequent as 10 milliseconds up to once per 27.77 hours (99999990 milliseconds) for the REST and MQTT Client
- Support for authentication and TLS / SSL encryption on all agents
- Support for user-level access based on the User Manager and Security Policies Plug-In
- · Configurable header and payload information for integration with different third party endpoints

# **Architectural Summary**

The IoT Gateway feature includes two main components:

- The server plug-in (IoT\_Gateway.dll) is responsible for:
  - Configuration of the MQTT, REST client and, REST server agents
  - Data collection from the server runtime
  - Configuration of the Gateway settings
  - License enforcement
- The IoT Gateway system service (server\_iotgateway.exe), which:
  - Manages the connections to each third party endpoint
    - · Buffers data collected from the plug-in
    - Provides the authentication and encryption layer to each agent

This diagram shows the layout of the IoT Gateway and components. The plug-in and gateway install on the same machine with KEPServerEX. KEPServerEX uses drivers to connect to data sources. That data is collected in the plug-in and sent to the gateway. The gateway publishes that data to the configured endpoint(s). In this diagram, data flows from the device / data sources at the bottom up to the endpoints at the top.

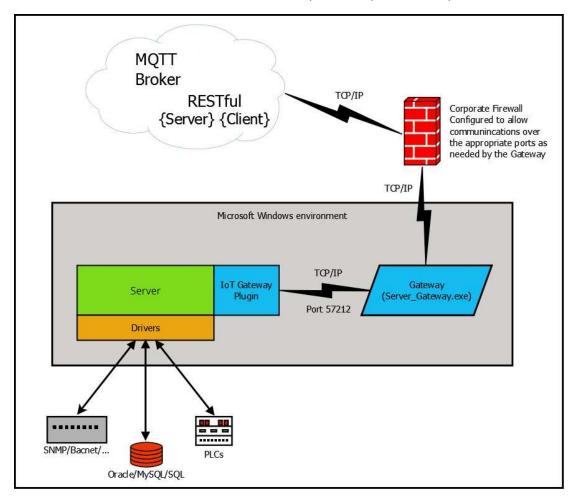

# **External Dependencies**

WINDOWS: For the IoT Gateway to run, the server requires a working 32-bit Java or OpenJDK-based JRE or full JDK installation. At this time, a 64-bit JRE or JDK is not supported. The most current supported version of Java is recommended for use with the IoT Gateway.

It is recommended that updates for Java be applied as they become available.

Tip: Java does not need to be enabled in a browser for the gateway to run.

#### Notes:

- 1. Because the IoT Gateway is a product that has the potential to push data across the Internet to third-party endpoints, configuring the host computer or corporate firewall appropriately to allow just the specific ports that those endpoints are configured to use is recommended.
- 2. To prevent the loss of data and to keep the server running properly, installing Java updates while in production is not recommended. The runtime service and gateway service should be taken offline before a Java update is run. With Java 8 a new version is placed side by side with the existing version, allowing multiple versions of Java to exist on the computer at the same time. In this scenario, the default gateway behavior is to continue to use the old version of Java 8 until a reboot, an IoT Gateway restart or a change to the Java configuration in the Server Settings. If a JRE or JDK is specified to use for the IoT Gateway in the Server Settings, it will continue to use that version even after an update. The version of Java running is available through the Event log. Please see the online Support Site for specific recommendations for updating Java.

# **General Operation**

This section explains how the two components, server runtime, and java gateway, work together to form the basis of the IoT Gateway. This also serves as an introduction to the terminology used in this document.

#### Initialization

An agent configuration is created using the IoT Gateway from within the Server Configuration user interface. Details of this are covered later in the document. When an agent is configured and a runtime connection with the Server Configuration exists, the server\_iotgateway service starts as directed by the Plug-in. At this time, the configuration is transferred from the Plug-in to the gateway where it is initialized. There may be multiple configurations for the same type of endpoint in the Plug-In. Each of these configurations creates its own instance on the gateway.

#### Startup

At system startup with a configured agent, the Server Runtime loads its project file (e.g. default.opf). Upon detecting that an agent is defined, the plug-in starts the server\_iotgateway service. The plug-in establishes a connection to the gateway service and transmits the active agent configuration(s).

#### Data Updates

Data updates are managed by the plug-in for the REST, and MQTT clients. The agent creates a server item reference from each configured tag and polls for data at the configured scan rate like any other client. Scan rates are configured on a per tag basis. The updates received are forwarded to the Java gateway service, where they are buffered and eventually pushed to the third-party endpoint at the configured publish rate.

Each data update persisted to the agent consists of four elements: ID, value, quality, and timestamp.

In the default "narrow format," new data is pushed to the Java gateway when there is a change in value. More than one value change may be published per tag if more than one value update was received before the next publish time. All buffered data is sent with narrow format. The **Every Scan** feature sends an update to the gateway to be published to an endpoint for every good-quality scan of the tag whether or not there was a data change. A bad-quality scan will be sent only once. When the "every scan" option is set on a tag, the deadband setting for that tag is ignored. The "Wide format" option sends only the last data update for every tag enabled on that agent on each publish whether there was a data update or not. No buffered data is sent with the "Wide format" option.

# **Data Buffer**

Each individual agent has a buffer of 100,000 events in case the third-party endpoint is unreachable. An event is a single value change of a single tag that is configured on that agent. The buffer stores the oldest 100,000 events;

when full, it drops new data coming in. This buffer is entirely in memory and is not written to disk. There is no buffer enabled when using the "wide format" publish on the MQTT and REST client agents.

#### Shutdown

When the Server Runtime receives a request to shutdown, the IoT Gateway is responsible for stopping data collection. After sending the final tag updates, the IoT Gateway uses the messaging interface to tell the server gateway service to close any active TCP/IP connections to third-party endpoints.

# Configure the Gateway

The IoT Gateway administrative settings are automatically configured on installation. The server\_iotgateway service is configured from the Settings sections of the Administration menu. This is where Java settings and gateway-level changes may be made. Generally, these settings do not need to be adjusted once established for the IoT Gateway to function properly. If the settings need to be adjusted, access the IoT Gateway system settings by right-clicking on the Administration icon located in the system tray and selecting **Settings | IoT Gateway**. The agents and tags themselves are configured from the IoT Gateway section of the **user interface**.

Tip: If the Administrative icon is not in the system tray, re-launch Settings... by navigating to the Administration folder from the Start menu.

Runtime Options	Event Log	Pro	gID Redirect		User Manager			
Administration	Con	Configuration		Runti	me Process			
Configuration API Service	e Security	Policies	Local Hist	torian	IoT Gateway			
Connection Enter the TCP/IP port f	or communication	between th	ne Runtime a	nd Gatew	ay:			
Java <ul> <li>Java</li> <li>Use the latest installed JRE. The JRE will be located at runtime.</li> <li>Use the JRE at:</li> </ul>								
Advanced Settings.								
REST Server		MQT	T Agent					
Manage Certificate.		1	lanage Certi	ficate				
	ОК	Ca	incel	Apply	Help			

#### In the Connection area:

**Port**: specifies the TCP/IP port that the server runtime and configuration use to communicate with the gateway service. The valid range is 1024 to 65535. The **Default** button populates the field with the default port number of 57212, configured by the server.

🛡 Tips:

- 1. The default port is recommended unless there is a conflict with another application using that port.
- 2. Before changing the port setting, verify there is no conflict with the new port number.

3. The gateway service does not accept remote connections, so there should be no firewall implications associated with this port assignment.

In the Java area:

Use latest installed version of the JRE locates and utilizes the newest JRE installed on the system when the IoT Gateway starts.

To specify a specific JRE, de-select this option and enter the path to the JRE or use the Browse (...) button to locate the JRE.

Tip: If Use latest installed version of the JRE is selected and the Java version is updated on the machine, the gateway service automatically starts using the updated version the next time the gateway is started. If this option is disabled, the gateway service continues to use the specified version.

Advanced Settings... allow Java-specific settings to be used. These settings should only be changed if instructed by Technical Support.

In the REST Server area:

Click on the Manage Certificate... button to configure security certificate use for the REST server.

In the MQTT Agent area:

Click on the Manage Certificate... button to configure security certificate use for the MQTT agent.

#### See Also:

Configuring a Certificate for the REST Server Agent Importing a Client-Side Certificate for MQTT Client Agent Importing a Server-Side Certificate for Authentication with Client Agents

# Configuring a Certificate for the REST Server Agent

A certificate for the gateway can be viewed, exported, imported, or reissued through the **Administration | Set-tings...** menu.

REST Server Certificate	<b>—</b>						
Reissuing or Importing a REST server Certificate will require disabling and enabling the REST Server agents to take affect.							
View REST server certificate	Generated by Admin@VMware-Window7-x64 on 2015-08-18T18:21:17.712 using OpenSSL 1.0.2d 9 Jul 2015						
Export REST server certificate	1.0.20 9 Jul 2015						
Reissue REST server certificate							
Import REST server certificate							
	Close Help						

View REST server certificate... This displays the details of the current certificate.

**Export REST server certificate**... Use this button to save the current certificate in a .DER format for importing into third-party REST clients.

Reissue REST server certificate This creates a new certificate, replacing the current certificate.

Import REST server certificate... Use this button to import a certificate in .PFX format, only necessary using a custom-created certificate.

• Note: When reissuing or importing a certificate, the new certificate does not take effect until the REST server endpoint(s) are stopped and restarted by disabling and re-enabling them or by reinitializing the server runtime.

See Also: Configuring the Gateway

#### Importing a Client-Side Certificate for the MQTT Client Agent

A client certificate used by all MQTT Agent objects can be imported and viewed through the **Administration | Settings...** menu. A MQTT client certificate needs to be imported when connecting to MQTT brokers (e.g AWS IoT) that require two-way authentication; also known as Client Certificates or Client Authentication. When using TLS with two-way authentication the client provides a certificate that allows the server (MQTT broker) to identify and authenticate the client.

MQTT Agent Certificate	x						
Import a certificate for use by the MQTT Client Agent. Importing a certificate when a certificate has already been imported replaces the existing certificate.							
Import New Certificate	No certificate has been imported.						
View Certificate							
	<u>C</u> lose <u>H</u> elp						

**Import New Certificate** Use this button to import a certificate in .PFX, .DER, .CER, .CRT, or .PEM format. PFX certificates contain the private key, but may be password protected. All of the other certificate types require the user to select an accompanying private key file, which may be password protected.

View Certificate This displays the details of the current certificate.

Note: When importing a certificate, the new certificate does not take effect until the MQTT Client Agent(s) are stopped and restarted by disabling and re-enabling them or by reinitializing the server runtime.

#### See Also: Configuring the Gateway

# Importing a Server-Side Certificate for Authentication with Client Agents

The REST client and MQTT client agents will receive a server-side certificate from their intended targets when these agents are configured for secure connections (HTTPS or MQTT over TLS). For authentication to be successful, a user may need to make the server-side certificate's Certificate Authority Root Certificate accessible to the agents for use during connection negotiation. If the server certificate is self-signed, a user must make a copy the server's self-signed certificate accessible to the agents. The client agents use the Microsoft Windows, computer-level, trusted certificate store to keep track of these certificates. By using this store, most recognized certificate authorities are already approved. To import a certificate, use the below instructions.

Note: It is necessary to log in to the computer with an account that is part of the Local Administrators user group to add certificates to the appropriate Windows certificate store.

See Also: <u>Configuring a Gateway Certificate</u>, <u>Importing an MQTT Certificate</u>

# **Command Line Steps**

- 1. From the Start menu, select All Programs.
- 2. Choose Accessories then right-click on Command Prompt and select Run as Administrator from the menu.
- 3. In the command prompt window, navigate to the location of the certificate.
- Enter the command: certutil -addstore "Root" <CertificateName> where the <CertificateName> is the name of the .cer or .crt file.
- 5. Press Enter to execute the command.
- 6. Verify the import is complete when several lines of output appear ending with: CertUtil: -addstore command completed successfully.

# Windows Console Steps

- 1. From the Start menu, select All Programs.
- 2. Choose Accessories | Run.
- 3. In the Run box, type "mmc" and click OK.

🖅 Run	
	Type the name of a program, folder, document, or Internet resource, and Windows will open it for you.
Open:	mmc 🗸
	This task will be created with administrative privileges.
	OK Cancel Browse

4. In the console window, choose File | Add/Remove Snap-in...

ᡖ c	onsole1 - [Console Root]							
<b>6</b>	ile Action View Favorites Window	Help						
4	New	Ctrl+N						
	Open	Ctrl+0						
	Save	Ctrl+S						
	Save As							
	Add/Remove Snap-in	Ctrl+M						
	Options							
	1 C:\Windows\system32\wf							
	2 C:\Windows\system32\compmgmt							
	3 C:\Windows\system32\devmgmt							
	Exit							

5. Select **Certificates** on the left.

ailable snap-ins:			Selected snap-ins:	
nap-in	Vendor	*	Console Root	Edit Extensions
ActiveX Control	Microsoft Cor Microsoft Cor			Remove
Certificates Component Services	Microsoft Cor Microsoft Cor	E		Move Up
Computer Managem	Microsoft Cor Microsoft Cor		Add >	Move Down
Disk Management	Microsoft and Microsoft Cor			
Folder	Microsoft Cor			
Group Policy Object	Microsoft Cor			
IP Security Monitor	Microsoft Cor			
IP Security Policy M	Microsoft Cor			
Link to Web Address	Microsoft Cor	-		Advanced


6. Click the **Add** button.

Certificates snap-in
certificates shap in
This same is will show a second so difference for
This snap-in will always manage certificates for:
Muuner noosuut
My user account
Service account
O Controo Boodant
Omputer account

- 7. Select Computer account and then click Next >.
- 8. Select Local Computer and click Finish.

Select Computer		×
Select the computer you wan	t this snap-in to manage.	
This snap-in will always mar	lage:	
Ocal computer: (the computer: (the computer)	omputer this console is running on)	
Another computer:	Browse	
Allow the selected com only applies if you save	uputer to be changed when launching from the command line. This a the console.	

- 9. Back in the Add or Remove Snap-ins window, click OK.
- 10. Verify there is a Certificates (Local Computer) listing in the Console window.

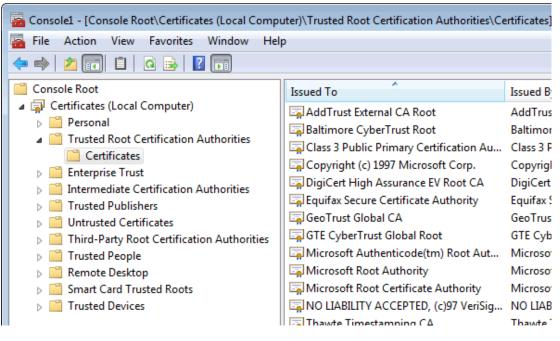

- 11. Expand the Certificates listing, then expand Trusted Root Certification Authorities.
- 12. Click on Certificates and verify a listing of all the Root certificates appears.
- 13. Locate the self-signed certificate to import for the MQTT and REST client.

14. Right-click on Certificates and select All Tasks | Import...

Console1 - [Conso	le Root\Certificat	tes (Local Compu	ter)\Trusted Root Ce	rtificatior
🚡 File Action V	iew Favorites	Window Help		
🧢 🔿 🔁 📊 [	1   🛃 🧕   🕻			
Console Root		Issued To	*	Issued
▲ ☐ Certificates (L	ocal Computer)	🔄 AddTrust Ext	ernal CA Root	AddTru
Personal		🔄 🖾 Baltimore Cy	berTrust Root	Baltimo
A Irusted Ro	oot Certification	Class 3 Publi	<u>c Primary Certificat</u>	Class 3
⊳ 📫 Enter	All Tasks	+	Import	yriç
Interior	View	•	Assurance EV Ro	DigiCer
Trust	New Window fr		Certificate Auth	Equifax
Untri	New Window fr	om Here	al CA	GeoTru
Third	New Taskpad Vi	ew	st Global Root	GTE Cy

- 15. In the Certificate Import wizard, click Next on the initial page.
- 16. Click **Browse...** to locate and select the certificate to import (most client certificates are in a .cer or .crt format).

Certificate Import Wizard	×
File to Import Specify the file you want to import.	
File name: C:\Users\Admin\Desktop\Self Signed.crt	Browse
Note: More than one certificate can be stored in a single file in the foll Personal Information Exchange- PKCS #12 ( PEX_P12)	lowing formats:

- 17. Click Next >.
- 18. Verify that **Place all Certificates in the following store** is selected and that store is the Trusted Root Certification Authorities.
- 19. Click Next >.
- 20. On the final page of the wizard, click Finish.

21. A pop-up message will confirm if the import was successful. Click OK, and close the Console window.



# **User Interface**

Within the Configuration window, the IoT Gateway is accessible from either the **View** menu or from the Selector drop down menu in the toolbar. Once the IoT Gateway is selected, the interface should appear as below:

File Edit View Tools Run	time Help		
🗋 📸 🗟 📓 🏷 🙆 🤇	🔁 🕥 🖲 🚰 🖌 🕫 👗 📉 🧱		
□ 🔂 Project	Server Tag	State /	D ^
in the second s	Channel1StatisticsFailedReads	Enabled	D
	Channel1StatisticsFailedWrites	Enabled	D
	Channel1StatisticsMaxPendingReads	Enabled	D _
	Channel1StatisticsMaxPendingWrites	Enabled	D =
Droject View	Channel1Statistics	Enabled	L
Project View	Channel1Statistics_PendingReads	Enabled	D
	Channel1.Device1SystemRequestTime	Enabled	ЬШ
	Channel1.Device1SystemScanMode	Enabled	S
	Channel1.Device1SystemScanRateMs	Enabled	D 🚽
	<		•
Date 🗸 Time	Source Event		
	Event Log		
	Eventeog		
< [	III		•

**Project Tree View**: displays IoT Gateway agents. Right-click in this view to configure or edit agents, create IoT items, import or export a CSV, or access the agent properties.

**Detail View**: displays IoT items for the selected agent. Right-click in this view to add, edit, cut, copy, paste, and delete IoT items within an agent. Users can also cut, copy, and paste items from one agent to another.

**Event Log**: displays three types of messages: General Messages, Warnings, and Errors. The Source column displays "IoT Gateway" to indicate events from this plug-in.

Note: If the IoT Gateway is not available from the View menu or drop-down; re-run the setup, choose the modify option, and install the IoT Gateway.

Consult the server help system for more details about menu and button functions.

# **Configuring an Agent**

An agent configuration is required to begin publishing data to a third party endpoint. At least one agent needs to be configured with one active tag for the gateway service to start. Follow the steps below to configure a new agent.

1. Click on the **Add Agent...** text or right-click any blank area in the agent pane and select **New Agent** from the pop up menu. Alternatively, click on the New Agent icon in the toolbar.



2. In the New Agent dialog, enter a name for the agent and select the type: MQTT Client, REST Client, or REST Server agent. Click Next >.

New Agent		×
Enter the nam	ne and choose the type of Agent to create.	
Agent		
Name:	Agent	
Type:	MQTT Client	
	MQTT Client REST Client	
	REST Server	
	< Back Next > Cancel Help	

3. Select the type of agent to configure:

MQTT Client REST Client REST Server

# **Changing an Agent Configuration**

Agent settings can be updated after configuration. To access the settings, double-click the agent name or rightclick on the agent and select **Properties**. Changes take effect immediately once submitted. This causes the gateway to reload the agent configuration.

Notes:

- 1. If there are any events in the agent's buffer when a property change is made, those events are not lost; they are pushed to the updated configuration.
- 2. Disabling an agent causes its buffer to be dropped.
- 3. If the endpoint URL is changed after the connection is created, no new initial update is sent. Only buffered values or new values are delivered to the new endpoint.

Click the **Default** button to reset contents back to the initial settings.

# Agent Properties – General

Property Groups	Identification	
General	Name	Agent
Client	Description	
Header	Туре	
	Configuration	
Message Security	Enabled	Yes
Licensing	Ignore Quality Changes	No
Licensing		

# Identification

Name: Specify or alter name identifying this client or connection.

**Description**: Enter a string or phrase to identify this client or connection.

**Type**: Verify the agent type:

MQTT Client REST Client REST Server

# Configuration


Enabled: Set Yes or No to make the selected connection active or inactive.

• Tip: Agents can be enabled or disabled multiple ways. Select the agent in the Project Tree View and:


• Right-click and select Properties... from the drop-down menu, then change the value for Enable property.

Property Groups		
General	Name	Agent
Client	Description	
Licensing	Туре	
	Configuration	
	Enabled	Yes 💌
	Ignore Quality Changes	No
		Yes

• Set Enable or Disable.

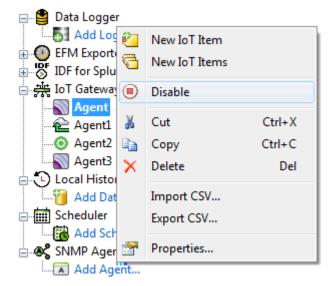

• Click the Enable or Disable button in the toolbar.

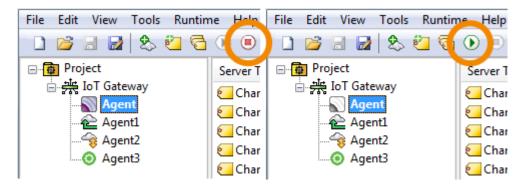

**Ignore Quality Changes**: Set this property to **Yes** to only receive changes in the tag value in the client. This can be helpful when constant communication with a device is an issue and quality changes are not desired.

• Note: If this property is set to Yes; the Agent is a Rest Server; the quality of a tag has gone bad; and, if a REST client requests the value for that tag, the last value that had good quality is retrieved. This is considered expected behavior with the Rest Server and this property.

# Agent Properties – MQTT Client Connection

Once the agent type is selected as an MQTT client, the following properties must be defined.

Property Groups	MQTT Broker		
General	URL	tcp://localhost	
Client	Topic	iotgateway	
Message	Publish		
Security	QoS	1 (At least once)	
Last Will	Publish Type	Interval	
Subscriptions	Rate (ms)	10000	
Licensing	Format	Narrow Format	
	Max Events per Publish	1000	
	Transaction timeout in (s)	5	
	Send Initial Update	Yes	

**URL**: the IP address or URL and port of the endpoint for the agent connection. If the endpoint uses a TSL/SSL connection, adjust the URL to use "ssl://".

• Note: The URL field MUST be in the format "tcp://<host>:<port>" or "ssl://<host>:<port>" where <host> is the IP address or URL and <port> is the port of the end point being targeted. There should be no additional characters or "/" after the port of the end point.

Topic: the name used to filter or organize data published on the broker.

**QoS**: the MQTT setting for publishing data Quality of Service. Choices include: 0 (at most once), 1 (At least once), 2 (exactly once).

Publish Type: specify whether to publish updates at a set rate (Interval) or On Data Change. The default setting is Interval. When selecting On Data Change, the Rate and Format settings are disabled.

Rate (ms): the frequency at which the agent pushes data to the endpoint. The range is from 10 to 99,999,990 milliseconds.

Format: select from the following options:

Wide Format (every tag in every publish): produces an output that includes all enabled tags in the agent with every scan regardless of value or quality changes. This format guarantees a consistent data format on every publish. Wide format sends only the latest value for each tag and has no buffer. If a publish fails while using wide format, the next publish is the latest scanned values for each tag.

**Narrow Format**: produces output based on tags that have changed value or quality. This format buffers data and publishes all tag data changes to an endpoint.

Max. events per: adjusts the number of tag events the gateway packages in a single transmission when using narrow format.

**Transaction timeout**: set the time, in seconds, the server waits for a single transaction to complete. The range is from 1 to 60 seconds.

Send Initial Update: specifies if the initial update of each tag should be sent out when the agent starts.

If needed, enter in the Client ID, Username, and Password for the broker being connected in the MQTT Client -Security dialog.

Refer to MQTT Client Security for more information.

Tip: Confirm the MQTT connection is publishing to the broker and the broker is receiving. Check the Event Log for errors.

See Also: Security Adding Tags Message

# Agent Properties – Message

To change the order of the default JSON data load or to remove data items, access the agent **Properties** and expand the **Message** group. Properties, such as Template, access an editing dialog where the format can be updated.

Property Groups	Message	
General	Message Format	Standard Template
Client	Template	timestamp:  SERVERTIMESTAMP values:  VALUES
Message	Expansion of [VALUES]	id: TAGNAME v: TAGVALUE q: TAGQUALITY t: TAGTIMESTAMP
Security		
Licensing		

Message Format: select either Standard Template or Advanced Template as the message format.

**Template:** identify any data to be sent before or after the JSON payload. This data is sent once per publish. Each variable may be preceded by any word or name, followed by a colon, then the variable. Key value pairs of static text may be included. To access the multi-line editor, click the text in Template field. Valid variables are:

- |SERVERTIMESTAMP| the time and date when the gateway published the data to the endpoint, in UNIX or POSIX time format
- |SERVERISO8601UTC| the date and time of the publish represented as a string in the ISO8601-1-2019 standard, for the UTC time zone
- |SERVERISO8601LOCAL| the date and time of the publish represented as a string in the ISO8601-1-2019 standard, for the server's LOCAL time zone
- |SERVERDATE| the same date and time as the timestamp, but in human-readable form
- |VALUES| the combined payload of the following box

**Expansion of [VALUES]:** the format for the JSON payload delivered to the endpoint. These values may be reordered or removed. A single publish event to the endpoint may include multiple instances of the data in this box. For example, if a tag had four data changes between publish events, there would be four complete JSON strings for that tag within this array. As with the Format box, each variable may be preceded by any desired word or descriptor. A colon is needed to separate the name from the variable. Valid variables are:

- |CHANNEL| The name of the channel without the fully qualified path
- |DEVICE| The name of the device without the fully qualified path
- |TAGNAME| The name of the selected tag
- |TAGVALUE| The value of the tag
- [TAGQUALITY] This denotes if the tag was read as good or bad
- [TAGTIMESTAMP] This is the time when the TAGVALUE was received
- |TAG| The name of the tag without the fully qualified path
- |TAGADDRESS|<sup>(1)</sup> The address of the tag
- |TAGDESCRIPTION|<sup>(1,2)</sup> The description of the tag
- [TAGCLIENTACCESS]<sup>(1)</sup> This denotes if the tag can be written to or not
- |TAGISO8601UTC| This is the time when the TAGVALUE was received, represented as a string in the ISO8601-1-2019 standard, for the UTC time zone
- |TAGISO8601LOCAL| This is the time when the TAGVALUE was received, represented as a string in the ISO8601-1-2019 standard, for the server's LOCAL time zone

• Note<sup>(1)</sup>: These macros are only updated in an agent on start-up (enable/disable cycle). Any changes to the underlying server tag properties are not passed through to the agents at runtime. To update these values, moment-arily Disable then Enable the agent after server tag configuration changes have been made.

• Note<sup>(2)</sup>: The |DESCRIPTION|, |TAGDESCRIPTION|, |CHANNEL|, and |DEVICE| variables work for most drivers, but do not work with the tags under the Advanced Tags Plug-In.

See Also: Advanced Template, Standard Template

# Agent Properties – Security for MQTT Agents

To configure or change MQTT agent authorization, access **Properties**, then specify **Security** to adjust the credentials as needed.

Property Groups	Credentials	
General	Client ID	
Client	Usemame	
Message	Password	
Security	🗉 TLS Configuration	
Last Will	TLS Version	Default
Subscriptions	Client Certificate	Disable
Licensing		

Client ID: Specify or confirm the unique identity for this agent's communication with the broker. Most brokers do not need a Client ID to connect.

Username: Enter the authorized user for authentication on the broker.

Password: Enter the password for basic authentication on the broker.

Notes:

- If not using an SSL encrypted connection, the username and password are sent as plain text to the broker. This is a limitation of the protocol.
- The connection publishes to the broker. To verify the broker is receiving, check the Event Log for errors.
- Connecting multiple MQTT Agents to a Broker using the same Client ID can introduce connectivity loss for one/many of the agents using the same Client ID.

**TLS Version**: Specify the Transport Layer Security (TLS) version to use when connecting securely. The choices are Default, v1.0, v1.1, and v1.2. When Default is selected, the version of TLS that is used depends on the Java virtual machine that is being used. Users should choose the highest TLS version support by the MQTT Broker.

**Client Certificate**: Enable to support application-based authentication, also known as two-way authentication. The client certificate is configured in the IoT Gateway tab of the Server Administration.

#### See Also:

Importing an MQTT Certificate, Configuring a Self-Signed Certificate Consult the documentation for server, User Manager, and Security Policies Plug-in.

# Agent Properties – Last Will

The "Last Will and Testament" (LWT) is a convention for MQTT to notify subscribed clients when a client has disconnected unexpectedly without a "DISCONNECT" notice. To enable and configure an MQTT Last Will and Testament, double-click on the agent name or right-click on the agent and select **Properties**. Then select the **Last Will** group.

Last Will	
Enable Last Will and Testament	No
Торіс	
Message	

Enable Last Will and Testament: Select Yes or No to enable a "last will" message. The default setting is No.

**Topic:** identifies the topic or path to serve as the last will and testament message.

**Message:** contains the text that subscribed clients will receive in the last will and testament message. This is typically an explanation of the ungraceful disconnect, such as "offline" or "unexpected exit" to help the client.

In addition to the Last Will message, the MQTT agent publishes a message to the Last Will topic if the first data publish succeeds and when the MQTT agent is shut down due to a project edit, server reinitialize, or server shutdown.

On first successful publish, the following text is published to the Last Will topic if the feature is enabled:

"Server is online."

On graceful shutdown, the following text is published to the Last Will topic if the feature is enabled:

"Server is shutting down."

#### Agent Properties – Subscriptions

The MQTT agent can be configured to subscribe to a topic on the broker, allowing other publishers to write to tags under that agent. When enabled, the agent listens to this topic with a QOS of 0 for properly formatted JSON to write to a tag.

Double-click on the agent name or right-click on the agent and select Properties. Then select Subscriptions.

Subscriptions	
Listen for Write Requests	Yes
Topic	iotgateway/write

Listen for Write Requests Select Yes or No to allow agent to subscribe. The default setting is No.

Topic: Specify the topic to which the agent should subscribe. The default topic is iotgateway/write.

Notes:

- The MQTT agent checks the topic specified for JSON data in the proper format. Once the agent parses the data, it attempts to write the value to the specified tag.
- Only tags that have been added to the MQTT agent may be written.

# Write formatting

To perform a write to multiple tags, the data needs to be in the following format: [{"id": "Channel1.Device1.Tag1", "v": 42}, {"id": "Channel1.Device1.Tag2", "v": 523}]

The example above shows a JSON array that should update both Tag1 and Tag2 when parsed by the MQTT agent.

A single write may be sent as a standalone JSON object or as an array of one object: {"id": "Channel1.Device1.Tag1", "v": 42}

Using Mosquitto\_sub.exe to update Tag1 from a DOS command line would look like: mosquitto\_pub.exe -t iotgateway/write -m "[{\"id\": \"Channel1.Device1.Tag1\",\"v\": 42}]"

The "Channel1.Device1.Tag1" should be replaced by the tag to be written and "42" by the value to be written.

Tip: Any failures to update a tag using this method are posted to the Event Log.

• Note: The MQTT subscription option does not check for user authorization against the User Manager or Security Policies Plug-In. Any valid JSON published to the configured topic will be written to the server. Configure the MQTT broker to verify that appropriate authentication is used at that level.

# Agent Properties – REST Client Connection

Once the agent type is selected as a REST Client, the following properties must be defined.

Property Groups	HTTP/S	TTP/S	
General	URL		
Client	Method	POST	
Header	Publish		
Message	Publish Type	Interval	
Security	Rate (ms)	10000	
Licensing	Format	Narrow Format	
	Max Events per Publish	1000	
	Transaction timeout in (s)	5	
	Buffer on Failed Publish	Yes	
	Send Initial Update	Yes	

URL: the IP address or URL and port of the endpoint for the agent connection. If the endpoint uses a TSL/SSL connection, adjust the URL to use "ssl://".

23 .

Note: The URL field MUST be in the format "tcp://<host>:<port>" or "ssl://<host>:<port>" where <host> is the IP address or URL and <port> is the port of the end point being targeted. There should be no additional characters or "/" after the port of the end point.

Method: the way that the agent publishes data to the endpoint. It may be through a POST or PUT command.

Publish Type: specify whether to publish updates at a set rate (Interval) or On Data Change. The default setting is Interval. When selecting On Data Change, the Rate and Format settings are disabled.

Rate (ms): the frequency at which the agent pushes data to the endpoint. The range is from 10 to 99,999,990 milliseconds.

Format: set one of the following options:

Wide Format (every tag in every publish): produces an output that includes all enabled tags in the agent with every scan regardless of value or quality changes. This format guarantees a consistent data format on every publish. Wide format sends only the latest value for each tag and has no buffer. If a publish fails while using wide format, the next publish is the latest scanned values for each tag.

**Narrow Format**: produces output based on tags that have changed value or quality. This format buffers data and publishes all tag data changes to an endpoint.

**Max.** events per: adjusts the number of tag events the gateway packages in a single transmission when using narrow format.

**Transaction timeout**: set the time, in seconds, the server waits for a single transaction to complete. The range is from 1 to 60 seconds.

**Buffer on Failed Publish**: specifies how to manage updates when a publish fails. A Yes value means the update is stored and retried until successful. A No value means the update is not retried if the publish fails.

Send Initial Update: specifies if the initial update of each tag should be sent out when the agent starts.

#### Agent Properties – Header

Once the REST Client Endpoint is configured, the data header must be defined. The data header can also be configured or edited by accessing **Properties** and selecting **Header**.

In the HTTP Header field, add name-value pairs to be sent to the REST server endpoint. This information is static and is sent with each connection to the endpoint.

Enter additional content that needs to appear in the header of the HTTP request.	Property Groups	
Please see the helpfile for more details. For example: Connection: keep-alive Keep-alive: 300	General Client	HTTP Header
	Header Message Security	
OK Cancel Help	Licensing	

Once tags are added to this client, it begins publishing to the endpoint as long as the agent is enabled.

See Also: Adding Tags Licensing

# Agent Properties – Message

To change the order of the default JSON data load or to remove data items, access the agent **Properties** and expand the **Message** group. Properties, such as Template, access an editing dialog where the format can be updated.

Property Groups	Message	
General	Message Format	Standard Template
Client	Template	timestamp:  SERVERTIMESTAMP values:  VALUES
Message	Expansion of [VALUES]	id: TAGNAME v: TAGVALUE q: TAGQUALITY t: TAGTIMESTAMP
Security		
Licensing		

#### Message Format: select either Standard Template or Advanced Template as the message format.

**Template:** identify any data to be sent before or after the JSON payload. This data is sent once per publish. Each variable may be preceded by any word or name, followed by a colon, then the variable. Key value pairs of static text may be included. To access the multi-line editor, click the text in Template field. Valid variables are:

- |SERVERTIMESTAMP| the time and date when the gateway published the data to the endpoint, in UNIX or POSIX time format
- |SERVERISO8601UTC| the date and time of the publish represented as a string in the ISO8601-1-2019 standard, for the UTC time zone
- |SERVERISO8601LOCAL| the date and time of the publish represented as a string in the ISO8601-1-2019 standard, for the server's LOCAL time zone
- |SERVERDATE| the same date and time as the timestamp, but in human-readable form
- |VALUES| the combined payload of the following box

**Expansion of [VALUES]:** the format for the JSON payload delivered to the endpoint. These values may be reordered or removed. A single publish event to the endpoint may include multiple instances of the data in this box. For example, if a tag had four data changes between publish events, there would be four complete JSON strings for that tag within this array. As with the Format box, each variable may be preceded by any desired word or descriptor. A colon is needed to separate the name from the variable. Valid variables are:

- [CHANNEL] The name of the channel without the fully qualified path
- |DEVICE| The name of the device without the fully qualified path
- |TAGNAME| The name of the selected tag
- |TAGVALUE| The value of the tag
- |TAGQUALITY| This denotes if the tag was read as good or bad
- [TAGTIMESTAMP] This is the time when the TAGVALUE was received
- |TAG| The name of the tag without the fully qualified path
- |TAGADDRESS|<sup>(1)</sup> The address of the tag
- |TAGDESCRIPTION|<sup>(1,2)</sup> The description of the tag
- [TAGCLIENTACCESS]<sup>(1)</sup> This denotes if the tag can be written to or not
- |TAGISO8601UTC| This is the time when the TAGVALUE was received, represented as a string in the ISO8601-1-2019 standard, for the UTC time zone
- |TAGISO8601LOCAL| This is the time when the TAGVALUE was received, represented as a string in the ISO8601-1-2019 standard, for the server's LOCAL time zone

• Note<sup>(1)</sup>: These macros are only updated in an agent on start-up (enable/disable cycle). Any changes to the underlying server tag properties are not passed through to the agents at runtime. To update these values, moment-arily Disable then Enable the agent after server tag configuration changes have been made.

• Note<sup>(2)</sup>: The |DESCRIPTION|, |TAGDESCRIPTION|, |CHANNEL|, and |DEVICE| variables work for most drivers, but do not work with the tags under the Advanced Tags Plug-In.

#### See Also: Advanced Template, Standard Template

# Agent Properties – Security for Rest Agents

To configure or change a REST agent authorization, access **Properties**, then select **Security** and adjust the following credentials as needed.

Property Groups	Basic Authentication	
General	Usemame Password	
Client Header		
Message Security		
Licensing		

Username: Enter the authorized user for authentication on the target web server.

**Password**: Enter the password for basic authentication on the target web server.

If not using an SSL encrypted connection, the username and password are sent as plain text to the target web server.

# Agent Properties – REST Server Connection

Once the agent type is selected as a REST Server, the following properties must be defined.

HTTP/S	
Network Adapter	Localhost only
Port Number	
CORS Allowed Origins	
Use HTTPS	Yes
Enable Write Endpoint	No
Allow Anonymous Login	No
URL	https:// /iotgateway/

**Network Adapter**: This sets the Ethernet connection where the REST server will respond. The default, **Localhost only**, has the server respond on either localhost or 127.0.0.1 and is only accessible from the computer where IoT Gateway is installed. The drop-down list includes the network cards configured for the local computer. Select a specific card for the REST server if there is more than one. For the REST server to respond on all network connections, select **Default**.

**Port Number**: This is the port to which the REST server binds. If there are multiple REST server agents configured on the same network adapter, they each need a different port number.

**CORS Allowed Origins**: This field allows entry of a comma-delimited list of allowed Cross-Origin Resource Sharing sources. A wildcard of \* may also be used to accept any origin. The origins must be an exact, case-sensitive match of the origin sent by the HTTP client. When the field is empty, CORS is disabled, which means that pre-flight OPTIONS requests fail with HTTP error 403/FORBIDDEN and responses to non-preflighted requests will not have CORS headers appended to them.

Note: This setting is only used when accessing the IoT Gateway REST Server from a custom web page.

**Use HTTPS**: This function encrypts the data between the remote client and this REST server. Once installed, a self-signed certificate is created to allow this functionality. To use a custom certificate, import a PFX file in the IoT Gateway section of the Server Administrator settings. This is enabled by default.

**Enable write endpoint**: This allows or prevents the ability to write to any tags, regardless of the logged-in user's access level. When enabled, tags that are designated as read/write tags may be written based on user access level. If anonymous login is allowed, all accessing users may write to read/write tags. If anonymous login is not

allowed, user credentials are respected regarding write permissions (based on the User Manager and or the Security Policy Plug-in). This options is disabled / unchecked by default.

Allow anonymous login: By default, any client connection must have authentication credentials in the header that match a valid account in the User Manager or Security Policy Plug-in. If this option is enabled / checked, no look up for access is performed and connections allow unauthenticated access. The User Manager and Security Policies Plug-in are both accessed from the server Administrator settings. This option is disabled / unchecked by default.

The URL at the bottom of the dialog accesses the REST server. It is dynamic and changes as settings in this window change.

• Note: The live URL link shows the address once changes are applied. Clicking on the URL before changes are applied may result in a failure to load the page.

Begin working with the REST server by using standard HTTP browser requests: Browse and Read REST commands, formatted as:

http://localhost:39320/iotgateway/browse

http://localhost:39320/iotgateway/read?ids=<TagName>

To edit the configuration, select the agent Properties and navigate to Client.

 See Also: <u>Adding Tags</u> <u>Working with a REST Server</u> <u>Licensing</u>
 Consult the documentation for server, User Manager, and Security Policies Plug-in.

# Working with a REST Server

Once a REST server agent is created; a client may connect to the endpoint to browse, read, and write tags configured under that agent.

All REST server agent connections are checked against the User Manager to validate credentials unless the **Allow anonymous access** option is enabled on the agent.

For information about setting up the User Manager, refer to the help document. A quick review of the available commands may be found by using a web browser to navigate to the endpoint.

If the agent is configured with all the default selections, the link is https://localhost:39320/iotgateway/.

If the agent is not configured with the default selections, determine the specific link by opening the properties of the REST server agent and clicking on the **Endpoint** tab.

The IoT Gateway supports more than one REST server agent as long as they use different ports.

The REST server supports the following commands:

- Browse
- Read
- Write

The following GET commands may be tested in most web browsers.

Note: Some versions of some browsers do not parse JSON in the browser and prompt to download it.

A Browse command lists all tags that are configured under this REST Server instance in a JSON array format. The format of the command is:

https://localhost:39320/iotgateway/browse

A Read command returns the tag or tags requested in a JSON array format. The format of the command is: https://localhost:39320/iotgateway/read?ids=Channel1.Device1.Tag1 For multiple reads repeat the tags listing separated by &:

https://-

localhost:39320/iotgateway/read?ids=Channel1.Device1.Tag1&ids=Channel2.Device2.Tag2

The following are POST commands and require the use of a more specialized client.

A Read post command returns the tag or tags requested in a JSON array format. The format of the command is: https://localhost:39320/iotgateway/read

With the body of the POST containing the desired tags in the following format:

["Channel1.Device1.Tag1"]

Or for multiple tags:

["Channel1.Device1.Tag1", "Channel2.Device2.Tag2", "Channel3.Device3.Tag3"]

A write command allows a third-party client to write to one or more tags that are configured under the REST server agent. To be able to write to the tag, the agent must be configured to allow writes, and the tag must also be writable. The format of the command is:

https://localhost:39320/iotgateway/write

With the body of the POST containing the desired tag or tags and values in the following format: [{"id": "Channel1.Device1.Tag1", "v": "123"}]

For multiple tags:

```
[{"id": "Channel1.Device1.Tag1","v": "123"},{"id": "Channel2.Device2.Tag2","v": "456"},
{"id": "Channel3.Device3.Tag3","v": "789"}]
```

For the body, "id": is the tag name and "v": is the value write.

🌻 Tips:

- Directing a browser to https://localhost:39320/iotgateway/ or http://localhost:39320/iotgateway/; if HTTPS is disabled, provides a brief description of these commands.
- 2. When creating a custom web page to access data from the IoT Gateway REST server, it may be necessary to enable CORS or Cross-Origin HTTP requests. This is only needed for web pages; not custom REST clients. CORS is a security feature of modern browsers that verifies that data displayed on a page originates from a valid source. Using the \* character in the CORS Allowed Origin field ensures that requests from any origin succeed. Leaving the field blank results in an HTTP 403 FORBIDDEN response. To restrict access, determine the origin header from the location running the web page (information that can be found when using the developer web console of the browser) and enter that into the CORS Allowed Origins field.

#### Notes:

- 1. The port and tag names in these examples must match those configured in the REST server settings.
- 2. Computer names with underscores are not seen as valid endpoints and result in HTTP 500 errors.

# Agent Properties – Licensing

The IoT Gateway uses a tiered, count-based licensing model. A license may be purchased that enables the product to run for an unlimited amount time for a fixed maximum number of tags. The license limit does not prevent the addition of new tags beyond the tag count, nor does it signal the product to enter Time Limited mode, but it does prevent updates from any tags added beyond that count.

Property Groups	😑 loT Items	
General	Total for This Agent	7
Server	Total for All Agents	19
	License Limit	Not licensed
Licensing		

Total for This Agent: displays the read-only number of items / tags currently active on the selected agent.

Total for All Agents: displays the read-only number of items / tags currently active collectively on all configured agents.

License Limit: displays the read-only number or status of the active IoT Gateway installation.

#### Exceeding the Limit

An event log message is posted each time a new tag is created in excess of the license limit. If the license limit is exceeded, existing tags can be deleted to make license counts available for the new ones.

Notes:

- When the license limit is exceeded, IoT Gateway processes the licensed number of tags only; the exact tags can vary based on the project loading order. The Event Log messages indicate the exact tags that did not load.
- 2. For licensing, tags are counted on a per-agent, not per-tag basis. For example; if the same tag is added to both a REST client and an MQTT client, it counts as two tags against the license.

#### **Unlicensed Operation**

When no license is installed, the entire product enters Time Limited mode and runs for two hours before the runtime service must be stopped and restarted, which is accomplished through the administration icon found in the system tray.

#### Data

The IoT Gateway pushes data in a standard JSON format via the REST and MQTT Clients. This format may then be consumed by the third-party endpoint and broken down in an appropriate way. All data types are fully supported by the IoT Gateway with the exception of String Arrays. Strings Arrays may only be read and not written to from the agents that support writes.

Standard Template Data Format Advanced Template Data Format Adding Tags CSV Import and Export System Tags

# Standard Template Data Format

The standard template pushes data in a JSON format via the REST and MQTT clients. The data structure for these agents looks like the following sample by default:

```
{"timestamp":1438011255230,
    "values":
    [
    {"id":"Channel1.Device1.Tag1","v":250,"q":true,"t":1438011254668}
]
```

The components used in the above sample are defined as follows:

- timestamp = The time, in milliseconds, that the data was published to the endpoint since the UNIX epoch
- id = The unique name of the tag

29

- v = The value of the tag
- q = True means good quality update, false means bad (i.e. lost communications to the underlying device or invalid configuration)
- t = The time the tag data was sampled inf milliseconds since the UNIX epoch

The format of a 2 by 2 array is as follows:

```
{"timestamp":1438011255653,
    "values":
    [
    {"id":"Channel1.Device1.Tag1","v":"[1,2][3,4]","q":true,"t":1438011254924}
    ]
}
```

Note: When writing an array, all opening and closing brackets, as well as commas between the array elements, must be included. All values for an array must be written at one time. A missing value in the array prevents the entire array from being written.

The REST server uses a similar format with additional identifiers as detailed below.

For a Browse request, a JSON list of the IoT item names available with a "succeeded" and "reason" field is returned. The reason field remains empty if succeeded is true.

```
{"browseResults":
    [
    {"id":"Channel1.Device1.Tag1"}
    ],
    "succeeded":true,"reason":""
}
```

For a Read request, a JSON list of the IoT item names and values with an "s" for success and "r" for reason is returned, such as:

```
{"readResults":
    [
        {"id":"Channel1.Device1.Tag1","s":true,"r":"",
        "v":4878,"t":1444307548259}
    ]
}
```

For a Write request, a JSON list of the IoT items with an "s" for success and "r" for reason is returned, such as:

```
{"writeResults":
    [
    {"id":"Channel1.Device1.Tag1","s":true,"r":""}
  ]
}
```

#### See Also: Advanced Template

#### Advanced Template Data Format

The IoT Gateway pushes data in a standard JSON format via the REST and MQTT Clients. This format may then be consumed by the third-party endpoint and broken down in an appropriate way. The REST Client agent and MQTT agent have the ability to use an advanced template for pushing data. This template engine uses a subset of Handlebars. The Advanced Template allows more complete control over the payload format. In addition to JSON, formats like XML and CSV can be generated using this template. The Advanced Template is a drop-down selection in the Message Format field.

# Variables

Like the Standard Template, variables can be inserted into the template representing publish time and data changes. Top-level variables like SERVERDATE and SERVERTIMESTAMP can be inserted anywhere in the template.

SERVERTIMESTAMP	Time of publish, represented as the number of milliseconds since January 1st, 1970, midnight
SERVERDATE	Date and time of publish as human-readable string
SERVERISO8601UTC	Date and time of the publish, represented as a string in the ISO8601-1-2019 stand- ard, for the UTC time zone
SERVERISO8601LOCAL	Date and time of the publish, represented as a string in the ISO8601-1-2019 stand- ard, for the server's LOCAL time zone

The VALUES variable represents a list of every data change in the publish. Each data change contains variables for the tag name, value, quality, and timestamp.

CHANNEL  <sup>(2)</sup>	The name of the channel without the fully qualified path
DEVICE  <sup>(2)</sup>	The name of the device without the fully qualified path
TAGNAME	The name of the tag ('Channel.Device.Tag')
VALUE	The value of the tag
QUALITY	"true" if the tag was read successfully, "false" if the tag could not be read (e.g. a con- nection issue)
TIMESTAMP	The time at which the tag was read, represented as the number of milliseconds in UTC time since January 1st, 1970, midnight
TAG	The name of the tag, without its fully qualified path ('Tag')
ADDRESS  <sup>(1)</sup>	The address of the tag
DESCRIPTION  <sup>(1,2)</sup>	The description of the tag
CLIENTACCESS  <sup>(1)</sup>	This denotes if the tag can be written to or not
LINEFEED	This inserts a single 'line feed' (\n) and can be used to format messages that require this syntax over the default 'carriage return, line feed' (\r\n) that is inserted upon adding a new line in the property editor. This can be helpful when the message recipient expects a single line feed when processing the data
ISO8601UTC	The time when the TAGVALUE was received represented as a string in the ISO8601-1-2019 standard, for the UTC time zone
ISO8601LOCAL	The time when the TAGVALUE was received represented as a string in the ISO8601-1-2019 standard, for the server's LOCAL time zone

• Note<sup>(1)</sup>: These macros are only updated in an agent on start-up (enable/disable cycle). Any changes to the underlying server tag properties are not passed through to the agents at runtime. To update these values, moment-arily Disable then Enable the agent after server tag configuration changes have been made.

• Note<sup>(2)</sup>: The |DESCRIPTION|, |TAGDESCRIPTION|, |CHANNEL|, and |DEVICE| variables work for most drivers, but do not work with the tags under the Advanced Tags Plug-In.

# Syntax

The 'each' keyword allows text to be generated for each item update. The template inside the 'each' block is evaluated once for every item update in the publish. Depending on the format, this can be used to make each update a JSON object or a CSV row for example.

```
|#each VALUES|
    |TAGNAME|, |VALUE|, |QUALITY|, |TIMESTAMP|,
    |/each|
```

In this example, each item update is formatted as line of comma-separated values, allowing import into a spreadsheet program or parsed by a CSV library:

```
Channel1.Device1.Tag1, 23, true, 1456150184825,
Channel1.Device2.Tag2, 1.79e308, true, 1456150184825,
...
```

### **Example Templates**

Several example templates are provided for common scenarios. If using a format other than JSON, be sure to set the Content-Type header in the <u>Header tab</u>. For XML data, 'Content-Type: text/xml' is suggested, while 'Content-Type: text/plain' is appropriate for CSV and most other formats.

#### XML Template

```
<updates>

<updates>

<update>

<update>

<id>|TAGNAME|</id>

<value>|VALUE|</value>

<quality>|QUALITY|</quality>

<timestamp>|TIMESTAMP|</timestamp>

</update>

</updates>
```

#### **CSV** Template

```
|#each VALUES|
|TAGNAME|,|VALUE|,|QUALITY|,|TIMESTAMP|,
|/each|
```

#### XML Sample Output

```
<updates>
<updates>
<updates>
<update>
<id>Comparing the set of th
```

#### **CSV Sample Output**

```
Channel1.Device1.Tag1, 23, true,
1456150184825,
Channel1.Device2.Tag2, 1.79e308, true,
1456150184825,
...
```

#### JSON, Wide Format

This template generates a flat JSON object with no hierarchy.

Template	Sample Output
{	{
#each VALUES	"Channel1.Device1.Tag1_value": 23,
" TAGNAME _value":  VALUE ,	"Channel1.Device1.Tag1_quality": true,
" TAGNAME _quality":  QUALITY ,	"Channel1.Device1.Tag1_timestamp":
" TAGNAME  timestamp":  TIMESTAMP ,	1456150184825,
//each	"Channel1.Device2.Tag2_value": 1.79e308,
}	"Channel1.Device2.Tag2 quality": true,
-	

}

#### **Additional Syntax**

The default advanced template contains the following syntax:

|#unless @last|,|/unless|

This can be read as: "Unless this is the last item in the list, insert a comma."

This effectively eliminates the trailing comma for the last item in a list. While this can be omitted in most cases, it is necessary if the consumer of the payload treats trailing commas as a syntax error.

#### Errors

If an invalid template is defined, an error message is posted to the Event Log. This message provides the line number and cause of the error. The agent stops publishing updates until a valid template is entered.

#### See Also: Standard Template

### Adding Tags to an Agent

Once an agent is configured, it's ready to add tags. Follow the instructions below to:

- Add a Single Tag to a Publishing Agent
- Add Multiple Tags to a Publishing Agent
- Add a Single Tag to a Non-Publishing Agent
- Add Multiple Tags to a Non-Publishing Agent

# Add a Single Tag to a Publishing Agent

- 1. In the Project View, select the agent (MQTT Client or REST Client) to add the tag.
- 2. Right-click the agent and select New IoT Item or click on the New IoT Item button in the tool bar.

III IoT Item	×
Server Tag:	
Scan Rate (ms):	
Publish	
Only on Data Changes	
Deadband (%): 0	
Every scan	
Enabled     OK     Cancel     Help	

Server Tag: Enter the full channel.device.name of the tag or browse to locate the single tag.

Scan Rate: the frequency, in milliseconds, at which the tag is checked for updates in value. The valid range is 10 - 99999990 ms. The default is 1000 ms.

Only on Data Changes: sets the agent to only publish data for this tag when the value changes.

**Deadband (%)**: the percentage of value change that must be exceeded before a tag update is included for publication. The value should be a percent change in the full numeric range of the data type assigned to the tag. A deadband of 0 means all data changes are published.

In expression form, this Deadband (%) is defined by:

**Deadband (%)** = 100 \* (ChangeThreshold/DataTypeFullRange)

For example, to obtain an absolute numeric threshold of value 0.1 to a Float data type (64-bit single precision floating point with a numeric range of 6.8e38), the **Deadband (%)** is calculated as:

Deadband (%) = 100 \* (0.1 / 6.8e38) = 1.4705882352941176470588235294118e-38

In this example, numerical value changes greater than 0.1 would be published. Any change equal to or less than 0.1 would not be published.

**Note**: The current deadband implementation compares a new value with last published value, not last value sampled by the driver.

**Every Scan**: This forces the agent to publish data for this tag to the endpoint even if there was no change in the tag value.


**Note:** Tags that have a quality of "Bad" send one update with that quality and then no updates are sent until the quality returns to good.

**Enabled**: allows or prevents data for this tag to be published. Tags that are not enabled still count against the license count.

3. Click OK.

# Add Multiple Tags to a Publishing Agent

- 1. In the Project View, select the agent (MQTT Client or REST Client) to which to add tags.
- 2. Right-click the agent and select **New IoT Items**. Alternatively, click on the **New IoT Items** button in the tool bar or click **Add IoT Items...** in the Detail View.
- 3. In the Tag Browser, select the tags to publish by this agent. These tags are only available on this particular agent; not on any others configured.

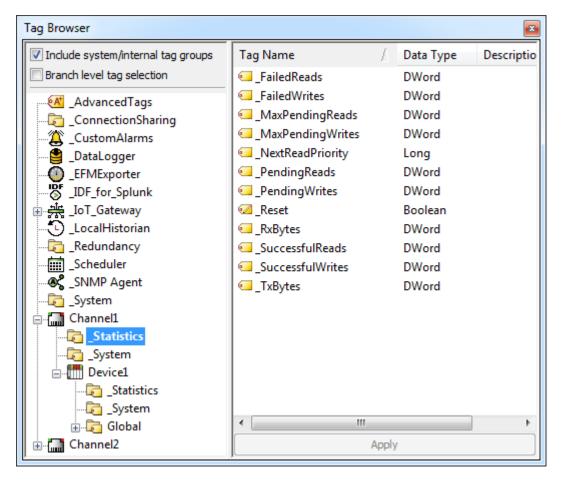

4. Once the tags are selected, click Apply.

5. In the IoT Items dialog, define the properties for the tags being added:

IoT Items	Х
Specify the properties for the items currently being added.	
Scan <u>R</u> ate (ms): 1000	
Publish     Only on <u>D</u> ata Changes	
Dead <u>b</u> and (%): 0	
⊖ Every s <u>c</u> an	
✓ Enabled OK Cancel Help	

Scan Rate: the frequency, in milliseconds, at which the tag(s) is checked for updates in the value. The valid range is 10 - 99999990 ms. The default is 1000 ms.

Only on Data Changes: sets the agent to only publish data for this tag when the value changes.

**Deadband (%)** the percentage of value change that must be exceeded before a tag update is included for publication. The value expected in this field is a percent change in the full numeric range of the data type assigned to the tag. A deadband of 0 means all data changes are published.

In expression form, this **Deadband (%)** is defined by:

Deadband (%) = 100 \* (ChangeThreshold/DataTypeFullRange)

For example, to obtain an absolute numeric threshold of value 0.1 to a Float data type (64-bit single precision floating point with a numeric range of 6.8e38), the **Deadband (%)** is calculated as: **Deadband (%)** = 100 \* (0.1 / 6.8e38) = 1.4705882352941176470588235294118e-38

In this example, numerical value changes greater than 0.1 would be published. Any change equal to or less than 0.1 would not be published.

**Note**: The current deadband implementation compares a new value with last published value, not last value sampled by the driver.

**Every scan**: forces the agent to publish data from this tag to the endpoint even if there was no change in the tag value.

**Enabled**: allows or prevents the tag(s) to be monitored, collected, and published. Tags are enabled by default.

**Note**: Tags that are not enabled still consume a license count.

6. Once configured, click **OK**. Verify the tags are listed in the upper right pane of the configuration window and in the target agent or broker. (Consult the Event Log for errors if no data appears.)

• Note: Tags are configured to publish on only the agent where they are added. To publish the same tag to multiple end points, the tag must be added to each agent.

#### Add a Single Tag to a Non-Publishing Agent

- 1. In the Project View, select the agent (REST Server) to add the tag.
- 2. Right-click the agent and select New IoT Item or click on the New IoT Item button in the tool bar.

IoT Item	×
Server Tag:	I
Capture Options	
Scan Tag	
Rate (ms):	1000
C Explicit Read	
☑ Enabled	OK Cancel Help

Server Tag: Enter the full channel.device.name of the tag or browse to locate the single tag.

**Capture Options**: Specify how this tag obtains updates for clients. Allows controlling communications to connected devices.

Scan Tag: Sets the agent to check for data updates at the scan rate interval. The response to a REST Client read request for the tag contains the cached value, quality, and timestamp from the last scanned update.

**Rate (ms)**: The frequency, in milliseconds, at which the tag is checked for updates in value. The valid range is 10 - 99999990 ms. The default is 1000 ms.


**Explicit Read**: This option does not poll for data updates. REST Client read requests cause an asynchronous read to provide the latest data to the REST Client.

**Enabled**: Allows or prevents scanning for data updates and issuing explicit read requests. Tags that are not enabled still count against the license count.

- Notes:
  - Depending on the configured scan rate, rate of change of the value, and the REST Client read rate, the response that the REST Client receives could contain stale data. To prevent this, the scan rate should be faster than the item's expected rate of change and the REST Client read rate should be faster than this scan rate.
  - 2. Using the explicit read, users can tailor the bandwidth requirements of the server to suit the needs of the application. If, for example, the client is aware of when a data change should have occurred, there is no reason to regularly read the value. However, the REST Client read response time may increase compared to the response time of reading the scanned cached data.
- 3. Click OK.

#### Add Multiple Tags to a Non-Publishing Agent

- 1. In the Project View, select the agent (REST Server) to which to add tags.
- 2. Right-click the agent and select **New IoT Items**. Alternatively, click on the **New IoT Items** button in the tool bar or click **Add IoT Items...** in the Detail View.
- 3. In the Tag Browser, select the tags to publish by this agent. These tags are only available on this particular agent; not on any others configured.

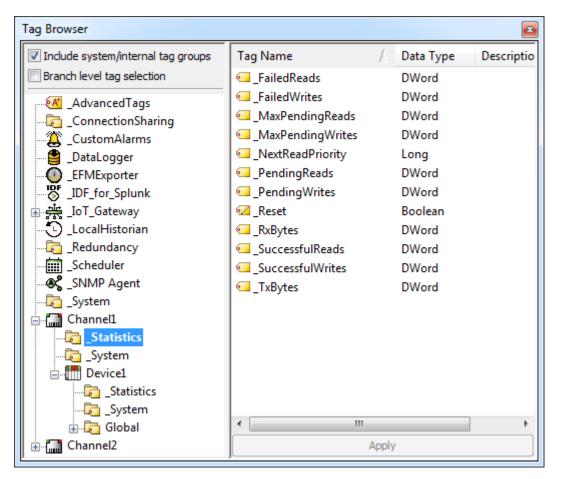

- 4. Once the tags are selected, click **Apply**.
- 5. In the IoT Items dialog, define the properties for the tags being added:

IoT Items	Х
Specify the properties for the items currently being added.	
Capture Options Scan Tag Rate (ms): 1000 Explicit Read	
✓ Enabled OK Cancel Help	

**Capture Options**: Specify how this tag obtains updates for clients. Allows controlling communications to connected devices.

Scan Tag: Sets the agent to check for data updates at the scan rate interval. The response to a REST Client read request for the tag contains the cached value, quality, and timestamp from the last scanned update.

**Rate (ms)**: The frequency, in milliseconds, at which the tag is checked for updates in value. The valid range is 10 - 99999990 ms. The default is 1000 ms.

**Explicit Read**: This option does not poll for data updates. REST Client read requests cause an asynchronous read to provide the latest data to the REST Client.

**Enabled**: Allows or prevents scanning for data updates and issuing explicit read requests. Tags that are not enabled still count against the license count.

Notes:

- Depending on the configured scan rate, rate of change of the value, and the REST Client read rate, the response that the REST Client receives could contain stale data. To prevent this, the scan rate should be faster than the item's expected rate of change and the REST Client read rate should be faster than this scan rate.
- 2. Using the explicit read, users can tailor the bandwidth requirements of the server to suit the needs of the application. If, for example, the client is aware of when a data change should have occurred, there is no reason to regularly read the value. However, the REST Client read response time may increase compared to the response time of reading the scanned cached data.
- 6. Once configured, click **OK**. Verify the tags are listed in the upper right pane of the configuration window and in the target agent or broker. (Consult the Event Log for errors if no data appears.)

## System Tags

The IoT Gateway exposes some status information through IoT Gateway system tags. These tags update at a fivesecond interval. They may be reset to zero by writing any value to them. When configured as a tag under an IoT Gateway agent, system tags count against the overall licensed number of tags.

Тад	Description
_ DroppedEvents	The number of tag updates that were not successfully published due to the agent buffer being full. This can occur if the configured endpoint is not up or responding
_PublishesSent	The total number of data push events an agent has successfully made on an endpoint. Each successful publish may encompass a single or many tag updates

## Importing / Exporting CSV Files

Configuring tags for each agent may be done through the import of a comma delineated file. This is done on a per agent basis. Exporting the list of tags of an already configured agent may also be done this way. To import or export a list of tags, right click on the agent and select either "Import CSV..." or "Export CSV...". Selecting "Export CSV..." will bring up a dialog box asking what to name and where to save the CSV file. Once saved, edit the CSV file as desired. This file may then be re-imported to this agent or any agent as long as the formatting is maintained. To start with an appropriately formatted file, it is recommended that a single tag is added to an agent. Once added export the CSV file for that agent for use as a template. This provides the format for any added tags.

**Note**: Importing a CSV file replaces existing tags of the same name under an agent. New tags are added to the agent without affecting existing tags.

## Troubleshooting

#### Event Log

The Event log provides information pertaining to each agent connection and the status of the gateway service.

Please refer to it and the message list to resolve issues.

#### Data Loss

While rare under normal circumstances, errors reported in the event log can indicate dropped data. This can be due to one of the following conditions:

- Continuous incoming data rate is too fast (>100,000 updated tags per second).
- Unable to communicate with the third-party endpoint and the gateway buffer is full.

The gateway buffer is configured on a per-agent basis. Once the buffer maximum has been reached, the gateway drops new data coming in to the gateway for that agent. Older data is retained in the buffer until it may be pushed to the third-party endpoint.

Note: If there are any tags in an agent's buffer when a change is made to its configuration, the tags are lost.

See Also: Event Log Messages

#### Event Log Messages

The following messages may be generated. Click on the link for a description of the message.

Browse rejected: no user credentials were provided in the request and anonymous requests are currently disabled.

Browse rejected: the credentials for user <user> are invalid.

Connection restored to server: <gateway>. Reinitializing server configuration.

Data change event buffer overrun; dropping updates. Ensure that the IoT Gateway service is running or reduce the volume of data collected.

Error adding item <tag>. This item already exists in connection <agent name>.

Error adding item <tag> to connection <agent name>.

Error importing CSV data. Invalid CSV header.

Error importing CSV data. No item records found in CSV file.

Error importing CSV item record <tag>. Update rate <update rate> is out of range, setting to <valid update>.

Error importing CSV item record <tag>. No update rate found, setting to <update rate>.

Error importing CSV item record <tag>. Deadband <deadband rate> is invalid. Deadband set to <valid deadband>.

Error importing CSV item record <tag>. No deadband value found, setting to <valid deadband>. Failed to connect to server: <gateway>. Please verify this connection information is correct and that the host can be reached.

Failed to connect to server: <URL and port>. Please verify this connection information is correct and that the host can be reached.

Failed to create JVM using JRE at <path to JRE>.

Failed to import MQTT client certificate: <certificate path>. Use the Server Administration utility to import a valid certificate.

Failed to import server instance cert: <agent name>. Please use the Administration utility to reissue the certificate.

Failed to initialize the JVM: insufficient memory available (requested initial=<MB>, max. =<MB>). Failed to initialize the JVM: JNI error <error>.

Failed to initialize the IoT Gateway.

Failed to launch IoT Gateway: no suitable 32-bit JRE was configured or found.

41

Failed to load agent <agent name>: invalid payload specification.

Failed to load project: <agent URL> is not a valid address.

Failed to load XML project. Item <tag> already exists in connection <agent name>.

Failed to start IoT Gateway service.

Failed to start IoT Gateway service. Please ensure arguments <Java variables> are valid.

IoT Gateway failed to start. Failed to bind to port <port>.

IoT Gateway using JRE at <path to JRE>.

Item <tag> on connection <agent name> is now licensed and sending data.

<u>Missing server instance certificate <certificate path>. Re-issue the certificate using the Administration utility.</u>

Missing MQTT client certificate <certificate path>. Use the Administration utility to import a valid certificate.

MQTT agent <agent name> disconnected. Reason - Connection lost.

MQTT agent <agent name> disconnected. Reason - null.

MQTT agent <agent name> published events buffer is full. Dropping new data change events.

<u>MQTT agent <agent name> failed to connect. Reason - Unable to find valid certificate path to</u> requested target.

MQTT agent <agent name> failed to parse payload.

MQTT agent <agent name> failed to parse payload template.

MQTT agent <agent name> failed to publish. Reason - <Broker URL>.

MQTT agent <agent name> failed to publish. Reason - Connection reset.

MQTT agent <agent name> failed to publish. Reason - The template is invalid.

MQTT agent <agent name> failed to publish. Reason - Unable to connect to server.

MQTT agent <agent name> failed to process write request on topic <MQTT topic>. Reason - <JSON error>.

MQTT agent <agent name> is connected to broker <broker URL>.

MQTT agent <agent name> publish failed. Reason: <reason>.

MQTT client certificate is expired. Use the Administration utility to import a valid certificate.

Read rejected for item <tag>: no user credentials were provided in the request and anonymous requests are currently disabled.

Read rejected for item <tag>: the credentials for user <user> are invalid.

Read rejected for item <tag>. The tag is disabled.

Read rejected for item <tag>. The tag has not been added to the plug-in.

REST client <agent name> published events buffer is full. Dropping new data change events.

REST client <agent name> failed to parse payload.

REST client <agent name> failed to parse payload template.

REST client <agent name> processing update.

REST client <agent name> publish failed. Reason - Connection refused: connect.

REST client <agent name> publish failed. Reason - Read timed out.

REST client <agent name> publish failed. Reason: <reason>.

REST client <agent name> publish failed. Reason - SSL configuration error.

REST client <agent name> publish failed. Reason - Unexpected EOF.

REST client <agent name> publish failed. Reason - The template is invalid.

REST client <agent name> returned HTTP error <HTTP error>, buffering records.

REST client <agent name> started publishing to <REST server URL>.

REST server <agent name> started at <URL and port>.

REST server <agent name> - failed to start on <URL and port>. Reason - Address already in use: bind.

Running with Java <full Java version>.

Template error on line <number>: found: <string>.

The REST server certificate has been reissued.

The REST server certificate has been imported. The REST server certificate has expired. Please use the Administration utility to re-issue the certificate. Unable to send data for item <tag> on connection <agent name>. The licensed item count of license count> items has been reached. Unable to start secure REST server <agent name> at <URL and port>: missing or invalid certificate. Unable to use network adapter <network adapter> for REST server <agent name>. Binding to localhost only. Unsupported JVM: please install or configure a 32-bit Java 1.7 or higher JRE or JDK. Write request failed on item <tag>. The write data type <data type> cannot be converted to the tag data type <data type>. Write rejected for item <tag>. Invalid write format. Write rejected for item <tag>. No user credentials were provided in the request and anonymous requests are currently disabled. Write rejected for item <tag>; unsupported data type <type>. Write rejected for item <tag>. The credentials for user <user> are invalid. Write rejected for item <tag>. The tag is disabled. Write rejected for item <tag>. The tag has not been added to the plug-in.

## Browse rejected: no user credentials were provided in the request and anonymous requests are currently disabled.

#### Message Type:

Security

#### Possible Cause:

Anonymous access is disabled, but no credentials were sent with the request.

#### Solution:

Enable anonymous access on the REST Server agent or enter a valid username and password.

#### Browse rejected: the credentials for user <user> are invalid.

#### Message Type:

Security

#### Possible Cause:

- 1. The credentials sent with the request are invalid or do not have browse permissions.
- 2. Anonymous access is disabled, but invalid credentials were sent with the request.

#### Solution:

Verify the username and password are correct and have adequate rights before trying the request again.

#### Connection restored to server: <gateway>. Reinitializing server configuration.

## Message Type:

Informational

#### Possible Cause:

This message is logged when the plug-in reconnects to the gateway service, such as when there is a java change or the runtime is re-initialized.

## Data change event buffer overrun; dropping updates. Ensure that the gateway service is running or reduce the volume of data collected.

#### Message Type:

Warning

#### **Possible Cause:**

The plug-in is unable to communicate with the gateway service and has started to lose data.

#### Solution:

- 1. Verify the gateway service is running.
- 2. Verify the gateway is not disabled in the Windows Services.
- 3. Verify the configured gateway port is not in use by another service.

#### Error adding item <tag> to connection <agent name>.

#### Message Type:

Error

#### **Possible Cause:**

The tag or tag name is invalid.

#### Solution:

- 1. Correct the name of the item or tag for which data is desired and re-try the request.
- 2. Create a new tag with the same address and a different name.

#### Error adding item <tag>. This item already exists in connection <agent name>.

#### Message Type:

Error

#### Possible Cause:

A tag with this name already exists under this agent.

#### Solution:

- 1. Verify the name of the item or tag for which data is desired and correct the request.
- 2. Create a new tag with the same address, but a different name, to import it under the same agent.

#### Error importing CSV data. Invalid CSV header.

#### Message Type:

Error

#### **Possible Cause:**

The header information or format in the CSV file import is missing data or is invalid.

#### Solution:

- 1. Export a new CSV file from an existing agent and use that as a template.
- 2. Correct the header information or format according to the instructions on headers.

### See Also: Importing / Exporting CSV Files

#### Error importing CSV data. No item records found in CSV file.

#### Message Type:

Error

#### Possible Cause:

The CSV file was not a valid format or contained no data.

#### Solution:

- 1. Export a new CSV file from an existing agent and use that as a template.
- 2. Correct the information or format of the CSV file.

#### See Also:

Importing / Exporting CSV Files

## Error importing CSV item record <tag>. Update rate <update rate> is out of range, setting to <valid update>.

Message Type: Warning

Possible Cause: Tags in the import file included invalid update rate information.

#### Solution:

Verify all fields have valid data in the CSV files.

See Also: Importing / Exporting CSV Files

## Error importing CSV item record <tag>. No update rate found, setting to <update rate>.

Message Type: Warning

#### Possible Cause:

Tags in the import file are missing the update rate information.

#### Solution:

Verify all fields have valid data in the CSV files.

### See Also: Importing / Exporting CSV Files

## Error importing CSV item record <tag>. Deadband <deadband rate> is invalid. Deadband set to <valid deadband>.

Message Type: Warning

**Possible Cause:** Tags in the import file include invalid deadband information.

**Solution:** Verify all fields have valid data in the CSV files.

See Also: Importing / Exporting CSV Files

Error importing CSV item record <tag>. No deadband value found, setting to <valid deadband>.

Message Type: Warning

**Possible Cause:** Tags in the import file are missing deadband information.

**Solution:** Verify all fields have valid data in the CSV files.

See Also: Importing / Exporting CSV Files

Failed to connect to server: <gateway>. Please verify this connection information is correct and that the host can be reached.

Message Type: Error

**Possible Cause:** The server cannot communicate with the gateway service.

#### Solution:

- 1. Verify the gateway service is running.
- 2. Verify the configured gateway port is not in use by another service.

## Failed to connect to server: <URL and port>. Please verify this connection information is correct and that the host can be reached.

#### Message Type:

Error

#### Possible Cause:

The port configured for communications between the plug-in and gateway is in use by another process.

#### Solution:

Change the connection port in Administration | Settings | IoT Gateway tab.

## Failed to create JVM using JRE at <path to JRE>.

#### Message Type:

Error

#### Possible Cause:

The installed JRE is unable to create the JVM instance.

#### Solution:

- 1. Re-install the latest version of Java.
- 2. Verify that the gateway is set to use an appropriate JRE in the Administration | Settings | IoT Gateway tab.

## Failed to import MQTT client certificate: <certificate path>. Use the Server Administration utility to import a valid certificate.

Message Type: Security

#### Possible Cause: The MQTT agent SSL certificate is missing or invalid.

#### Solution:

Re-issue the certificate through Administration | Settings | IoT Gateway | Manage MQTT Certificates.

## Failed to import server instance cert: <agent name>. Please use the Administration utility to re-issue the certificate.

Message Type: Security

#### Possible Cause: The REST server SSL certificate could not be imported.

#### Solution:

Re-issue the certificate through Administration | Settings | IoT Gateway | Manage Certificates.

# Failed to initialize the JVM: insufficient memory available (requested initial=<MB>, max. =<MB>).

Message Type: Error

#### **Possible Cause:**

The computer has insufficient memory to start the JVM.

#### Solution:

The initial and maximum memory levels in the Administration tool | Settings | IoT Gateway | Advanced settings should be removed.

#### Failed to initialize the JVM: JNI error <error>.

#### Message Type:

Error

#### **Possible Cause:**

There is an issue with the Java JRE.

#### Solution:

- 1. Reinstall a valid 32-bit Java JRE version 8 or higher.
- 2. Verify that the gateway is set to use an appropriate JRE in the Administration tool | Settings | IoT Gateway tab.

## Failed to initialize the IoT Gateway.

## Message Type:

Error

#### **Possible Cause:**

The IoT Gateway is unable to start.

#### Solution:

Re-run the installation and choose to repair the setup.

#### Failed to launch IoT Gateway: no suitable 32-bit JRE was configured or found.

## Message Type:

Error

#### Possible Cause:

A valid 32-bit Java JRE version 8 or higher was not found on the computer.

#### Solution:

- 1. Re-install the latest version of Java.
- 2. Verify that the gateway is set to use an appropriate JRE in the Administration | Settings | IoT Gateway tab.

47 \_

## Failed to load agent <agent name>: invalid payload specification.

#### Message Type:

Error

#### Possible Cause:

- 1. The JSON payload contains invalid or disallowed content.
- 2. Invalid advanced template settings during an XML project import.

#### Solution:

- 1. Adjust the payload section of the XML to be a valid data section with correct name-value pairs.
- 2. Correct the template and re-import the XML project file.

#### Failed to load project: <agent URL> is not a valid address.

#### Message Type:

Error

Possible Cause: The agent specified has an invalid URL format.

#### Solution:

Correct the URL to a valid format and try importing the file again.

#### Failed to load XML project. Item <tag> already exists in connection <agent name>.

#### Message Type:

Warning

## Possible Cause:

There is a duplicate tag under an agent in the XML project.

#### Solution:

Remove or correct the duplicate tag in the XML before attempting to import again.

#### Failed to start IoT Gateway service.

#### Message Type:

Error

#### Possible Cause:

The gateway service is set to **Manual** or there is no appropriate Java JRE installed.

#### Solution:

- 1. Under Windows Services, verify that the IoT Gateway service is set to Manual.
- 2. Verify that a valid 32-bit Java JRE version 8 or higher is installed.
- 3. Install a new version of Java that meets the system requirements.

### Failed to start IoT Gateway service. Please ensure arguments <Java variables> are valid.

Message Type: Error

#### **Possible Cause:**

Invalid JRE arguments were added to the advanced settings.

#### Solution:

Remove or correct any advanced settings from Administration | Settings | IoT Gateway | Advanced Settings.

#### IoT Gateway using JRE at <path to JRE>.

Message Type: Informational

#### **Possible Cause:**

This message appears when the gateway starts, indicating the JRE being used.

#### IoT Gateway failed to start. Failed to bind to port <port>.

#### Message Type:

Error

### Possible Cause:

The gateway service was unable to use the port assigned in the Administration tool.

#### Solution:

Change the port in Administration | Settings | IoT Gateway tab to an available unused port.

#### Item <tag> on connection <agent name> is now licensed and sending data.

#### Message Type: Informational

### **Possible Cause:**

The referenced tag was disabled due to license limitation, but is now sending data.

### Missing MQTT client certificate <certificate path>. Use the Administration utility to import a valid certificate.

Message Type: Security

## **Possible Cause:**

The MQTT agent SSL certificate is missing or invalid.

#### Solution:

Re-issue the certificate through Administration | Settings | IoT Gateway | Manage MQTT Certificates.

49

# Missing server instance certificate <certificate path>. Re-issue the certificate using the Administration utility.

## Message Type:

Security

#### Possible Cause:

The REST server SSL certificate is missing or invalid.

#### Solution:

Re-issue the certificate through Administration | Settings | IoT Gateway | Manage Certificates.

#### MQTT agent <agent name> disconnected. Reason - Connection lost.

#### Message Type:

Error

#### Possible Cause:

The broker is unreachable.

#### Solution:

- 1. Verify that the broker is online and the network connection is functioning properly.
- 2. Check the configured URL for the agent and verify a properly configured broker exists at that address.
- 3. Verify that communication is not being blocked by a hardware or software firewall or filter.

#### MQTT agent <agent name> disconnected. Reason - null.

#### Message Type:

Error

#### Possible Cause:

There are two clients with the same Client ID connected to the broker.

#### Solution:

Change the Client ID on one of the clients so they are all unique.

## MQTT agent <agent name> published events buffer is full. Dropping new data change events.

#### Message Type:

Warning

#### Possible Cause:

- 1. The broker is unreachable.
- 2. The rate data is published to the gateway exceeds the rate the gateway can the send data to the Broker causing the internal Published Events data buffer to overflow.

#### Solution:

- 1. Verify that the broker is online and the network connection is functioning properly.
- 2. Check the configured URL for the agent and verify a properly configured broker exists at that address.

- 3. Verify that communication is not being blocked by a hardware or software firewall or filter.
- 4. Configuration tuning to avoid <u>data buffer</u> overflow by increasing the **Max Events per Publish** and/or decreasing the **Rate** at which the agent pushes data to the endpoint.

## MQTT agent <agent name> failed to connect. Reason - Unable to find valid certificate path to requested target.

#### Message Type:

Error

#### Possible Cause:

The MQTT agent and broker SSL configurations are not compatible.

#### **Possible Solution:**

- 1. Configure the broker endpoint with 'ssl' when SSL is required. Otherwise, use tcp.
- 2. Verify the client certificate is properly configured, and the MQTT agent is configured to use the client certificate.
- 3. Verify the MQTT agent host machine trusts the server certificate.

#### See also:

Configure Gateway Certificate Configuring a Self-Signed Certificate Importing an MQTT Client Certificate

## MQTT agent <agent name> failed to parse payload.

#### Message Type:

Error

**Possible Cause:** The JSON payload has invalid or disallowed content in it.

#### Solution:

Adjust the Format and Expansion of |VALUES| boxes on the Message tab to remove the incorrect information.

#### MQTT agent <agent name> failed to parse payload template.

#### Message Type:

Error

#### Possible Cause:

The formatting of the advanced template is incorrect or missing characters.

#### Solution:

Verify no characters are missing and that the template logic is valid. Correct any issues.

#### See Also: Advanced Template Data Format

MQTT agent <agent name> failed to process write request on topic <MQTT topic>. Reason - <JSON error>.

### Message Type:

Error

#### Possible Cause:

The JSON payload has invalid or dis-allowed content in it.

#### Solution:

Adjust the JSON payload to match the expected format as described under MQTT Subscriptions.

#### MQTT agent <agent name> failed to publish. Reason - <broker URL>.

#### Message Type:

Error

#### Possible Cause:

The broker is unreachable.

#### Solution:

- 1. Verify that the broker is online and the network connection is functioning properly.
- 2. Check the configured URL for the agent and verify a properly configured broker exists at that address.
- 3. Verify that communication is not being blocked by a hardware or software firewall or filter.

#### MQTT agent <agent name> failed to publish. Reason - Connection reset.

#### Message Type:

Error

#### Possible Cause:

The agent is configured for an SSL connection and the broker does not support SSL or is not configured for SSL connections.

#### Solution:

- 1. Check the URL and port that the agent is using and verify that it is an SSL-enabled endpoint.
- 2. Change the agent URL to use TCP rather than SSL and try again.

## MQTT agent <agent name> failed to publish. Reason - Unable to connect to server.

#### Message Type:

Error

#### Possible Cause:

No valid MQTT broker at the URL provided or communication is blocked.

#### Solution:

- 1. Verify that the broker is online and the network connection is functioning properly.
- 2. Check the configured URL for the agent and verify a properly configured broker exists at that address.
- 3. Verify that communication is not being blocked by a hardware or software firewall or filter.

## MQTT agent <agent name> publish failed. Reason: <reason>.

#### Possible Cause:

The MQTT agent cannot connect to the broker.

#### **Possible Solution:**

IoT Gateway returns error messages from external components. Refer to <reason> or Paho client (www.eclipse.org) for additional information about errors from the client.

## MQTT agent <agent name> publish failed. Reason - The template is invalid.

#### Message Type:

Error

#### **Possible Cause:** The formatting of the advanced template is incorrect or missing characters.

#### Solution:

Verify no characters are missing and that the template logic is valid. Correct the issues.

#### See Also: Advanced Template Data Format

## MQTT agent <agent name> is connected to broker <broker URL>.

## Message Type:

Informational

#### Possible Cause:

This message is posted once a successful connection is made with an MQTT broker.

## Solution:

Proceed.

## The MQTT client certificate is expired. Use the Administration utility to import a valid certificate.

## Message Type:

Security

#### Possible Cause:

The MQTT agent SSL certificate is expired or invalid.

#### Solution:

Re-issue the certificate through Administration | Settings | IoT Gateway | Manage MQTT Certificates.

## Read rejected for item <tag>: no user credentials were provided in the request and anonymous requests are currently disabled.

## Message Type:

Security

#### Possible Cause:

Anonymous access is disabled or no credentials were sent from the client.

#### Solution:

- 1. Enable anonymous access on the REST server agent.
- 2. Send valid credentials in the authentication section of GET or POST.

#### Read rejected for item <tag>: the credentials for user <user> are invalid.

#### Message Type:

Security

#### Possible Cause:

- 1. The credentials sent with the request are invalid or do not have read permissions.
- 2. Anonymous access is disabled, but invalid credentials were sent with the request.

#### Solution:

Verify the username and password are correct and have adequate rights before trying the request again.

#### Read rejected for item <tag>. The tag is disabled.

#### Message Type:

Error

#### Possible Cause:

The tag has been added under the IoT Gateway agent, but is disabled.

#### Solution:

- 1. Locate the tag under the agent.
- 2. Right-click on the tag and select **Enable** from the menu.

#### Read rejected for item <tag>. The tag has not been added to the plug-in.

#### Message Type:

Error

#### Possible Cause:

The tag has not been added to the IoT Gateway.

#### Solution:

Follow the steps under Adding Tags to an Agent.

# REST client <agent name> published events buffer is full. Dropping new data change events.

Message Type: Warning

Possible Cause:

- 1. The REST server is unreachable.
- 2. The rate data is published to the gateway exceeds the rate the gateway can the send data to the Rest Server causing the internal Published Events data buffer to overflow.

#### Solution:

- 1. Verify that the REST server endpoint is online and the network connection is functioning properly.
- 2. Check the configured URL for the agent and verify a properly configured REST server exists at that address.
- 3. Verify that communication is not being blocked by a hardware or software firewall or filter.
- 4. Configuration tuning to avoid <u>data buffer</u> overflow by increasing the **Max Events per Publish** and/or decreasing the **Rate** at which the agent pushes data to the endpoint.

#### REST client <agent name> failed to parse payload.

#### Message Type:

Error

#### **Possible Cause:**

The JSON payload has invalid or disallowed content in it.

#### Solution:

Adjust the Format and Expansion of |VALUES| boxes on the Message tab to remove the incorrect information.

#### REST client <agent name> failed to parse payload template.

#### Message Type:

Security

#### Possible Cause:

The formatting of the advanced template is incorrect or missing characters.

#### Solution:

Verify no characters are missing and that the template logic is valid. Correct the issues.

#### REST client <agent name> processing update.

#### Message Type:

Informational

#### **Possible Cause:**

This message is posted when a change is made to the REST client configuration.

## Solution:

Proceed.

#### REST client <agent name> publish failed. Reason - Connection refused: connect.

Message Type: Error

#### Possible Cause:

A valid REST server endpoint has gone offline.

#### Solution:

- 1. Verify that the REST server endpoint is online and the network connection is functioning properly.
- 2. Check the configured URL for the agent and verify a properly configured REST server exists at that address.
- 3. Verify that communication is not being blocked by a hardware or software firewall or filter.

#### REST client <agent name> publish failed. Reason - Read timed out.

#### Message Type:

Error

#### Possible Cause:

- 1. Publishing to a HTTP endpoint with HTTPS enabled.
- 2. REST server is taking too long to respond.
- 3. REST server could be offline.

#### Solution:

- 1. Edit the agent endpoint URL to use HTTP rather than HTTPS and try again.
- 2. Increase Transaction Timeout.
- 3. Verify that the REST server is online and available.

#### REST client <agent name> publish failed. Reason: <reason>.

#### Possible Cause:

The REST client cannot connect to the REST server.

#### Possible Solution:

IoT Gateway returns error messages from external components. Refer to <reason> or Java Jersey (jersey.java.net target="\_blank") for additional information about errors from the client.

#### REST client <agent name> publish failed. Reason - SSL configuration error.

#### Message Type:

Error

#### Possible Cause:

- 1. The client certificate has not been imported into the Microsoft computer-level root trusted certificate store.
- 2. The REST server and client SSL configurations are not compatible.

#### Possible Solution:

- 1. Import the proper client certificate into the certificate store.
- 2. Configure the server endpoint with 'https:' when SSL is required. Otherwise use http.

3. Verify the REST client host machine trusts the server certificate.

#### See also:

**Configuring a Self-Signed Certificate** 

#### REST client <agent name> publish failed. Reason - The template is invalid.

#### Message Type:

Security

#### Possible Cause:

The formatting of the advanced template is incorrect or missing characters.

#### Solution:

Verify no characters are missing and that the template logic is valid. Correct the issues.

#### See Also:

Advanced Template Data Format

### REST client <agent name> publish failed. Reason - Unexpected EOF.

## Message Type:

Error

#### Possible Cause:

Publishing to a HTTPS endpoint without HTTPS enabled in the URL.

#### Solution:

Edit the agent endpoint URL to use HTTPS rather than HTTP and try again.

## REST client <agent name> returned HTTP error <HTTP error>, buffering records.

#### Message Type:

Warning

#### Possible Cause:

The configured endpoint URL is incorrect or not accepting connections. The gateway buffers data until the endpoint comes online or is corrected in the configuration.

#### Solution:

The HTTP error returned from the endpoint should indicate how to establish a connection.

#### Examples:

A 404 error indicates the URL is incorrect. A 401 error indicates the username or password is incorrect.

#### REST client <agent name> started publishing to <REST server URL>.

#### Message Type:

Informational

#### Possible Cause:

This message is posted once a successful publish is made with the configured REST server.

#### Solution:

Proceed.

### REST server <agent name> started at <URL and port>.

## Message Type:

Informational

#### Possible Cause:

This message is posted when the REST server is activated on the gateway.

#### Solution:

Proceed.

## REST server <agent name> - failed to start on <URL and port>. Reason - Address already in use: bind.

#### Message Type:

Error

#### Possible Cause:

An existing REST server agent is already using this port or another service on the computer is using this port.

#### Solution:

Edit the port setting in the REST server agent properties to an available port.

#### Running with Java <full Java version>.

#### Message Type:

Informational

#### Possible Cause:

This message appears when the gateway starts, indicating the full version of Java being used.

#### Template error on line <number>: found: <string>.

#### Message Type: Warning

#### **Possible Cause:** The formatting of the advanced template is incorrect or missing characters.

#### Solution:

Verify no characters are missing and that the template logic is valid. Correct the issues.

## See Also:

Advanced Template Data Format

#### The REST server certificate has been reissued.

## Message Type:

Security

#### Possible Cause:

A new REST server certificate has been successfully issued from the certificate manager.

### The REST server certificate has been imported.

## Message Type:

Security

#### **Possible Cause:**

A new REST server certificate has been successfully imported.

#### Solution:

Proceed.

## The REST server certificate has expired. Please use the Administration utility to re-issue the certificate.

Message Type: Security

**Possible Cause:** The current REST server SSL certificate is expired.

#### Solution: Re-issue the certificate from Administration | Settings | IoT Gateway | Manage Certificates.

## Unable to send data for item <tag> on connection <agent name>. The licensed item count of <license count> items has been reached.

Message Type: Warning

**Possible Cause:** More tags are configured than the license allows.

#### Solution:

Remove unused tags from any configured agents or apply a license that allows for more tags.

## Unable to start secure REST server <agent name> at <URL and port>: missing or invalid certificate.

## Message Type:

Error

#### **Possible Cause:** The SSL certificate is missing is or invalid.

#### Solution:

- 1. Verify the certificate exists in the appropriate product path.
- 2. Re-issue the REST server certificate from Administration | Settings | IoT Gateway | Manage Certificates.

# Unable to use network adapter <network adapter> for REST server <agent name>. Binding to localhost only.

#### Message Type:

Warning

#### Possible Cause:

The network adapter in the project does not match any found on the current machine.

#### Solution:

Use the Endpoint tab of the REST server to adjust the network adapter.

## Unsupported JVM: please install or configure a 32-bit Java 1.7 or higher JRE or JDK.

Message Type:

Error

#### Possible Cause:

There is no valid version of Java installed for the gateway.

Solution:

Install a valid 32-bit Java JRE version 8 or higher.

Write request failed on item <tag>. The write data type <data type> cannot be converted to the tag data type <data type>.

Message Type:

Warning

#### **Possible Cause:**

The write payload was of a data type that cannot be written to the selected tag.

#### Solution:

Verify that the tag data type being written is correct and that the data being written matches acceptable values for that data type.

#### Write rejected for item <tag>; invalid write format.

#### Message Type:

Error

#### Possible Cause:

The data parsed is missing information or formatting.

#### Solution:

Verify that the data being written is in a valid JSON format and matches the examples in the MQTT and REST server sections of this document.

See Also:
 <u>MQTT Client Message</u>
 <u>REST Client Message</u>

## Write rejected for item <tag>: no user credentials were provided in the request and anonymous requests are currently disabled.

Message Type: Security

#### **Possible Cause:**

Anonymous access is disabled, so credentials must be provided, but none were sent from the client.

#### Solution:

Enable anonymous access on the REST server agent or enter a valid username and password.

#### Write rejected for item <tag>: the credentials for user <user> are invalid.

#### Message Type:

Security

#### Possible Cause:

- 1. The credentials sent with the request are invalid or do not have write permissions.
- 2. Anonymous access is disabled, but invalid credentials were sent with the request.

#### Solution:

Verify the username and password are correct and have adequate rights before trying the request again.

#### Write rejected for item <tag>; unsupported data type <type>.

#### Message Type:

Error

#### Possible Cause:

The tag data type does not match the data to be written.

#### Solution:

- 1. Verify it is not a string tag as the target to write. Strings are not supported.
- 2. Verify that the value is within the limits of the data type of the tag.

#### Write rejected for item <tag>. The tag is disabled.

#### Message Type:

Error

#### **Possible Cause:**

The tag has been added under the IoT Gateway agent, but is disabled.

#### Solution:

- 1. Locate the tag under the agent.
- 2. Right-click on the tag and select **Enable** from the menu.

#### Write rejected for item <tag>. The tag has not been added to the plug-in.

## Message Type:

Error

#### Possible Cause:

The tag has not been added to the IoT Gateway.

## Solution:

Follow the steps under Adding Tags to an Agent.

## Index

## Α

Add or Remove Snap-ins 14 Adding Tags to an Agent 33 Advanced Settings 10 Advanced Template Data Format 30 Agent Properties – MQTT Client Connection 19 Agent Properties – REST Client Connection 23 Agent Properties – REST Server Connection 26 Anonymous 27 Architectural Summary 7 Authentication 6, 22, 26

## В

Broker 20 Browse 27 Browse rejected, no user credentials were provided in the request and anonymous requests are currently disabled. 42 Browse rejected, the credentials for user <user> are invalid. 42 Browse request 30

## С

Certificate 11 Certificate Import 15 CHANNEL 21, 25 Client Certificate 22 Client ID 22 Collection rate 6 Command Line 12 Commands 27 Configure the Gateway 9 Configuring a Certificate for the REST Server Agent 10 Configuring an Agent 17 Connection restored to server <gateway>. Reinitializing server configuration. 42 CORS 26 CSV file 39 CSV Template 32

#### D

Data 29 Data Buffer 8 Data change event buffer overrun, dropping updates. 43 Data Loss 40 Data structure 29 Data Updates 8 Deadband 35 Detail View 16 **DEVICE 21, 25** DroppedEvents 39

## Ε

Enable Write Endpoint 26 Error adding item <tag> to connection <agent name>. 43 Error adding item <tag>. This item already exists in connection <agent name>. 43 Error importing CSV data. Invalid CSV header. 43 Error importing CSV data. No item records found in CSV file. 44 Error importing CSV item record <tag>. Deadband <deadband rate> is invalid. Deadband set to <valid deadband>. 45 Error importing CSV item record <tag>. No deadband value found, setting to <valid deadband>. 45 Error importing CSV item record <tag>. No update rate found, setting to <update rate>. 44 Error importing CSV item record <tag>. Update rate <update rate> is out of range, setting to <valid update>. 44 Event Log 40 Event Log Messages 40 Event Log View 16 Exceeding the Limit 29 External Dependencies 8 F

Failed to connect to server <gateway>. 45 Failed to connect to server <URL and port>. 46 Failed to create JVM using JRE at <path to JRE>. 46 Failed to import MQTT client certificate <certificate path>. Use the Server Administration utility to import a valid certificate. 46 Failed to import server instance cert <agent name>. 46 Failed to initialize the IoT Gateway. 47 Failed to initialize the JVM - insufficient memory available (requested initial=<MB>, max. =<MB>). 47 Failed to initialize the JVM - JNI error <error>. 47 Failed to launch IoT Gateway - no suitable JRE was configured or found. 47 Failed to load agent <agent name> - invalid payload specification. 48

Failed to load project - <agent URL> is not a valid address. 48 Failed to load XML project. Item <tag> already exists in connection <agent name>. 48 Failed to start IoT Gateway service. 48-49

## G

General Operation 8 General Properties 18 GET command 27

## Η

Header 24 Help Contents 6 HTTP Header 24 HTTPS 26

### I

Importing / Exporting CSV Files 39 Importing a Client-Side Certificate for the MQTT Client Agent 11 Importing a Server-Side Certificate for Authentication with Client Agents 11 Initialization 8 Interval 20, 24 invalid write format. 60 IoT Gateway failed to start. Failed to bind to port <port>. 49 IoT Gateway using JRE at <path to JRE>. 49 IoT Item 33, 36 IoT\_Gateway.dll 7 Item <tag> on connection <agent name> is now licensed and sending data. 49

## J

Java 10 JRE 10 JSON data load 20, 25 JSON format 29-30

### L

Last Will 22 Licensing 28 Localhost 26

#### Μ

Manage Certificate 10 Max. events per 20, 24 Menu 16 Message 20, 25 Method 24 Missing MQTT client certificate <certificate path>. Use the Administration utility to import a valid certificate. 49 Missing server instance certificate <certificate path>. 50 MQTT agent <agent name> disconnected. Reason: Connection lost. 50 MQTT agent <agent name> disconnected. Reason: null. 50 MQTT agent <agent name> failed to connect. Reason - Unable to find valid certificate path to requested target. 51 MQTT agent <agent name> failed to parse payload template. 51 MQTT agent <agent name> failed to parse payload. 51 MQTT agent <agent name> failed to process write request on topic <MQTT topic>. Reason <JSON error>. 51 MQTT agent <agent name> failed to publish. Reason - <broker URL>. 52 MQTT agent <agent name> failed to publish. Reason - Connection reset. 52 MQTT agent <agent name> failed to publish. Reason - Unable to connect to server. 52 MQTT agent <agent name> is connected to broker <broker URL>. 53 MQTT agent <agent name> publish failed. Reason <reason>. 53 MQTT agent <agent name> publish failed. Reason: The template is invalid. 53 MQTT agent <agent name> published events buffer is full. Dropping new data change events. 50 MQTT client certificate is expired. Use the Administration utility to import a valid certificate. 53

## Ν

Narrow Format 20, 24 Network 26

## 0

On Data Change 20, 24 Overview 6

## Ρ

Password 22, 26 Plain text 22, 26 Port 9, 26 POST 24 Project Tree View 16 Publish rate 6 Publish Type 20, 24 PublishesSent 39 Publishing 17 PUT 24

#### Q

QoS 20

#### R

Rate 20, 24

Read 27

- Read rejected for item <tag>. No user credentials were provided in the request and anonymous requests are currently disabled. 53
- Read rejected for item <tag>. The credentials for user <user> are invalid. 54
- Read rejected for item <tag>. The tag has not been added to the plug-in. 54

Read rejected for item <tag>. The tag is disabled. 54

Read request 30

<reason>. 56

REST client <agent name> failed to parse payload template. 55

REST client <agent name> failed to parse payload. 55

- REST client <agent name> processing update. 55
- REST client <agent name> publish failed. Reason

REST client <agent name> publish failed. Reason - Connection refused. 55

REST client <agent name> publish failed. Reason - Read timed out. 56

REST client <agent name> publish failed. Reason - SSL configuration error. 56

REST client <agent name> publish failed. Reason - The template is invalid. 57

REST client <agent name> publish failed. Reason - Unexpected EOF. 57

REST client <agent name> published events buffer is full. Dropping new data change events. 54

REST client <agent name> returned HTTP error <HTTP error>, buffering records. 57

REST client <agent name> started publishing to <REST server URL>. 57

REST command 27

REST server <agent name> - failed to start on <URL and port>. Reason - Address already in use: bind. 58 REST server <agent name> started at <URL and port>. 58

Running with Java <full Java version>. 58

#### S

Scan Rate 35 Security 21, 26 server\_iotgateway.exe 7 SERVERDATE 21, 25 SERVERISO8601LOCAL 21, 25 SERVERISO8601UTC 21, 25 SERVERTIMESTAMP 21, 25 Shutdown 9 SSL encrypted 22 Standard Template Data Format 29 Startup 8 Subscriptions 22 Syntax 31 System Tags 39

## Т

TAG 21, 25 TAGADDRESS 21, 25 TAGCLIENTACCESS 21, 25 **TAGDESCRIPTION 21, 25** TAGISO8601LOCAL 21, 25 TAGISO8601UTC 21, 25 TAGNAME 21, 25 TAGQUALITY 21, 25 TAGTIMESTAMP 21, 25 TAGVALUE 21, 25 TCP/IP 9 Template 29, 31 Template error on line <number>: found: <string>. 58 The REST server certificate has been imported. 59 The REST server certificate has been reissued. 58 The REST server certificate has expired. Please use the Administration utility to re-issue the certificate. 59 TLS Version 22 Toolbar 16-17 Topic 20 Troubleshooting 40 Trusted 11 **Trusted Root Certification Authorities 14** 

## U

Unable to send data for item <tag> on connection <agent name>. The licensed item count of <license count> items has been reached. 59

Unable to start secure REST server <agent name> at <URL and port>: missing or invalid certificate. 59 Unable to use network adapter <network adapter> for REST server <agent name>. Binding to localhost only. 59 Unlicensed 29 Unsupported JVM. Please install or configure a Java 1.7 or higher JRE or JDK. 60 URL 20, 23 User Interface 16 Username 22, 26

## V

VALUES 21, 25 Variables 30 Version 10

## W

Wide Format 20, 24
Windows Console 12
Working with a REST Server 27
Write 27
Write rejected for item <tap> 60
Write rejected for item <tap>. No user credentials were provided in the request and anonymous requests are currently disabled. 60
Write rejected for item <tap>. The credentials for user <user> are invalid. 61
Write rejected for item <tap>. The tag has not been added to the plug-in. 61
Write rejected for item <tap>. The tag is disabled. 61
Write rejected for item <tap>. The tag is disabled. 61
Write rejected for item <tap>. The tag is disabled. 61
Write rejected for item <tap>. The tag is disabled. 61
Write request 30
Write request failed on item <tap>. The write data type <data type> cannot be converted to the tag data type <data type>. 60

## Х

XML Template 32