# Siemens TCP/IP Ethernet Driver

© 2025 PTC Inc. All Rights Reserved.

# **Table of Contents**

Siemens TCP/IP Ethernet Driver	. 1
Table of Contents	. 2
Siemens TCP/IP Ethernet Driver	5
Overview	. 5
Setup	6
Channel Properties – General	. 7
Tag Counts	. 7
Channel Properties – Ethernet Communications	. 8
Channel Properties – Write Optimizations	. 8
Channel Properties – Advanced	. 9
Device Properties – General	. 9
Operating Mode	.10
Device Properties – Scan Mode	.10
Device Properties – Timing	11
Device Properties – Auto-Demotion	.12
Device Properties – Tag Generation	. 12
Device Properties – Communications Parameters	.14
Device Properties – S7 Communication Parameters	.14
Device Properties – Addressing Options	.16
Device Properties – Tag Import	. 17
Device Properties – Redundancy	.18
Configuration API – Siemens TCP/IP Ethernet Example	. 19
Enumerations	. 20
Device Model Enumerations	.21
Optimizing Communications	.22
Data Types Description	.23
Address Descriptions	.24
S7-200 Address Descriptions	.24
S7-300 Address Descriptions	.26
S7-400 Address Descriptions	.26
S7-1200 Address Descriptions	
S7-1500 Address Descriptions	
ep - NetLink: S7-300 Address Descriptions	
NetLink: S7-400 Address Descriptions	
Standard S7-300/400/1200/1500 Item Syntax	
Legacy S7-300/400 Item Syntax	
Event Log Messages	
Reason = 'Frame contains errors'.	
Reason = 'Device returned transport error'. Error code = <error>.</error>	
Reason = 'Device returned protocol error'. Error class = <class>, Error code = <error>.</error></class>	.40

Rease	on = 'Device returned data access error'. Error code = <error>.</error>	41
Rease	on = 'Device is not responding'.	41
Rease	on = 'Unknown error occurred'.	42
Rease	on = NetLink returned error. Error code = <error>.</error>	42
Failed	d to resolve host.   Host = ' <host name="">'.</host>	42
Auto-	generated tag names and descriptions may not appear as expected due to string conversion error.	43
•	uired code page is unavailable on this machine. Tag generation may fail or tag names and descrip- may not appear as expected.   Required code page = <page></page>	
Unab	le to load the Step 7 language file.	43
Memo	ory exception reading the Step 7 language file.	43
Step	7 language file failed to open.   OS error = ' <error>'.</error>	44
Tag g	eneration failure.   Data block name = ' <block name="">', data block number = <block number=""></block></block>	44
	ted tag in group due to internal block size.   Tag address = ' <address>', tag name = '<name>', o name = '<name>'.</name></name></address>	44
•	not created because arrays are not supported with specified data type.   Tag name = ' <name>', o name = '<name>', data type = '<type>'.</type></name></name>	45
Unab	le to connect to device.	45
Unab	le to establish association with device.	45
Unab	le to read from address on device.   Address = ' <address>',</address>	46
Unab	le to read from address on device. Tag deactivated.   Address = ' <address>',</address>	46
Unab	le to read data from device.   Data block = ' <block>', block start = <address>, block size = <size>, .</size></address></block>	47
	le to read data from device. Block deactivated.   Data block = ' <block>', block start = <address>, size = <size>,</size></address></block>	48
	le to read data from device.   Memory type = ' <type>', block start = <address>, block size = <size> s),</size></address></type>	49
	le to read data from device. Block deactivated.   Memory type = ' <type>', block start = <address>, size = <size> (bytes),</size></address></type>	49
Unab	le to write to address on device.   Address = ' <address>',</address>	50
	le to write to address on device. HEXSTRING length is different from tag length.   Address = lress>', HEXSTRING length = <length> (bytes), tag length = <length> (bytes)</length></length>	51
	le to write to address on device. HEXSTRING contains a non-hexadecimal character.   Address = lress>'.	51
	le to write to address on device. HEXSTRING length must be an even number of characters.   ess = ' <address>'.</address>	51
	le to write to address on device. Time of Day string contains a syntax error. Expected 'hh:m- hhh' format.   Address = ' <address>', Time of Day string = '<string>'.</string></address>	51
Error (	Codes	52
Sieme	ens TCP/IP Ethernet Channel Properties	54
Sieme	ens TCP/IP Ethernet Device Properties	54
Sieme	ens TCP/IP Ethernet Tag Properties	55
Append	lix – Configuring Siemens Connections	56
••	To Configure S7-200 Connections in Micro/WIN	
	To Configure S7-300/400 Connections in STEP 7	
	To Configure S7-1200 Connections with the Totally Integrated Automation (TIA) Portal	
	To Configure S7-1500 Connections	
	lix – Alternate Syntax Support	
	com Direct-Link Item Syntax	
, .ppir		- 1

INAT OPC Server TCPIPH1 Item Syntax	
Siemens Simatic Net Item Syntax	
Siemens STEP 7 Item Syntax	
Softing S7/S5 OPC Server Item Syntax	
Index	

## Siemens TCP/IP Ethernet Driver

## CONTENTS

#### Overview What is the Siemens TCP/IP Ethernet Driver?

<u>Setup</u> How do I configure a channel and device for use with this driver?

#### **Configuration via API**

How do I configure a channel and device using the Configuration API?

#### Automatic Tag Database Generation

How can I configure tags for the Siemens TCP/IP Ethernet Driver?

#### **Optimizing Communications**

How do I get the best performance from the driver?

## Data Types Description

What data types does this driver support?

#### **Address Descriptions**

How do I address a data location on a Siemens TCP/IP device?

#### **Event Log Messages**

What messages does the Siemens TCP/IP Ethernet Driver produce?

**Tip**: For S7 1200 and 1500 PLC support, consider the Siemens S7 Plus Ethernet Driver.

Version 1.136 © 2025 PTC Inc. All Rights Reserved.

#### **Overview**

The Siemens TCP/IP Ethernet Driver provides a reliable way to connect Siemens TCP/IP Ethernet devices to OPC client applications, including HMI, SCADA, Historian, MES, ERP, and countless custom applications. It is intended for use with Siemens S7-200, 300, 400, 1200, and 1500 PLCs. There are two options for communications:

- Industrial Ethernet TCP/IP interface communication processor (CP). The protocol used is S7 Messaging on Industrial Ethernet (ISO 8073 Class 0) over TCP/IP as defined in RFC1006.
- Hilscher's NetLink adapter. Only an MPI port is required. The NetLink adapter does not support the S7-200 model.

The driver requires no special libraries or hardware. A standard Ethernet card is all that is needed.

## Setup

### **Supported Devices**

S7-200 via CP243 S7-300 via CP343 S7-400 via CP443 S7-1200\* S7-1500\* S7-300 via NetLink S7-400 via NetLink

\*This device has a built-in Ethernet module.

#### Supported NetLink Cables and Gateways

NT 50-MPI NL 50-MPI NL-MPI

Note: For NetLink users, NetLink communication parameters (such as IP Address, Subnet Mask, and Baud Rate) can be configured using the NetLink Configuration utility. This application is located in the server's Utilities sub-directory and can be launched using the Start menu shortcut.

## **Channel and Device Limits**

The maximum number of channels supported by this driver is 1024. The maximum number of devices supported by this driver is 1024 per channel.

## **Channel Properties – General**

This server supports the use of multiple simultaneous communications drivers. Each protocol or driver used in a server project is called a channel. A server project may consist of many channels with the same communications driver or with unique communications drivers. A channel acts as the basic building block of an OPC link. This group is used to specify general channel properties, such as the identification attributes and operating mode.

Property Groups	Identification	
General	Name	
h	Description	
Write Optimizations Advanced	Driver	
	Diagnostics	
	Diagnostics Capture	Disable
	Tag Counts	
	Static Tags	10

### Identification

**Name**: Specify the user-defined identity of this channel. In each server project, each channel name must be unique. Although names can be up to 256 characters, some client applications have a limited display window when browsing the OPC server's tag space. The channel name is part of the OPC browser information. The property is required for creating a channel.

For information on reserved characters, refer to "How To... Properly Name a Channel, Device, Tag, and Tag Group" in the server help.

Description: Specify user-defined information about this channel.

Many of these properties, including Description, have an associated system tag.

Driver: Specify the protocol / driver for this channel. Specify the device driver that was selected during channel creation. It is a disabled setting in the channel properties. The property is required for creating a channel.
 Note: With the server's online full-time operation, these properties can be changed at any time. This includes changing the channel name to prevent clients from registering data with the server. If a client has already acquired an item from the server before the channel name is changed, the items are unaffected. If, after the channel name has been changed, the client application releases the item and attempts to re-acquire using the old channel name, the item is not accepted. Changes to the properties should not be made once a large client application has been developed. Utilize proper user role and privilege management to prevent operators from changing properties or accessing server features.

#### Diagnostics

**Diagnostics Capture**: When enabled, this option makes the channel's diagnostic information available to OPC applications. Because the server's diagnostic features require a minimal amount of overhead processing, it is recommended that they be utilized when needed and disabled when not. The default is disabled.

**Note:** This property is not available if the driver does not support diagnostics.

For more information, refer to Communication Diagnostics in the server help.

## Tag Counts

**Static Tags**: Provides the total number of defined static tags at this level (device or channel). This information can be helpful in troubleshooting and load balancing.

## Channel Properties – Ethernet Communications

Ethernet Communication can be used to communicate with devices.

Property Groups	Bthernet Settings		
General	Network Adapter	Default	-
Ethernet Communications			
Write Optimizations			
Advanced			

## Ethernet Settings

**Network Adapter**: Specify the network adapter to bind. When left blank or Default is selected, the operating system selects the default adapter.

## **Channel Properties – Write Optimizations**

The server must ensure that the data written from the client application gets to the device on time. Given this goal, the server provides optimization properties to meet specific needs or improve application responsiveness.

Property Groups	Write Optimizations	
General	Optimization Method	Write Only Latest Value for All Tags
	Duty Cycle	10
Write Optimizations		

### Write Optimizations

Optimization Method: Controls how write data is passed to the underlying communications driver. The options are:

- Write All Values for All Tags: This option forces the server to attempt to write every value to the controller. In this mode, the server continues to gather write requests and add them to the server's internal write queue. The server processes the write queue and attempts to empty it by writing data to the device as quickly as possible. This mode ensures that everything written from the client applications is sent to the target device. This mode should be selected if the write operation order or the write item's content must uniquely be seen at the target device.
- Write Only Latest Value for Non-Boolean Tags: Many consecutive writes to the same value can accumulate in the write queue due to the time required to actually send the data to the device. If the server updates a write value that has already been placed in the write queue, far fewer writes are needed to reach the same final output value. In this way, no extra writes accumulate in the server's queue. When the user stops moving the slide switch, the value in the device is at the correct value at virtually the same time. As the mode states, any value that is not a Boolean value is updated in the server's internal write queue and sent to the device at the next possible opportunity. This can greatly improve the application performance.
   Note: This option does not attempt to optimize writes to Boolean values. It allows users to optimize the operation of HMI data without causing problems with Boolean operations, such as a momentary push button.
- Write Only Latest Value for All Tags: This option takes the theory behind the second optimization mode and applies it to all tags. It is especially useful if the application only needs to send the latest value to the device. This mode optimizes all writes by updating the tags currently in the write queue before they are sent. This is the default mode.

**Duty Cycle**: is used to control the ratio of write to read operations. The ratio is always based on one read for every one to ten writes. The duty cycle is set to ten by default, meaning that ten writes occur for each read operation. Although the application is performing a large number of continuous writes, it must be ensured that read data is still given time to process. A setting of one results in one read operation for every write operation. If there are no write operations to perform, reads are processed continuously. This allows optimization for applications with continuous writes versus a more balanced back and forth data flow.

• Note: It is recommended that the application be characterized for compatibility with the write optimization enhancements before being used in a production environment.

## Channel Properties – Advanced

This group is used to specify advanced channel properties. Not all drivers support all properties; so the Advanced group does not appear for those devices.

Property Groups	Non-Normalized Float Handling	
General	Floating-Point Values	Replace with Zero
Write Optimizations	Inter-Device Delay	
Advanced	Inter-Device Delay (ms)	0

**Non-Normalized Float Handling**: A non-normalized value is defined as Infinity, Not-a-Number (NaN), or as a Denormalized Number. The default is Replace with Zero. Drivers that have native float handling may default to Unmodified. Non-normalized float handling allows users to specify how a driver handles non-normalized IEEE-754 floating point data. Descriptions of the options are as follows:

- **Replace with Zero**: This option allows a driver to replace non-normalized IEEE-754 floating point values with zero before being transferred to clients.
- **Unmodified**: This option allows a driver to transfer IEEE-754 denormalized, normalized, non-number, and infinity values to clients without any conversion or changes.

Note: This property is disabled if the driver does not support floating-point values or if it only supports the option that is displayed. According to the channel's float normalization setting, only real-time driver tags (such as values and arrays) are subject to float normalization. For example, EFM data is not affected by this setting.

For more information on the floating-point values, refer to "How To ... Work with Non-Normalized Floating-Point Values" in the server help.

**Inter-Device Delay**: Specify the amount of time the communications channel waits to send new requests to the next device after data is received from the current device on the same channel. Zero (0) disables the delay.

• Note: This property is not available for all drivers, models, and dependent settings.

## **Device Properties – General**

Property Groups	Identification	
General	Name	Siemens TCP/IP Ethernet
Ethemet Communications	Description	
Write Optimizations Advanced	Driver	Siemens TCP/IP Ethemet
	Diagnostics	
	Diagnostics Capture	Disable
	Tag Counts	
	Static Tags	1

#### Identification

Name: User-defined identity of this device.

**Description**: User-defined information about this device.

Channel Assignment: User-defined name of the channel to which this device currently belongs.

Driver: Selected protocol driver for this device.

Model: Select the specific version of the device.

**ID**: the unique identity of the device for communication with the driver. The device ID is formatted as *YYY.YYY.YYY.YYY*, where *YYY* designates the device's IP address. Each *YYY* byte should be in the range of 0 to 255. If the device supports host name resolution, the device ID may also be specified as a standard UNC/DNS name.

#### See Also: Operating Mode

#### **Operating Mode**

Property Groups	roperty Groups 🗄 Identification	
General	Operating Mode	
	Data Collection	Enable
	Simulated	No

**Data Collection**: This property controls the device's active state. Although device communications are enabled by default, this property can be used to disable a physical device. Communications are not attempted when a device is disabled. From a client standpoint, the data is marked as invalid and write operations are not accepted. This property can be changed at any time through this property or the device system tags.

**Simulated**: Place the device into or out of Simulation Mode. In this mode, the driver does not attempt to communicate with the physical device, but the server continues to return valid OPC data. Simulated stops physical communications with the device, but allows OPC data to be returned to the OPC client as valid data. While in Simulation Mode, the server treats all device data as reflective: whatever is written to the simulated device is read back and each OPC item is treated individually. The item's memory map is based on the group Update Rate. The data is not saved if the server removes the item (such as when the server is reinitialized). The default is No.

#### Notes:

- 1. Updates are not applied until clients disconnect and reconnect.
- 2. The System tag (\_Simulated) is read only and cannot be written to for runtime protection. The System tag allows this property to be monitored from the client.
- 3. In Simulation mode, the item's memory map is based on client update rate(s) (Group Update Rate for OPC clients or Scan Rate for native and DDE interfaces). This means that two clients that reference the same item with different update rates return different data.
- 4. When a device is simulated, updates may not appear faster than one (1) second in the client.

Simulation Mode is for test and simulation purposes only. It should never be used in a production environment.

## Device Properties – Scan Mode

The Scan Mode specifies the subscribed-client requested scan rate for tags that require device communications. Synchronous and asynchronous device reads and writes are processed as soon as possible; unaffected by the Scan Mode properties.

Property Groups	🖻 Scan Mode		😑 Scan Mode	
General	Scan Mode	Respect Client-Specified Scan Rate 📼		
Scan Mode	Initial Updates from Cache	Disable		

Scan Mode: Specify how tags in the device are scanned for updates sent to subscribing clients. Descriptions of the options are:

- Respect Client-Specified Scan Rate: This mode uses the scan rate requested by the client.
- Request Data No Faster than Scan Rate: This mode specifies the value set as the maximum scan rate. The valid range is 10 to 99999990 milliseconds. The default is 1000 milliseconds.
   Note: When the server has an active client and items for the device and the scan rate value is increased,
- the changes take effect immediately. When the scan rate value is decreased, the changes do not take effect until all client applications have been disconnected.
- Request All Data at Scan Rate: This mode forces tags to be scanned at the specified rate for subscribed clients. The valid range is 10 to 99999990 milliseconds. The default is 1000 milliseconds.
- Do Not Scan, Demand Poll Only: This mode does not periodically poll tags that belong to the device nor perform a read to get an item's initial value once it becomes active. It is the OPC client's responsibility to

poll for updates, either by writing to the DemandPoll tag or by issuing explicit device reads for individual items. For more information, refer to "Device Demand Poll" in server help.

• Respect Tag-Specified Scan Rate: This mode forces static tags to be scanned at the rate specified in their static configuration tag properties. Dynamic tags are scanned at the client-specified scan rate.

Initial Updates from Cache: When enabled, this option allows the server to provide the first updates for newly activated tag references from stored (cached) data. Cache updates can only be provided when the new item reference shares the same address, scan rate, data type, client access, and scaling properties. A device read is used for the initial update for the first client reference only. The default is disabled; any time a client activates a tag reference the server attempts to read the initial value from the device.

## **Device Properties – Timing**

The device Timing properties allow the driver's response to error conditions to be tailored to fit the application's needs. In many cases, the environment requires changes to these properties for optimum performance. Factors such as electrically generated noise, modem delays, and poor physical connections can influence how many errors or timeouts a communications driver encounters. Timing properties are specific to each configured device.

Property Groups	Communication Timeouts	
General	Connect Timeout (s)	3
Scan Mode	Request Timeout (ms)	1000
	Attempts Before Timeout	3
riming		

## **Communications Timeouts**

Connect Timeout: This property (which is used primarily by Ethernet based drivers) controls the amount of time required to establish a socket connection to a remote device. The device's connection time often takes longer than normal communications requests to that same device. The valid range is 1 to 30 seconds. The default is typically 3 seconds, but can vary depending on the driver's specific nature. If this setting is not supported by the driver, it is disabled.

Note: Due to the nature of UDP connections, the connection timeout setting is not applicable when communicating via UDP.

Request Timeout: Specify an interval used by all drivers to determine how long the driver waits for a response from the target device to complete. The valid range is 50 to 9999999 milliseconds (167 minutes). The default is usually 1000 milliseconds, but can vary depending on the driver. The default timeout for most serial drivers is based on a baud rate of 9600 baud or better. When using a driver at lower baud rates, increase the timeout to compensate for the increased time required to acquire data.

Attempts Before Timeout: Specify how many times the driver issues a communications request before considering the request to have failed and the device to be in error. The valid range is 1 to 10. The default is typically 3, but can vary depending on the driver's specific nature. The number of attempts configured for an application depends largely on the communications environment. This property applies to both connection attempts and request attempts.

#### Timing

Inter-Request Delay: Specify how long the driver waits before sending the next request to the target device. It overrides the normal polling frequency of tags associated with the device, as well as one-time reads and writes. This delay can be useful when dealing with devices with slow turnaround times and in cases where network load is a concern. Configuring a delay for a device affects communications with all other devices on the channel. It is recommended that users separate any device that requires an inter-request delay to a separate channel if possible. Other communications properties (such as communication serialization) can extend this delay. The valid range is 0 to 300,000 milliseconds; however, some drivers may limit the maximum value due to a function of their particular design. The default is 0, which indicates no delay between requests with the target device.

**Note:** Not all drivers support Inter-Request Delay. This setting does not appear if it is not available.

11 .

Property Groups	Timing	
General	Inter-Request Delay (ms)	0
Scan Mode		
Timing		

## Device Properties – Auto-Demotion

The Auto-Demotion properties can temporarily place a device off-scan in the event that a device is not responding. By placing a non-responsive device offline for a specific time period, the driver can continue to optimize its communications with other devices on the same channel. After the time period has been reached, the driver reattempts to communicate with the non-responsive device. If the device is responsive, the device is placed on-scan; otherwise, it restarts its off-scan time period.

Property Groups	Auto-Demotion	
General	Demote on Failure	Enable 🔹
Scan Mode	Timeouts to Demote	3
Timing	Demotion Period (ms)	10000
Auto-Demotion	Discard Requests when Demoted	Disable
Auto-Demotion		

**Demote on Failure**: When enabled, the device is automatically taken off-scan until it is responding again. **Tip**: Determine when a device is off-scan by monitoring its demoted state using the \_AutoDemoted system tag.

**Timeouts to Demote**: Specify how many successive cycles of request timeouts and retries occur before the device is placed off-scan. The valid range is 1 to 30 successive failures. The default is 3.

**Demotion Period**: Indicate how long the device should be placed off-scan when the timeouts value is reached. During this period, no read requests are sent to the device and all data associated with the read requests are set to bad quality. When this period expires, the driver places the device on-scan and allows for another attempt at communications. The valid range is 100 to 3600000 milliseconds. The default is 10000 milliseconds.

**Discard Requests when Demoted**: Select whether or not write requests should be attempted during the off-scan period. Disable to always send write requests regardless of the demotion period. Enable to discard writes; the server automatically fails any write request received from a client and does not post a message to the Event Log.

## **Device Properties – Tag Generation**

The automatic tag database generation features make setting up an application a plug-and-play operation. Select communications drivers can be configured to automatically build a list of tags that correspond to device-specific data. These automatically generated tags (which depend on the nature of the supporting driver) can be browsed from the clients.

Not all devices and drivers support full automatic tag database generation and not all support the same data types. Consult the data types descriptions or the supported data type lists for each driver for specifics.

If the target device supports its own local tag database, the driver reads the device's tag information and uses the data to generate tags within the server. If the device does not natively support named tags, the driver creates a list of tags based on driver-specific information. An example of these two conditions is as follows:

- 1. If a data acquisition system supports its own local tag database, the communications driver uses the tag names found in the device to build the server's tags.
- 2. If an Ethernet I/O system supports detection of its own available I/O module types, the communications driver automatically generates tags in the server that are based on the types of I/O modules plugged into the Ethernet I/O rack.

• Note: Automatic tag database generation's mode of operation is completely configurable. For more information, refer to the property descriptions below.

Property Groups	Tag Generation	
General	On Device Startup	Do Not Generate on Startup
Timing	On Duplicate Tag	Delete on Create
Auto-Demotion	Parent Group	
Tag Generation	Allow Automatically Generated Subgroups	Enable
Communications	Create	Create tags
Redundancy		

On Property Change: If the device supports automatic tag generation when certain properties change, the On Property Change option is shown. It is set to Yes by default, but it can be set to No to control over when tag generation is performed. In this case, the Create tags action must be manually invoked to perform tag generation.

**On Device Startup**: Specify when OPC tags are automatically generated. Descriptions of the options are as follows:

- **Do Not Generate on Startup**: This option prevents the driver from adding any OPC tags to the tag space of the server. This is the default setting.
- Always Generate on Startup: This option causes the driver to evaluate the device for tag information. It also adds tags to the tag space of the server every time the server is launched.
- Generate on First Startup: This option causes the driver to evaluate the target device for tag information the first time the project is run. It also adds any OPC tags to the server tag space as needed.

• Note: When the option to automatically generate OPC tags is selected, any tags that are added to the server's tag space must be saved with the project. Users can configure the project to automatically save from the **Tools** | **Options** menu.

**On Duplicate Tag**: When automatic tag database generation is enabled, the server needs to know what to do with the tags that it may have previously added or with tags that have been added or modified after the communications driver since their original creation. This setting controls how the server handles OPC tags that were automatically generated and currently exist in the project. It also prevents automatically generated tags from accumulating in the server.

For example, if a user changes the I/O modules in the rack with the server configured to Always Generate on Startup, new tags would be added to the server every time the communications driver detected a new I/O module. If the old tags were not removed, many unused tags could accumulate in the server's tag space. The options are:

- Delete on Create: This option deletes any tags that were previously added to the tag space before any new tags are added. This is the default setting.
- **Overwrite as Necessary**: This option instructs the server to only remove the tags that the communications driver is replacing with new tags. Any tags that are not being overwritten remain in the server's tag space.
- **Do not Overwrite**: This option prevents the server from removing any tags that were previously generated or already existed in the server. The communications driver can only add tags that are completely new.
- **Do not Overwrite, Log Error**: This option has the same effect as the prior option, and also posts an error message to the server's Event Log when a tag overwrite would have occurred.

• Note: Removing OPC tags affects tags that have been automatically generated by the communications driver as well as any tags that have been added using names that match generated tags. Users should avoid adding tags to the server using names that may match tags that are automatically generated by the driver.

**Parent Group**: This property keeps automatically generated tags from mixing with tags that have been entered manually by specifying a group to be used for automatically generated tags. The name of the group can be up to 256 characters. This parent group provides a root branch to which all automatically generated tags are added.

Allow Automatically Generated Subgroups: This property controls whether the server automatically creates subgroups for the automatically generated tags. This is the default setting. If disabled, the server generates the device's tags in a flat list without any grouping. In the server project, the resulting tags are named with the address value. For example, the tag names are not retained during the generation process.

• Note: If, as the server is generating tags, a tag is assigned the same name as an existing tag, the system automatically increments to the next highest number so that the tag name is not duplicated. For example, if the generation process creates a tag named "AI22" that already exists, it creates the tag as "AI23" instead. **Create**: Initiates the creation of automatically generated OPC tags. If the device's configuration has been modified, **Create tags** forces the driver to reevaluate the device for possible tag changes. Its ability to be accessed from the System tags allows a client application to initiate tag database creation.

• Note: Create tags is disabled if the Configuration edits a project offline.

#### **Device Properties – Communications Parameters**

Property Groups	Communication Parame	ters	
General	Port Number	102	
Scan Mode	MPLID	0	
Timing			
Auto-Demotion			
Tag Generation			
Communication Parameters			
S7 Communication Parameters			
Addressing Options			
Tag Import			
Redundancy			

**Port Number**: This parameter specifies the port number that the remote CP is configured to use. The default setting for TCP/IP is 102 (TSAP). The default setting for NetLink is 1099.

• Note: It is recommended that the default port be used for most applications, where the server and the PLC exist on the same network. For an application using the Internet through firewalls and advanced routers, the port number can be changed to allow these operations to occur. In most cases, however, the PLC only accepts a connection on port 102/1099 and may require router forwarding.

**MPI ID**: This parameter is for NetLink only, and is configured for the port in which the NetLink adapter is connected. It does not apply to models utilizing the TCP/IP CPs (such as S7-300 and S7-400). A maximum of two connections or devices via TCP are possible when using the NetLink adapter.

## **Device Properties – S7 Communication Parameters**

The S7 family includes specific parameters, which are broken out into the following groups: <u>S7 Communication</u> Parameters, <u>S7-200</u>, and <u>S7-300/400/1200/1500</u>.

Property Groups	S7 Communication Parame	sters	
General	Maximum PDU Size	960	
Scan Mode	⊟ \$7-200		
Timing	Local TSAP	4D57	
Auto-Demotion	Remote TSAP	4D57	
Tag Generation	E \$7-300/400/1200/1500		
Communication	Link Type	PC	
S7 Communication Parameters	CPU Rack	0	
Addressing Options	CPU Slot	2	
Tag Import			
Redundancy			

#### **S7** Communication Parameters

**Maximum PDU Size**: This parameter establishes the maximum Protocol Data Unit (PDU) size that will be requested from the device. The actual PDU used for communication depends on what the device supports. Typically, the driver and device negotiate the highest supported PDU size. However, this parameter can force a lower PDU size than would normally be negotiated.

Note: To observe the PDU value negotiated with the device, use the \_CurrentPDUSize internal tag (See <u>Internal</u> Tags).

#### S7-200

S7-200 enables communication with S7-200 devices on an Ethernet network. There are two options:

- PG connection (such as, a connection utilized by Micro/WIN). One connection is available.
- Configured connection (such as, a connection configured in Micro/WIN via the Ethernet wizard). Eight connections are available.

• Note: Configured connections are recommended because they free the PG port for Micro/WIN and also provide flexibility to make multiple concurrent connections.

#### Local TSAP

Link Type	TSAP Value (hex)
PG	4B57 ('KW')
Configured	A remote (client) TSAP configured in Micro/WIN's Ethernet wizard.
Configured	If Micro/WIN remote TSAP=xx.yy*, set local TSAP to xxyy.

#### Remote TSAP

Link Type	TSAP Value (hex)
PG	4B57 ('KW')
Configured	A local (server) TSAP configured in Micro/WIN's Ethernet wizard.
	If Micro/WIN remote TSAP=xx.yy*, set local TSAP to xxyy.

\*TSAP as displayed in Micro/WIN's Ethernet wizard. When accessed from V memory, the value may be in decimal form. For example, if TSAP is 10.00, the V memory value is 1000 hex or 4096 decimal. The values entered for Local TSAP must be in hexadecimal notation; in this example, the value 1000 would be entered.

**Tip**: Local TSAP==Micro/WIN remote TSAP, Remote TSAP==Micro/WIN local TSAP.

For information on using the CP243-1 module, refer to How to Configure S7-200 Connections in Micro/WIN.

#### \$7-300/400/1200/1500

Link Type: Defines the communication connection between the driver and the CP. The type of link chosen determines the number of simultaneous requests allowed. The greater the number of simultaneous requests, the greater the data throughput. Each device connection is allowed one outstanding request. To achieve multiple simultaneous requests, multiple connections must be configured. This is achieved by defining the device multiple times in the server (identical device properties). The devices can be defined within the same channel or under separate channels.

For more information, refer to Optimizing Communication.

Channel.Device=1 CP connection

There are three types of links: PC (applications), OP (operator panel), and PG (programming device). OP and PG are usually reserved, but can be used if all PC connections are taken.

Туре	S7-300 CPU 314, 315	S7-400 CPU 412, 413	S7-400 CPU 414	S7-400 CPU 416
PC	2	14	30	62
OP	1	1	1	1
PG	1	1	1	1

#### Example

Given an S7-400 CPU 412 device, 14 simultaneous requests can be achieved by defining 14 identical devices in the server with all configured for Link Type PC. In addition to the PC connections, two more devices can be configured for Link Type OP and PG. This provides 16 connections overall.

Connection resources are shared amongst applications communicating with the CP. If another application such as STEP 7 is configured to use Industrial Ethernet over TCP/IP, at least one PG/PC connection must be left open for that application.

For information on increasing the number of PG, OP, and PC type connections, refer to <u>How to Configure</u> S7-300/400 Connections in STEP 7.

CPU Rack: The number of the rack in which the CPU of interest resides.

CPU Slot: The number of the slot in the rack in which the CPU of interest resides.

For information on how to read or write the rack number or slot number using an internal tag, refer to <u>Internal</u> Tags.

## **Device Properties – Addressing Options**

Property Groups	Addressing Options		
General	Byte Order	Big Endian	
Scan Mode			
Timing			
Auto-Demotion			
Tag Generation			
Communication Parameters			
S7 Communication Parameters			
Addressing Options			
Tag Import			
Redundancy			

Byte Order : establishes the order for 16-bit and 32-bit values. Options include Big Endian (S7 Default) or Little Endian, explained below.

#### Big Endian

																D	Wo	ord	1													
- 7	- 6	5	4	-	- 3	- 2	- 1	- 0	1- 5	1- 4	1- 3	1- 2	1- 1	1- 0	- 9	- 8	2- 3	2- 2	2- 1	2- 0	1- 9	1- 8	1- 7	1- 6	3- 1	3- 0	2- 9	2- 8	2- 7	2- 6	2- 5	2- 4
								W	ord	11													1	Wo	rd 3	3						
- 7	- 6	5	4	-	- 3	- 2	- 1	- 0	1- 5	1- 4	1- 3	1- 2	1- 1	1- 0	- 9	- 8	7	6	5	4	3	2	1	0	1- 5	1- 4	1- 3	1- 2	1- 1	1- 0	9	8
	Byte 1   Byte 2   Byte 3   Byte 4																															
- 7	- 6	5	. 4	-   ;	- 3	- 2	- 1	- 0	7	6	5	4	3	2	- 1	- 0	7	6	5	4	3	2	1	0	7	6	5	4	3	2	1	0

Bits

- The bit range for DWord 1 is 31-0.
- The bit range for Word 1 and Word 3 is 15-0.
- The bit range for Byte 1, Byte 2, Byte 3, and Byte 4 is 7-0.

Note: Big Endian uses bytes ordered from highest to lowest. The bit order is never changed.

#### Little Endian

													[	DW	ord	1															
3- 1	3- 0	2- 9	2- 8	2- 7	2- 6	2- 5	2- 4	2- 3	2- 2	2- 1	2- 0	1- 9	1- 8	1- 7	1- 6	1- 5	1- 4	1- 3	1- 2	1- 1	1- 0	- 9	- 8	- 7	- 6	- 5	- 4	- 3	-2	- 1	- 0
	<u> </u>						Wo	rd 3	3				L									Wo	ord	1				1			
1- 5	1- 4	1- 3	1- 2	1- 1	1- 0	9	8	7	6	5	4	3	2	1	0	1- 5	1- 4	1- 3	1- 2	1- 1	1- 0	- 9	- 8	- 7	- 6	- 5	- 4	- 3	2	- 1	- 0
			By	te 4							Byt	e 3							Byte	e 2						E	<b>Byt</b>	e 1			
7	6	5	4	3	2	1	0	7	6	5	4	3	2	1	0	7	6	5	4	3	2	- 1	- 0	- 7	- 6	- 5	- 4	- 3	- 2	- 1	- 0

#### Bits

17 \_\_\_\_

- The bit range for DWord 1 is 31-0.
- The bit range for Word 3 and Word 1 is 15-0.
- The bit range for Byte 4, Byte 3, Byte 2, and Byte 1 is 7-0.

• Note: Little Endian uses bytes ordered from lowest to highest. The bit order is never changed.

## **Device Properties – Tag Import**

The Tag Import parameters allow automatic tag database generation from projects defined in Siemens STEP 7 orin Siemens TIA Portal that were exported via the TIA Portal Exporter.

#### Supported Models via Siemens STEP 7

S7-300 S7-400

#### Supported Models via Siemens TIA Portal

S7-300 S7-400 S7-1200 S7-1500

## STEP 7 Tag Import

Property Groups	Tag Import	
General	Tag Import Type	Step 7 Project File
Scan Mode	Step 7 Project (*.S7P)	
Timing	Program Path	
Auto-Demotion		
Tag Generation		
Communication Parameters		
S7 Communication Parameters		
Addressing Options		
Tag Import		
Redundancy		

Tag Import Type: Select "Step 7 Project File" from the drop-down menu.

**STEP 7 Project (\*.S7P)**: Locate and select the desired STEP 7 project file (\*.S7P) from which to import tags. **Note**: The desired STEP 7 project file (\*.S7P) must be located in the Step 7 project directory to import tags.

**Program Path**: Specify the PLC program within the project for which tags should be generated. The program path format is "Station Name\CPU Name\Program Name" and the program path selection drop-down list can be populated with stations that have single or multiple CPUs. When a station with multiple CPUs is found, each CPU associated with the station has a CPU ID designator formatted as " @ ID x" appended to the CPU name portion of program path.

For example: A SIMATIC 400 controller with two 400 CPUs would have two entries:

- "=K51 S7-400\K34 CPU @ ID 3\K34"
- "=K51 S7-400\CPU 416-3 DP @ ID 2\K51"

**Note**: Tag import for the Siemens S7-300 and S7-400 devices have been qualified for use with projects created from Siemens Simatic STEP 7 versions 5.3, 5.4, and 5.5.

Important: Tag import for the Siemens TCP/IP Ethernet Driver supports tag names and comments in the native character set as specified by the Windows code page in the Siemens STEP 7 project's language file. A missing, altered, corrupt, or incorrect Siemens STEP 7 language file may cause tag names and comments to import incorrectly. Utilizing the STEP 7 language-neutral option (which allows text to be entered in a different character set than what is used in the STEP 7 language file) may also cause tag names and comments to import incorrectly. The STEP 7 language file can be located in the Global sub-directory of the STEP 7 project root. Automatic tag

generation may result in the display of incorrect characters if the necessary language packs are not installed on the system.

See Also: Appendix: Configuring Siemens Connections

#### **TIA Portal Tag Import**

The TIA Portal Exporter can export tags from a Siemens TIA Portal project into the server. This utility opens a project, and allows the selection of program blocks, tag tables, or individual tags for export. Tags are exported into a format which can be consumed by the Siemens TCP/IP Ethernet Driver Automatic Tag Generation process.

When Siemens TCP/IP Ethernet Driver is installed, the application installer for TIA Portal Exporter is saved in the Server's "Utilities" folder. Copy the installer to a computer that has Siemens TIA Portal and the Openness API installed. Run the installer and refer to the instructions in the Help documentation to create a \*.TPE export file.

Property Groups	🖃 Tag Import	
General	Tag Import Type	TIA Portal Exporter file
Scan Mode	TIA Portal Exporter file (*.TPE)	
Timing		
Auto-Demotion		
Tag Generation		
Communication Parameters		
S7 Communication Parameters		
Addressing Options		
Tag Import		
Redundancy	1	

Tag Import Type: Select "TIA Portal Exporter file" from the drop-down menu.

**TIA Portal Exporter file (\*.TPE)**: Locate and select the desired TIA Portal Exporter file (\*.TPE) from which to import tags.

## **Device Properties – Redundancy**

Property Groups	Redundancy	Redundancy		
General	Secondary Path	Channel.Device1		
Scan Mode	Operating Mode	Switch On Failure		
	Monitor Item			
Timing Auto-Demotion	Monitor Interval (s)	300		
	Return to Primary ASAP	Yes		
Redundancy	·····			

Redundancy is available with the Media-Level Redundancy Plug-In.

Consult the website, a sales representative, or the user manual for more information.

## Configuration API – Siemens TCP/IP Ethernet Example

For a list of channel and device definitions and enumerations, access the following endpoints with the REST client or refer to the appendices.

#### **Channel Definitions**

#### Endpoint (GET):

```
https://<hostname_or_ip>:<-
port>/config/v1/doc/drivers/Siemens%20TCP%2FIP%20Ethernet/channels
```

## **Device Definitions**

Endpoint (GET):

```
https://<hostname_or_ip>:<-
port>/config/v1/doc/drivers/Siemens%20TCP%2FIP%20Ethernet/devices
```

## **Create Siemens TCP/IP Ethernet Channel**

#### Endpoint (POST):

https://<hostname\_or\_ip>:<port>/config/v1/project/channels

#### Body:

```
"common.ALLTYPES_NAME": "MyChannel",
"servermain.MULTIPLE_TYPES_DEVICE_DRIVER": "Siemens TCP/IP Ethernet"
}
```

See Also: Appendix for a list of channel properties.

## **Create Siemens TCP/IP Ethernet Device**

#### Endpoint (POST):

```
https://<hostname_or_ip>:<port>/config/v1/project/channels/MyChannel/devices
```

Body:

```
"common.ALLTYPES_NAME": "MyDevice",
"servermain.DEVICE_ID_STRING": "<IP Address>",
"servermain.MULTIPLE_TYPES_DEVICE_DRIVER": "Siemens TCP/IP Ethernet",
"servermain.DEVICE_MODEL": <model enumeration>
```

where <IP Address> is the device's address.

Tip: The above minimum required properties are adequate to define a NetLink device as well.
See Also: Device Properties and Device Model Enumerations.

## Create Siemens TCP/IP Ethernet Tags

Endpoint (POST):

https://<hostname\_or\_ip>:<port>/config/v1/project/channels/MyChannel/devices/MyDevice/tags

Body:

```
{
    "common.ALLTYPES_NAME": "MyTag1",
    "servermain.TAG_ADDRESS": "DB1,INT00"
}
{
    "common.ALLTYPES_NAME": "MyTag2",
    "servermain.TAG_ADDRESS": "DB1,INT01"
}
```

See Also: Appendix for a list of tag properties.

See server and driver-specific help for more information on configuring projects over the Configuration API.

#### Enumerations

Some properties, such as Device Model, have values that are mapped to an enumeration. A valid list of enumerations and their values can be found by querying the device endpoint with 'content=property\_definitions 'or the documentation definitions endpoints.

For example, to view the property definitions for a device named "MyDevice" under a channel named "MyChannel", the GET request would be sent to:

```
https://<hostname_or_ip>:<-
port>/config/v1/project/channels/MyChannel/devices/MyDevice/?content=property definitions
```

Property definitions are also available for other objects such as channels or tags.

Alternatively, if enabled in the settings for the Configuration API, the channel and device property definitions for the driver can be viewed at:

https://<hostname\_or\_ip>:<port>/config/v1/doc/drivers/<drivername>/Channels

https://<hostname\_or\_ip>:<port>/config/v1/doc/drivers/<drivername>/Devices

#### **Example Data Type Enumerations**

Querying the documentation endpoint for tag data types provides the following enumerations:

```
"Default": -1,
"String": 0,
"Boolean": 1,
"Char": 2,
"Byte": 3,
"Short": 4,
"Word": 5,
"Long": 6,
"DWord": 7,
"Float": 8,
"Double": 9,
"BCD": 10,
"LBCD": 11,
"Date": 12,
"LLong": 13,
"QWord": 14,
"String Array": 20,
"Boolean Array": 21,
"Char Array": 22,
```

"Byte Array": 23,
"Short Array": 24,
"Word Array": 25,
"Long Array": 26,
"DWord Array": 27,
"Float Array": 28,
"Double Array": 29,
"BCD Array": 30,
"LBCD Array": 31,
"Date Array": 32,
"LLong Array": 33,
" QWord Array": 34

• Note: Supported data types vary by protocol and driver.

#### **Device Model Enumerations**

The Device Model property has values mapped to the following enumerations. The below table is for reference only; the information at the device endpoint is the complete and current source of information:

```
https://<hostname_or_ip>:<-
port>/config/v1/doc/drivers/Siemens%20TCP%2FIP%20Ethernet/Channels
```


```
https://<hostname_or_ip>:<-
port>/config/v1/doc/drivers/Siemens%20TCP%2FIP%20Ethernet/Devices
```

Enumeration	Device Model
0	S7-200
1	S7-300
2	S7-400
3	S7-1200
4	S7-1500
5	NetLink: S7-300
6	NetLink: S7-400

## Optimizing Communications


The Siemens TCP/IP Ethernet Driver was designed to provide the best performance with the least amount of impact on the system's overall performance. While the Siemens TCP/IP Ethernet Driver is fast, there are a couple of guidelines that can be used to optimize the application and gain maximum performance.

This server refers to communications protocols like Siemens TCP/IP Ethernet as a channel. Each channel defined in the application represents a separate path of execution in the server. Once a channel has been defined, a series of devices can then be defined under that channel. Each of these devices represents a single Siemens TCP/IP Ethernet controller from which data will be collected. Although this approach to defining the application provides a high level of performance, it does not take full advantage of the Siemens TCP/IP Ethernet Driver or the network. An example of how the application may appear when configured using a single channel is shown below.



Each device is defined under a single channel. In this configuration, the driver must move 57300 OP from one device to the next as quickly as possible to gather information at an effective rate. 57300\_PC1 As more devices are added or more information is requested from a single device, the over-57300\_PC2 all update rate begins to suffer.

If the Siemens TCP/IP Ethernet Driver could only define one channel, the example above would be the only option available; however, the driver can define up to 1024 channels. Using multiple channels distributes the data collection workload by simultaneously issuing multiple requests to the network. An example of how the same application may appear when configured using multiple channels is shown below.

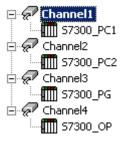

Each device can be defined under its own channel. In this configuration, a single path of 57300\_PC1 execution is dedicated to the task of gathering data from each device.

The performance will improve even if the application has more than 1024 devices. While 57300\_PC2 1024 or fewer devices may be ideal, the application will still benefit from additional channels. Although spreading the device load across all channels will cause the server to move from device to device again, it can now do so with far less devices to process on a single channel.

Although the maximum number of channels is 1024, the device ultimately determines the number of allowed connections. This constraint comes from the fact that some devices cannot support so many connections. For these devices, the maximum number of channels defined should equal the maximum number of connections allowed. For devices that support more connections, the maximum of 1024 channels should be defined, with devices spread evenly over these channels.

For more information on device connections, refer to Device Properties.

# Data Types Description

Data Type	Description
Boolean	Single bit
Byte	Unsigned 8-bit value
Char	Signed 8-bit value
	Unsigned 16-bit value
Word	bit 0 is the low bit
	bit 15 is the high bit
	Signed 16-bit value
Short	bit 0 is the low bit
Snort	bit 14 is the high bit
	bit 15 is the sign bit
BCD	Two-byte packed BCD
BCD	Value range is 0-9999. Behavior is undefined for values beyond this range.
	Unsigned 32-bit value
DWord	bit 0 is the low bit
	bit 31 is the high bit
	Signed 32-bit value
Long	bit 0 is the low bit
Long	bit 30 is the high bit
	bit 31 is the sign bit
LBCD	Four-byte packed BCD
LBCD	Value range is 0-999999999. Behavior is undefined for values beyond this range.
	32-bit floating-point value
Float	The driver interprets two consecutive registers as a floating-point value by making the second register the high word and the first register the low word.
Date	64-bit floating-point value
	Unsigned 64-bit value
QWord	bit 0 is the low bit
	bit 63 is the high bit
	Signed 64-bit value
Llong	bit 0 is the low bit
LLong	bit 62 is the high bit
	bit 63 is the sign bit
Double	64-bit floating point value
String	Null-terminated ASCII string*

\*The Data Block subtype, String, is a NULL padded ASCII string.

## Address Descriptions

Address specifications vary depending on the model in use. Select a link from the following list to obtain information for the model of interest.

S7-200 Address Descriptions S7-300 Address Descriptions S7-400 Address Descriptions S7-1200 Address Descriptions S7-1500 Address Descriptions NetLink: S7-300 Address Descriptions NetLink: S7-400 Address Descriptions Internal Tags

## S7-200 Address Descriptions

The default data types for dynamically defined tags are shown in **bold**.

Address Type	Range	Туре	Access
	10.b-165535.b .b is Bit Number 0-7	Boolean	Read / Write
Discrete Inputs (IEC)	IB0-IB65535 IW0-IW65534 ID0-ID65532	<b>Byte</b> , Char, String** <b>Word</b> , Short, BCD <b>DWord</b> , Long, LBCD, Float	Read / Write Read / Write Read / Write
	E0.b-E65535.b .b is Bit Number 0-7	Boolean	Read / Write
Discrete Inputs (SIMATIC)	EB0-EB65535** EW0-EW65534 ED0-ED65532	<b>Byte</b> , Char, String** <b>Word</b> , Short, BCD <b>DWord</b> , Long, LBCD, Float	Read / Write Read / Write Read / Write
Note: I and E access the	same memory area.		
	Q0.b-Q65535.b .b is Bit Number 0-7	Boolean	Read / Write
Discrete Outputs (IEC)	QB0-QB65535 QW0-QW65534 QD0-QD65532	<b>Byte</b> , Char, String** Word, Short, BCD DWord, Long, LBCD, Float	Read / Write Read / Write Read / Write
	A0.b-A65535.b .b is Bit Number 0-7	Boolean	Read / Write
Discrete Outputs (SIMATIC)	AB0-AB65535 AW0-AW65534 AD0-AD65532	<b>Byte</b> , Char, String** <b>Word</b> , Short, BCD <b>DWord</b> , Long, LBCD, Float	Read / Write Read / Write Read / Write
Note: Q and A access the	e same memory area.		
Analog Inputs (IEC)	AI0-AI65534*** AIW0-AIW65534	Word, Short	Read Only
Analog Inputs (SIMATIC)	AE0-AE65534*** AEW0-AEW65534	Word, Short	Read Only
Note: AI and AE access the same memory area.			
Analog Outputs (IEC)	AQ0-AQ65534*** AQW0-AQW65534	Word, Short	Read / Write

Address Type	Range	Туре	Access			
Analog Outputs (SIMATIC)	AA0-AA65534*** AAW0-AAW65534	Word, Short	Read / Write			
Note: AQ and AA access the same memory area.						
	M0.b-M65535.b .b is Bit Number 0-7	Boolean	Read / Write			
Internal Memory	MB0-MB65535 MW0-MW65534 MD0-MD65532	Byte, Char, String** Word, Short, BCD DWord, Long, LBCD, Float	Read / Write Read / Write Read / Write			
Special Memory	SM0.b-SM65535.b .b is Bit Number 0-7	Boolean	Read / Write			
Special Memory (Bytes 0-29 are Read Only)	SMB0-SMB65535 SMW0-SMW65534 SMD0-SMD65532	Byte, Char, String** Word, Short, BCD DWord, Long, LBCD, Float	Read / Write Read / Write Read / Write			
	S0.b-S65535.b .b is Bit Number 0-7	Boolean	Read / Write			
Sequence Control Relay (SCR)	SB0-SB65535 SW0-SW65534 SD0-SD65532	Byte, Char, String** Word, Short, BCD DWord, Long, LBCD, Float	Read / Write Read / Write Read / Write			
	V0.b-V65535.b .b is Bit Number 0-7	Boolean	Read / Write			
Variable Memory	VB0-VB65535 VW0-VW65535 VD0-VD65535	Byte, Char, String** Word, Short, BCD DWord, Long, LBCD, Float	Read / Write Read / Write Read / Write			
Timer Current Values	T0-T65535*	DWord, Long	Read / Write			
Timer Status Bit	T0-T65535*	Boolean	Read Only			
Counter Current Values (IEC)	C0-C65535*	Word, Short	Read / Write			
Counter Status Bit (IEC)	C0-C65535*	Boolean	Read Only			
Counter Current Values (SIMATIC)	Z0-Z65535*	Word, Short	Read / Write			
Counter Status Bit (SIMATIC)	Z0-Z65535*	Boolean	Read Only			
Note: C and Z access the same memory area.						
High-Speed Counter	HC0-HC65535*	DWord, <b>Long</b>	Read Only			

\*These memory types/subtypes do not support arrays.

\*\*Byte memory types (MB) support strings. The syntax for strings is *<address>.<length>* where 0 *< length <=* 932 (see notes below).

\*\*\*For Analog Inputs and Outputs, the address must be even (AI0, AI2, AI4, and so forth).

Notes:

- 1. All offsets for memory types I, Q, M, S, and SM represent a byte starting location within the specified memory type.
- 2. Use caution when modifying Word, Short, DWord, and Long types. For I, Q, and F, each address starts at a byte offset within the device. Therefore, Words MW0 and MW1 overlap at byte 1. Writing to MW0 will also

modify the value held in MW1. Similarly, DWord, and Long types can also overlap. It is recommended that these memory types be used so that overlapping does not occur. For example, DWord MD0, MD4, MD8, and so on can be used to prevent overlapping bytes.

 The total number of bytes being requested cannot exceed the data portion of the negotiated PDU size. For example, for a 960-byte PDU size, the largest single array that may be read or written is 932 bytes. If arrays exceed the negotiated PDU size, they may fail to be read or written.

#### Arrays

All memory types/subtypes with the exception of those marked with an asterisk support arrays. The valid syntax for declaring an array is as follows:

<address>[rows][cols] <address>.rows.cols <address>,rows,cols <address>\_rows\_cols

#### Notes:

- 1. If no rows are specified, a row count of 1 is assumed.
- For Word, Short, and BCD arrays, the base address + (rows \* cols \* 2) cannot exceed 65536. Keep in mind that the elements of the array are words, located on a word boundary. For example, IW0[4] would return IW0, IW2, IW4, and IW6.
- For Float, DWord, Long, and Long BCD arrays, the base address + (rows \* cols \* 4) cannot exceed 65536. Keep in mind that the elements of the array are DWord, located on a DWord boundary. For example, ID0[4] will return ID0, ID4, ID8, and ID12.
- 4. For all arrays, the total number of bytes requested cannot exceed the data portion of the negotiated PDU size. For example, for a 960-byte PDU size, the largest single array that may be read or written is 932 bytes. If arrays exceed the negotiated PDU size, they may fail to be read or written.

**Note**: The offset for an atomic type tag in a data block is denoted by the column "Address" in Step 7, as shown above. This offset is denoted by the column "Offset" in the Siemens TIA Portal programming environment.

## S7-300 Address Descriptions

#### Standard Support S7-300/400/1200/1500 Item Syntax Internal Tags

Third-Party Support

For users familiar with third-party applications, limited addressing support is available.

#### Legacy Support Legacy S7-300/400 Item Syntax

All brand and product names are trademarks, registered trademarks, or service marks of their respective holders.

## **S7-400 Address Descriptions**

Standard Support S7-300/400/1200/1500 Item Syntax Internal Tags

Third-Party Support For users familiar with third-party applications, limited addressing support is available.

Legacy Support Legacy S7-300/400 Item Syntax

All brand and product names are trademarks, registered trademarks, or service marks of their respective holders.

## S7-1200 Address Descriptions

Standard Support S7-300/400/1200/1500 Item Syntax Internal Tags

#### Third-Party Support

For users familiar with third-party applications, limited addressing support is available.

#### Legacy Support Legacy S7-300/400 Item Syntax

All brand and product names are trademarks, registered trademarks, or service marks of their respective holders.

#### **S7-1500 Address Descriptions**

Standard Support S7-300/400/1200/1500 Item Syntax Internal Tags

#### **Third-Party Support**

For users familiar with third-party applications, limited addressing support is available.

Legacy Support Legacy S7-300/400 Item Syntax

All brand and product names are trademarks, registered trademarks, or service marks of their respective holders.

#### ep - NetLink: S7-300 Address Descriptions

## Standard Support

S7-300/400/1200/1500 Item Syntax

#### **Third-Party Support**

For users familiar with third-party applications, limited addressing support is available.

#### Legacy Support Legacy S7-300/400 Item Syntax

All brand and product names are trademarks, registered trademarks, or service marks of their respective holders

#### NetLink: S7-400 Address Descriptions

Standard Support S7-300/400/1200/1500 Item Syntax

#### **Third-Party Support**

For users familiar with third-party applications, limited addressing support is available.

#### Legacy Support Legacy S7-300/400 Item Syntax

All brand and product names are trademarks, registered trademarks, or service marks of their respective holders

#### Internal Tags

Although the following internal tags are not visible in the server configuration, they can be browsed by the OPC client. They can be found under the *<Channel Name>.<Device Name>.\_InternalTags* group. If the OPC client does not support browsing, or if a non-OPC client is being used, the tags can be created dynamically and statically by using the addresses given below.

Note: The tags listed in the following table are valid for the S7-300, S7-400, S7-1200, and S7-1500 device models. The default data types are shown in **bold**.

Device Address	Description	Range	Data Type	Access
_RACK	Number of the rack in which the CPU of interest resides. On changing this device property, the connection with the CPU is re-established.	0-7	<b>Byte</b> , Short	Read / Write
_SLOT	Number of the slot in which the CPU of interest resides. On changing this device property, the connection with the CPU is re-established.	2-31	<b>Byte</b> , Short	Read / Write
_Cur- rentPDUSize	Subsequent to connection, this tag shows the size of the Protocol Data Unit which has been negotiated with the device. Prior to connection it shows the maximum con- figured PDU value.	240, 480, 960	Word	Read

## Standard S7-300/400/1200/1500 Item Syntax

### Address Syntax

### Input, Output, Peripheral, Flag Memory Types

<memory type><S7 data type><address>

<memory type><S7 data type><address><.bit>

<memory type><S7 data type><address><.string length>\* <memory type><S7 data type><address><[row][col]>

#### Timer and Counter Memory Types

<memory type><address>

### **DB Memory Type**

DB<num>,<S7 data type><address> DB<num>,<S7 data type><address><.bit> DB<num>,<S7 data type><address><.string length>\* DB<num>,<S7 data type><address><[row][col]>

where <num> ranges from 1 to 65535.

\*Applies to S7 data types that support string. String length can vary from 0 < n <= 932, with the exception of S7 data type string (which can vary from 0 < n <= 254 for a PDU size of 480 and above, 0 < n <= 210 for a PDU size below 480).

#### See Also: <u>Examples</u>, <u>String Support</u>

#### Memory Types

Memory Type	Description	Address Range	Data Type	Access
l E	Inputs	Dependent on S7 Data Type T0-T65535 DWord, <b>Long</b>		Read / Write
Q A	Outputs			Read / Write
PI PE	Peripheral Inputs			Read Only
PQ PA	Peripheral Outputs			Read / Write
M F	Flag Memory			Read / Write
DB	Data Blocks			Read / Write
Т	Timers			Read / Write
С	Counters	C0-C65535	Word, Short	Read / Write

Memory Type	Description	Address Range	Data Type	Access
Z		Z0-Z65535		

See Also: Examples

## S7 Data Types

The S7 data type is used to coerce the data type for a tag. It does not apply to Timers and Counters. The default data types are shown in **bold**.

S7 Data Type	Description	Address Range	Data Type
		B0-B65535 BYTE0-BYTE65535	Byte, Char
B Byte	Unsigned Byte	B0.b-B65535.b BYTE0.b-BYTE65535.b .b is Bit Number 0-7	Boolean
		B0.n-B65535.n	String*
		BYTE0.n-BYTE65535.n	
		.n is string length.	
		0 < n <= 932. C0-C65535 CHAR0-CHAR65535	Byte, Char
C	Signed Byte	C0.b-C65535.b CHAR0.b-CHAR65535.b .b is Bit Number 0-7	Boolean
Char		C0.n-C65535.n CHAR0.n-CHAR65535.n .n is string length.	String*
		0 <n<= 932.<="" td=""><td></td></n<=>	
		D0-D65532 DWORD0-DWORD65532	<b>DWord</b> , Long, LBCD, Float
D DWORD	Unsigned Double Word	D0.b-D65532.b DWORD0.b- DWORD65532.b .b is Bit Number 0-31	Boolean
DATE	S7 Date Stored as WORD in steps of 1 day since January 1, 1990. Displayed as string format "yyyy-mm-dd" with range "1990-01-01" to "2168-12- 31".	DATE0-DATE65534	String
	Read / Write		
DI	Signed	DI0-DI65532 DINT0-DINT65532	DWord, <b>Long</b> , LBCD, Float
DINT	Double Word	DI0.b-DI65532.b DINT0.b-DINT65532.b .b is Bit Number 0-31	Boolean

S7 Data Type	Description	Address Range	Data Type
DT	S7 Date_And_Time Complex data type stored with 8 bytes as follows: 0 year, 1 month, 2 days, 3 hours, 4 minutes, 5 seconds, 6 two most sig- nificant digits of MSEC, 7 (4MSB) two least sig- nificant digits of MSEC, 7 (4LSB) day of week (1=Sunday). Displayed as string format "m/d/y h:mm:ss <am pm="">" with range "1/1/1990 0:00:00 AM" to "12/31/2089 23:59:59 PM". Displayed as date format "yyyy-mm-ddTh- h:mm:ss.hhh" with range "1990-01- 01T00:00:00.000" to "2089-12- 31T23:59:59.998" Read Only</am>	DT0-DT65528	<b>String</b> , Date
I INT	Signed Word Signed	I0-I65534 INT0-INT65534 I0.b-I65534.b INT0.b-INT65534.b .b is Bit Number 0-15 LINT0-LINT65528	Word, <b>Short</b> , BCD Boolean QWord, <b>LLong</b> ,
LINT	Long Word (64-bit)	LINT0.b-LINT65528.b .b is Bit Number 0-63	Boolean
LREAL	IEEE Double (64-bit)	LREAL0-LREAL65528	Double
LWORD	Unsigned Long Word (64-bit)	LWORD0-LWORD65528 LWORD0.b- LWORD65528.b .b is Bit Number 0-63	<b>QWord</b> LLong Boolean
REAL	IEEE Float	REAL0-REAL65532	Float
String	S7 String	STRING0.n- STRING65532.n .n is string length 0 <n< (pdu="" 254="" of<br="" size="">480 and above) 0<n< (pdu="" 210="" size<br="">below 480) 0<n< (netlink="" 245="" s7300<br="">and Netlink S7400 Models)</n<></n<></n<>	String
T TIME	S7 TIME Stored as DWORD in steps of milliseconds.	T0-T65532 TIME0-TIME65532	String

S7 Data Type	Description	Address Range	Data Type
	Displayed as string format "+/-ddD_hhH_mmM_ssS_ hhhMS" with range "-24D_ 20H_31M_23S_648MS" to "24D_20H_31M_23S_ 647MS. Read / Write.		
TOD	S7 Time_Of_Day Stored as DWORD, rep- resenting milliseconds since midnight. Displayed as string format "h:m:s.mmm" with range "0:0:0.0" to "23:59:59.999". Read / Write	TOD0-TOD65532	String
W Word	Unsigned Word	W0-W65534 WORD0-WORD65534 W0.b-W65534.b WORD0.b- WORD65534.b .b is Bit Number 0-15	<b>Word</b> , Short, BCD Boolean
х	Bit	X0.b-X65534.b .b is Bit Number 0-15	Boolean

\*These are raw strings that differ in structure and usage from the STEP 7 string data type.

Use caution when modifying Word, Short, DWord, and Long type as each address starts at a byte offset within the device. Therefore, Words MW0 and MW1 overlap at byte 1. Writing to MW0 will also modify the value held in MW1. Similarly, DWord, and Long types can also overlap. It is recommended that these memory types be used so that overlapping does not occur. For example, DWord MD0, MD4, MD8, and so on can be used to prevent overlapping bytes.

#### See Also: Examples

#### String Support

#### **Raw Strings**

For an address DBx,By.n @ string, string values read and written are stored at byte offset y.

у	y+1	y+2	 y+n-1
11	11	11	 11

Raw strings are null-terminated. If the maximum string length is 10 and 3 characters are written, the fourth character is set to NULL, while characters 5-10 are left untouched.

**Note**: For raw strings, the total number of bytes requested cannot exceed the data portion of the negotiated PDU size. If raw strings exceed the negotiated PDU size, they may fail to be read or written.

#### String Support

The string subtype follows the STEP 7 string data type definition. The syntax for the string S7 data type is *STRINGy.n* where *y* is the Byte offset, and *n* is the maximum string length. If *n* is not specified, the maximum string length will be 254 characters when PDU size is >= 480, otherwise it will be 210. String values read and written are stored at byte offset y+2 in data block x. The actual string length gets updated with every write based on the string length of the string being written.

у	y+1	y+2	y+3	y+4	 y+2+n-1
maximum string length	actual string length	••	•••	••	 

У	y+1	y+2	y+3	y+4	 y+2+n-1
(n)					

Notes:

- 1. String strings are NULL padded. If the maximum string length is 10 and 3 characters are written, characters 4-10 are set to NULL.
- 2. If a PDU of 240 is negotiated, STEP 7 strings with a length greater than 222 may fail to be read and strings with a length greater than 212 may fail to be written.

### **Hex Strings**

The HEXSTRING subtype is specific to the Siemens TCP/IP Ethernet Driver. The syntax for the HEXSTRING subtype is *HEXSTRINGy.n*, where *y* is the byte offset and *n* is the length. The *n* value must be specified in the range of 1 through 932. String is the only valid data type for a HEXSTRING tag.

The value assigned to a HEXSTRING must be an even number of characters. There is no padding, so the entire string must be specified. For example, tag HexStr defined as DB1,STRING0.10 uses 10 bytes of storage and has a display length of 20. To assign a value, the string must be 20 characters long and contain only valid hexadecimal characters. An example valid hex string for this tag is "56657273696f6E353137".

## Array Support

The [rows][cols] notation is appended to an address to specify an array (such as MW0[2][5]). If no rows are specified, row count of 1 is assumed. Boolean arrays and string arrays are not supported.

For Word, Short, and BCD arrays, the base address + (rows \* cols \* 2) cannot exceed 65536. Keep in mind that the elements of the array are words, located on a word boundary. For example, IW0[4] would return IW0, IW2, IW4, and IW6.

For Float, DWord, Long, and Long BCD arrays, the base address + (rows \* cols \* 4) cannot exceed 65536. Keep in mind that the elements of the array are DWord, located on a DWord boundary. For example, ID0[4] will return ID0, ID4, ID8, ID12.

For all arrays, the total number of bytes requested cannot exceed the data portion of the negotiated PDU size. For example, for a 960-byte PDU size, the largest single array that may be read or written is 932 bytes. If arrays exceed the negotiated PDU size, they may fail to be read or written.

#### Timers

The Siemens TCP/IP Ethernet Driver automatically scales T values based on the Siemens S5 time format. Timer data is stored as a Word in the PLC but scaled to a DWord in the driver. The value returned will already be scaled using the appropriate Siemens time base. As a result, the values are always returned as a count of milliseconds. When writing to T memory, the Siemens time base will also be applied. To assign a value to a timer in the controller, write the desired value as a count of milliseconds to the appropriate timer.

#### Counters

The value returned for C memory will automatically be converted to a BCD value.

#### Examples

S7 Data Type	Data Type	Input	Flags	Data Blocks
		IB0	MB0	DB1,B0
		IBYTE0	MBYTE0	DB1,BYTE0
	Byte	IB0.7	MB0.7	DB1,B0.7
В	Boolean	IBYTE0.7	MBYTE0.7	DB1,BYTE0.7
Byte	String	IB0.64	MB0.64	DB1,B0.64
	Array	IBYTE0.64	MBYTE0.64	DB1,BYTE0.64
		IB0[2][5]	MB0[2][5]	DB1,B0[2][5]
		IBYTE0[2][5]	MBYTE0[2][5]	DB1,BYTE0[2][5]
С	Char	IC0	MC0	DB1,C0

S7 Data Type	Data Type	Input	Flags	Data Blocks
		ICHAR0	MCHAR0	DB1,CHAR0
		IC0.7	MC0.7	DB1,C0.7
	Boolean	ICHAR0.7	MCHAR0.7	DB1,CHAR0.7
Char	String	IC0.64	MC0.64	DB1,C0.64
	Array	ICHAR0.64	MCHAR0.64	DB1,CHAR0.64
		IC0[10]	MC0[10]	DB1,C0[10]
		ICHAR0[10]	MCHAR0[10]	DB1,CHAR0[10]
		ID0	MD0	DB1,D0
	DWord	IDWORD0	MDWORD0	DB1,DWORD0
D	Boolean	ID0.31	MD0.31	DB1,D0.31
DWORD	Array	IDWORD0.31	MDWORD0.31	DB1,DWORD0.31
	Andy	ID0[10]	MD0[10]	DB1,D0[10]
		IDWORD0[10]	MDWORD0[10]	DB1,DWORD0[10]
DATE	String	IDATE0	MDATE0	DB1,DATE0
		IDI0	MDI0	DB1,DI0
	Long	IDINT0	MDINT0	DB1,DINT0
DI	Boolean	IDI0.31	MDI0.31	DB1,DI0.31
DINT	Array	IDINT0.31	MDINT0.31	DB1,DINT0.31
	Allay	IDI0[4][3]	MDI0[4][3]	DB1,DI0[4][3]
		IDINT0[4][3]	MDINT0[4][3]	DB1,DINT0[4][3]
DT	String	IDT0	MDT0	DB1,DT0
	Date	IDT8	MDT8	DB1,DT8
		110	MIO	DB1,I0
	Short	IINT0	MINT0	DB1,INT0
1	Boolean	II0.15	MI0.15	DB1,I0.15
INT	Array	IINT0.15	MINT0.15	DB1,INT0.15
		110[5][2]	MI0[5][2]	DB1,I0[5][2]
		IINT0[5][2]	MINT0[5][2]	DB1,INT0[5][2]
	LLong	ILINT0	MLINT0	DB1,LINT0
LINT	Boolean	ILINT0.63	MLINT0.63	DB1,LINT0.63
	Array	ILINT0[5][2]	MLINT0[5][2]	DB1,LINT0[5][2]
LREAL	Double	ILREAL0	MLREAL0	DB1,LREAL0
	Array	ILREAL0[10]	MLREAL0[10]	DB1,LREAL0[10]
	QWord	ILWORD0	MLWORD0	DB1,LWORD0
LWORD	Boolean	ILWORD0.63	MLWORD0.63	DB1,LWORD0.63
	Array	ILWORD0[10]	MLWORD0[10]	DB1,LWORD0[10]
REAL	Float	IREAL0	MREAL0	DB1,REAL0
	Array	IREAL0[10]	MREAL0[10]	DB1,REAL0[10]
String	String	ISTRING0.10	MSTRING0.10	DB1,STRING0.10
TOD	String	ITOD0	MTOD0	DB1,TOD0
Т	String	IT0	MT0	DB1,T0
TIME	String	ITIME4	MTIME4	DB1,TIME4
		IWO	MW0	DB1,W0
		IWORD0	MWORD0	DB1,WORD0
W	Word	IW0.15	MW0.15	DB1,W0.15
Word	Boolean	IWORD0.15	MWORD0.15	DB1,WORD0.15
	Array	IW0[10]	MW0[10]	DB1,W0[10]
		IWORD0[10]	MWORD0[10]	DB1,WORD0[10]

S7 Data Type	Data Type	Input	Flags	Data Blocks
v	Paalaan	IX0.7 MX0.7 D	DB1,X0.7	
^	Boolean	IX0[10]	MX0[10]	DB1,X0[10]

**Note**: The offset for an atomic type tag in a data block is denoted by the column "Address" in Step 7, as shown above. This offset is denoted by the column "Offset" in the Siemens TIA Portal programming environment.

## Legacy S7-300/400 Item Syntax

The default data types for dynamically defined tags are shown in **bold**. For preferred item syntax, refer to <u>Standard S7-300/400/1200/1500 Item Syntax</u>.

Address Type	Range	Туре	Access
Discrete Inputs	I0.b-I65535.b .b is Bit Number 0-7 IB0-IB65535 IW0-IW65534 IW:KT0-IW:KT65534 IW:KC0-IW:KC65534 ID0-ID65532	Boolean Byte, Char, String** Word, Short, BCD DWord, Long Word, Short DWord, Long, LBCD, Float	Read / Write Read / Write Read / Write Read / Write Read / Write Read / Write
Discrete Inputs	E0.b-E65535.b .b is Bit Number 0-7 EB0-EB65535** EW0-EW65534 EW:KT0-EW:KT65534 EW:KC0-EW:KC65534 ED0-ED65532	Boolean Byte, Char, String** Word, Short, BCD DWord, Long Word, Short DWord, Long, LBCD, Float	Read / Write Read / Write Read / Write Read / Write Read / Write Read / Write
Note: I and E access the	e same memory area.		
Discrete Outputs	Q0.b-Q65535.b .b is Bit Number 0-7 QB0-QB65535 QW0-QW65534 QW:KT0-QW:KT65534 QW:KC0-QW:KC65534 QD0-QD65532	Boolean Byte, Char, String** Word, Short, BCD DWord, Long Word, Short DWord, Long, LBCD, Float	Read / Write Read / Write Read / Write Read / Write Read / Write Read / Write
Discrete Outputs	A0.b-A65535.b .b is Bit Number 0-7 AB0-AB65535 AW0-AW65534 AW:KT0-AW:KT65534 AW:KC0-AW:KC65534 AD0-AD65532	Boolean Byte, Char, String** Word, Short, BCD DWord, Long Word, Short DWord, Long, LBCD, Float	Read / Write Read / Write Read / Write Read / Write Read / Write Read / Write
Note: Q and A access the second se	-		
Peripheral Inputs	PI0.b-PI65535.b .b is Bit Number 0-7 PIB0-PIB65535 PIW0-PIW65534 PIW:KT0-PIW:KT65534 PIW:KC0-PIW:KC65534 PID0-PID65532	Boolean Byte, Char, String** Word, Short, BCD DWord, Long Word, Short DWord, Long, LBCD, Float	Read Only Read Only Read Only Read Only Read Only Read Only
Peripheral Inputs	PE0.b-PE65535.b	Boolean	Read Only

Address Type	Range	Туре	Access
	.b is Bit Number 0-7	Byte, Char, String**	Read Only
	PEB0-PEB65535**	Word, Short, BCD	Read Only
	PEW0-PEW65534	DWord, Long	Read Only
	PEW:KT0-PEW:KT65534	Word, Short	
	PEW:KC0-PEW:KC65534	DWord, Long, LBCD,	Read Only
	PED0-PED65532	Float	Read Only
Note: PI and PE access	,	-	
	PQ0.b-PQ65535.b	Boolean	Read / Write
	.b is Bit Number 0-7	Byte, Char, String**	Read / Write
	PQB0-PQB65535	Word, Short, BCD	Read / Write
Peripheral Outputs	PQW0-PQW65534	DWord, Long	Read / Write
	PQW:KT0-PQW:KT65534	Word, Short	Read / Write
	PQW:KC0-PQW:KC65534	DWord, Long, LBCD,	
	PQD0-PQD65532	Float	Read / Write
	PA0.b-PA65535.b	Boolean	Read / Write
	.b is Bit Number 0-7	Byte, Char, String**	
	PAB0-PAB65535	Word, Short, BCD	Read / Write
Peripheral Outputs	PAW0-PAW65534	DWord, Long	Read / Write
	PAW:KT0-PAW:KT65534	Word, Short	Read / Write
	PAW:KC0-PAW:KC65534	DWord, Long, LBCD,	Read / Write
	PAD0-PAD65532	Float	Read / Write
Note: PQ and PA access	s the same memory area.		
	F0.b-F65535.b	Boolean	Deed ()Mrite
	.b is Bit Number 0-7	Byte, Char, String**	Read / Write
	FB0-FB65535	Word, Short, BCD	Read / Write
Internal Memory	FW0-FW65534	DWord, Long	Read / Write
	FW:KT0-FW:KT65534	Word, Short	Read / Write
	FW:KC0-FW:KC65534	DWord, Long, LBCD,	Read / Write
	FD0-FD65532	Float	Read / Write
	M0.b-M65535.b	Boolean	
	.b is Bit Number 0-7	Byte, Char, String**	Read / Write
	MB0-MB65535	Word, Short, BCD	Read / Write
Internal Memory	MW0-MW65534	DWord, Long	Read / Write
,	MW:KT0-MW:KT65534	Word, Short	Read / Write
	MW:KC0-MW:KC65534	DWord, Long, LBCD,	Read / Write
	MD0-MD65532	Float	Read / Write
Note: F and M access th	e same memory area.		I
	DB1-N:KM0.b-KM65534.b		
	1-N is Block Number		
	.b is Bit Number 0-15		
	Alternates		
	DB1DBX0.b-	Boolean	Read / Write
Data Block Boolean	DBNDBX65534.b	Boolean	Read / Write
	1-N is Block Number	Boolean	Read / Write
	.b is Bit Number 0-15		
	DB1D0.b-DBND65534.b		
	1-N is Block Number		
	.b is Bit Number 0-15		
	.b lo bit i daniboi o i o		

Address Type	Range	Туре	Access
	1-N is Block Number Alternates DB1DBB0-DBNDBB65535	Byte, Char, String**	Read / Write
	1-N is Block Number	Byte, Char, String**	Read / Write
	DB1DL0-DBNDL65535	Dyte, Char, String	nedu / White
	1-N is Block Number		
	DB1-N:KR0-KR65534		
	1-N is Block Number		
Data Block Right Byte	Alternates	Byte, Char, String**	Read / Write
	DB1DR0-DBNDR65534	Byte, Char, String**	Read / Write
	1-N is Block Number		
Data Block Unsigned	DB1-N:KH0-KH65534	Mard Chart BCD	
Word	1-N is Block Number	Word, Short, BCD	Read / Write
	DB1-N:KF0-KF65534		
	1-N is Block Number		
	Alternates	Word, <b>Short</b> , BCD	Read / Write
Data Block Signed Word	DB1DBW0-	Word, Short, BCD	Read / Write
	DBNDBW65534	Word, Short, BCD	Read / Write
	1-N is Block Number		
	DB1DW0-DBNDW65534		
	1-N is Block Number		
	DB1-N:KD0-KD65532	DWord, <b>Long</b> , LBCD,	
	1-N is Block Number	Float	
Data Diask Cinnad Lang		DWord, Long, LBCD,	Read / Write
Data Block Signed Long	DB1DBD0-DB1DBD65532 1-N is Block Number	Float	Read / Write Read / Write
	DB1DD0-DB1DD65532	DWord, Long, LBCD,	Read / White
	1-N is Block Number	Float	
	DB1-N:KG0-KG65532		
Data Block Float	1-N is Block Number	Float	Read / Write
	DB1-N:BCD0-BCD65534		
Data Block BCD	1-N is Block Number	Word, Short, BCD	Read / Write
Data Block S5 Timer as	DB1-N:KT0-KT65534		
DB	1-N is Block Number	DWord, <b>Long</b>	Read / Write
Data Block S5 Counter as	DB1-N:KC0-KC65534		
DB	1-N is Block Number	Word, Short	Read / Write
	DB1S0.n-DB1S65535.n*		
Data Block String***	.n is string length	String	Read / Write
	0 <n<= 932<="" td=""><td></td><td></td></n<=>		
	DB1STRING0.n- DB1STRING65535.n*		
	.n is string length		
Data Dia ak Otain att	0 <n<= (pdu="" 254="" of<="" size="" td=""><td>Otaria a</td><td></td></n<=>	Otaria a	
Data Block String***	480 and above)	String	Read / Write
	0 <n<= (pdu="" 210="" size<br="">below 480)</n<=>		
	0 <n<= (netlink="" 254="" s7300<br="">and Netlink S7400 Models)</n<=>		
Timer Current Values****	T0-T65535*	DWord, Long	Read / Write

Address Type	Range	Туре	Access
Counter Current Val- ues*****	C0-C65535*	Word, Short	Read / Write
Counter Current Val- ues*****	Z0-Z65535*	Word, Short	Read / Write

\*These memory types/subtypes do not support arrays.

\*\*Byte memory types (like MB) support Strings. The syntax for strings is <address>.<length> where 0 < length <=932.

\*\*\*For more information, refer to Data Block Strings.

\*\*\*\*For more information, refer to Timers.

\*\*\*\*\*For more information, refer to Counters.

#### Notes:

- 1. All offsets for memory types I, Q, and F represent a byte starting location within the specified memory type.
- 2. Use caution when modifying Word, Short, DWord, and Long types. For I, Q, and F each address starts at a byte offset within the device. Therefore, Words FW0 and FW1 overlap at byte 1. Writing to FW0 will also modify the value held in FW1. Similarly, DWord, and Long types can also overlap. It is recommended that these memory types be used so that overlapping does not occur. For example, DWord, FD0, FD4, FD8 and so on can be used to prevent overlapping bytes.

#### Data Block Strings

Data block Strings can be referenced by using S subtypes or String subtypes.

#### S Subtype

The syntax for the S subtype is DBxSy.n where x is the data block, y is the byte offset, and n is the maximum String length. String values read and written are stored at byte offset y in data block x.

у	y+1	y+2	 y+n-1
	1	11	 11

S Strings are null terminated. If the maximum string length is 10 and 3 characters are written, the fourth character is set to NULL, while characters 5-10 are left untouched.

**Note**: For raw strings the total number of bytes requested cannot exceed the data portion of the negotiated PDU size. If raw strings exceed the negotiated PDU size, they may fail to be read or written.

#### String Subtype

The String subtype follows the STEP 7 String data type definition. The syntax for the String subtype is DBx.STRINGy.n, where x is the data block, y is the Byte offset, and n is the maximum String length. If n is not specified, the maximum String length will be 254 characters when PDU size is >= 480, otherwise it will be 210. String values read and written are stored at Byte offset y+2 in data block x. The first two bytes contain the maximum string length (n) and the actual string length. The actual string length gets updated with every write based on the string length of the string being written.

У	y+1	y+2	y+3	y+4	 y+2+n-1
maximum string length (n)	actual string length				 

Notes:

- 1. String Strings are NULL padded. If the maximum string length is 10 and 3 characters are written, characters 4-10 are set to NULL.
- 2. If a PDU of 240 is negotiated, STEP 7 strings with a length greater than 222 may fail to be read and strings with a length greater than 212 may fail to be written.

#### **Hex Strings**

The HEXSTRING subtype is specific to the Siemens TCP/IP Ethernet Driver. The syntax for the HEXSTRING subtype is *HEXSTRINGy.n*, where *y* is the byte offset and *n* is the length. The *n* value must be specified in the range of 1 through 932. String is the only valid data type for a HEXSTRING tag.

The value assigned to a HEXSTRING must be an even number of characters. There is no padding, so the entire string must be specified. For example, tag HexStr defined as DB1,STRING0.10 uses 10 bytes of storage and has a display length of 20. To assign a value, the string must be 20 characters long and contain only valid hexadecimal characters. An example valid hex string for this tag is "56657273696f6E353137".

**Note**: For HEXSTRINGs, the total number of bytes requested cannot exceed the data portion of the negotiated PDU size. If raw strings exceed the negotiated PDU size, they may fail to be read or written.

#### Arrays

All memory types/subtypes with the exception of those marked with an asterisk support arrays. The syntax below are valid for declaring an array. If no rows are specified, a row count of 1 is assumed.

<address>[rows][cols] <address>.rows.cols <address>,rows,cols <address>\_rows\_cols

For Word, Short, BCD and "KT" arrays, the base address + (rows \* cols \* 2) cannot exceed 65536. Keep in mind that the elements of the array are words, located on a word boundary. For example, IW0[4] would return IW0, IW2, IW4, and IW6. "KT" subtypes fall into the 16-bit category because the data stored in the PLC is contained within a Word. For more information, refer to Timers.

For Float, DWord, Long, and Long BCD arrays (excluding "KT" subtypes), the base address + (rows \* cols \* 4) cannot exceed 65536. Keep in mind that the elements of the array are DWord, located on a DWord boundary. For example, ID0[4] will return ID0, ID4, ID8, ID12.

For all arrays, the total number of bytes being requested cannot exceed the data portion of the negotiated PDU size. For example, for a 960-byte PDU size, the largest single array that may be read or written is 932 bytes. If arrays exceed the negotiated PDU size, they may fail to be read or written.

#### KL vs. KR vs. DBB

KL and KR determine whether the left byte or right byte of the data block word is returned.

Value	8	9	А	В	С
Byte	0	1	2	3	4

The following examples are from the table above.

#### Example 1

DB1:KH0=0x89 DB1:KL0=0x8 DB1:KR0=0x9 DB1DBB0=0x8

#### Example 2

DB1:KH1=0x9A DB1:KL1=0x9 DB1:KR1=0xA DB1DBB1=0x9

#### Timers

The Siemens TCP/IP Ethernet Driver automatically scales T and KT values based on the Siemens S5 time format. Timer data is stored as a Word in the PLC but scaled to a DWord in the driver. The value returned for either a T or KT memory type will already be scaled using the appropriate Siemens time base. As a result, the values are always returned as a count of milliseconds. When writing to T or KT memory types, the Siemens time base will also be applied. To assign a value to a timer in the controller, write the desired value as a count of milliseconds to the appropriate timer.

#### Counters

The value returned for either C or KC memory type will automatically be converted to a BCD value. DB1:KH0 @ BCD=DB1:KC0 @ Word.

#### Examples

- To access bit 3 of internal memory F20, declare an address as follows: F20.3
- To access data block 5 as word memory at byte 30, declare an address as follows: DB5:KH30
- To access data block 2 byte 20 and bit 7, declare an address as follows: DB2:KM20.7
- To access data block 1 as left byte memory at byte 10, declare an address as follows: DB1:KL10
- To access internal memory F20 as a DWORD, declare an address as follows: FD20
- To access Input memory I10 as a Word, declare an address as follows: IW10

**Note**: The offset for an atomic type tag in a data block is denoted by the column "Address" in Step 7, as shown above. This offset is denoted by the column "Offset" in the Siemens TIA Portal programming environment.

39 \_

### **Event Log Messages**

The following information concerns messages posted to the Event Log pane in the main user interface. Consult the OPC server help on filtering and sorting the Event Log detail view. Server help contains many common messages, so should also be searched. Generally, the type of message (informational, warning) and troubleshooting information is provided whenever possible.

Tip: Messages that originate from a data source (such as third-party software, including databases) are presented through the Event Log. Troubleshooting steps should include researching those messages online and in vendor documentation.

#### Reason = 'Frame contains errors'.

#### Error Type:

Warning

#### Possible Cause:

- 1. An unexpected frame was received. The response code may be incorrect.
- 2. The frame sequence is out of order.

#### Possible Solution:

Cable noise may cause distortion in the frame, resulting in erroneous data or dropped frames. Verify the cabling between the PC and the PLC device.

#### See Also:

- 1. Error Matrix
- 2. Error Codes

#### Reason = 'Device returned transport error'. Error code = <error>.

#### Error Type:

Warning

#### Possible Cause:

An RFC1006 (ISO over TCP/IP) error occurred. This is the portion of the packet that encapsulates the S7 Messaging packet.

#### **Possible Solution:**

Follow guidance from the rest of the error message or contact Technical Support.

#### Note:

No protocol or data access errors can occur for this operation.

#### See Also:

- 1. Error Matrix
- 2. Error Codes

### Reason = 'Device returned protocol error'. Error class = <class>, Error code = <error>.

Error Type: Warning

#### **Possible Cause:**

- 1. An S7 Messaging error occurred. This can occur if a portion is malformed or contains incorrect packet lengths.
- 2. The tag is too large to be read or written with the currently negotiated PDU.

#### **Possible Solution:**

- 1. Follow guidance from the rest of the error message or contact Technical Support.
- 2. Adjust the size of the tag, or check the Maximum PDU Size device property.

#### See Also:

- 1. Error Matrix
- 2. Error Codes
- 3. Device Properties S7 Comm Parameters

#### Reason = 'Device returned data access error'. Error code = <error>.

#### Error Type:

Warning

#### **Possible Cause:**

A requested address may be out of range or referenced incorrectly.

#### **Possible Solution:**

- 1. Verify the range is correct and correctly referenced.
- 2. Follow guidance from the rest of the error message or contact Technical Support.

#### See Also:

- 1. Error Matrix
- 2. Error Codes

#### Reason = 'Device is not responding'.

#### Error Type:

Warning

#### **Possible Cause:**

- 1. The connection between the device and the host PC is invalid.
- 2. The named device may have an incorrect IP address assigned.
- 3. The response from the device took longer to receive than the amount of time specified in the "Request Timeout" device setting.
- 4. The device CPU load is too high.

#### **Possible Solution:**

- 1. Verify the cabling between the PC and the PLC device.
- 2. Verify the IP address for the named device matches the actual device.

#### 41

- 3. Decrease the tag group scan rate to reduce the load on the PLC CPU.
- 4. Increase the values for properties: Request Timeout, Scan Cycle Load from Communication, and/or Scan Cycle Monitoring Time.

#### See Also:

Error Matrix

#### Reason = 'Unknown error occurred'.

#### Error Type:

Warning

Possible Cause: Process could not complete.

#### Possible Solution:

Follow guidance from the rest of the error message or retry the process.

#### See Also:

Error Matrix

#### Reason = NetLink returned error. Error code = <error>.

#### Error Type: Warning

warning

#### Possible Cause:

An error was returned from the PLC or NetLink adapter.

#### Possible Solution:

- 1. If error code is 0x11, an incorrect MPI ID may be set. Determine the MPI ID through which communications are occurring and enter it in the MPI ID device property field.
- 2. If error code is 0x87, the requested data may be out of range for the device. Verify the device address limits and correct the tag references.

#### See Also:

- 1. Error Matrix
- 2. Error Codes

#### Failed to resolve host. | Host = '<host name>'.

#### Error Type:

Warning

#### Possible Cause:

- 1. The named device may have been assigned an incorrect IP address.
- 2. Communication with the host failed. Connection may have been lost, a port conflict occurred, or some communication parameter is not valid.

#### Possible Solution:

- 1. Verify the IP address given to the named device matches that of the actual device.
- 2. Verify or correct connections, port number, MPI ID, and other communication parameters.

### Auto-generated tag names and descriptions may not appear as expected due to string conversion error.

#### Error Type:

Warning

#### Possible Cause:

The Unicode character conversion failed.

#### **Possible Solution:**

Verify that the Step 7 language file is present and reflects a character set that can display the Step 7 tag and comment strings.

# A required code page is unavailable on this machine. Tag generation may fail or tag names and descriptions may not appear as expected. | Required code page = <page>.

### Error Type:

Warning

#### **Possible Cause:**

- 1. The computer is not configured with support for the specified Windows code page specified.
- 2. The language file was not found.

#### **Possible Solution:**

- 1. Install any language packs necessary for displaying the Windows code page character set.
- 2. Try again on a computer that supports the Windows code page specified.
- 3. Modify the Step 7 project to generate a Language file.

#### Note:

When Language file was not found the value of required code page will be: 0.

#### Unable to load the Step 7 language file.

#### Error Type:

Warning

#### Possible Cause:

The Step 7 language file is altered or corrupt.

#### **Possible Solution:**

Verify that the Step 7 project is not corrupt and can be opened in Simatic Step 7.

#### Memory exception reading the Step 7 language file.

#### Error Type:

Warning

#### Possible Cause:

The operating system has insufficient memory to read the Step 7 language file.

#### **Possible Solution:**

Ensure that the system resources are adequate for all applications running on the computer.

#### Step 7 language file failed to open. | OS error = '<error>'.

#### Error Type:

Warning

#### Possible Cause:

- 1. The Step 7 language file is altered or corrupt.
- 2. The language file is missing.

#### **Possible Solution:**

- 1. Verify that the Step 7 project is not corrupt and can be opened in Simatic Step 7.
- 2. Modify the Step 7 project to generate a language file.

## Tag generation failure. | Data block name = '<block name>', data block number = <block number>.

#### Error Type:

Warning

#### Possible Cause:

An unexpected data type or other issue occurred during the parsing of the Step 7 project for the specified data block.

#### Possible Solution:

Compare the tags that were automatically generated with those in the project for the specified data block to determine which tag caused the incomplete generation. Correct issues with the block and retry.

See Also:

Error Codes

## Created tag in group due to internal block size. | Tag address = '<address>', tag name = '<name>', group name = '<name>'.

#### Error Type:

Warning

#### Possible Cause:

While parsing the data blocks of the Step 7 project for automatic tag generation, an array variable was encountered that exceeds the internal block size. Although all individual array element tags generate as expected, the array tag itself is generated with a dimension that allows it to fit within the block size.

#### Possible Solution:

To use array tags and not the individual array element tags, determine the address where the array tag ends, then manually generate another tag to address the remainder of the array. For example, if data block 1 begins with an array of 250 REAL, there would be 250 array element tags with addresses DB1,REAL0; DB1,REAL4;... DB1, REAL992; DB1,REAL996. Because the size of the array exceeds the maximum data payload of 932 bytes, the array tag would only be created with 233 dimensions (DB1,REAL0[233]). The array tag does not provide the client with the data for the last 17 elements. If the client wants to use array tags and not the individual array element tags, another tag with the address "DB1,REAL932[17]" must be created. This warning message only occurs for tags of the first element of the complex type array during automatic tag generation for arrays of complex types (such as structures, user-defined types, function blocks, or system function blocks).

### Tag not created because arrays are not supported with specified data type. | Tag name = '<name>', group name = '<name>', data type = '<type>'.

Error Type:

Warning

#### Possible Cause:

- 1. A tag address that has been specified dynamically has been assigned an invalid data type.
- 2. While parsing the data blocks of the Step 7 project for automatic tag generation, an array variable was encountered with a data type for which the driver does not support arrays.

#### **Possible Solution:**

- 1. Modify the requested data type in the client application.
- 2. The client must access the data using the array element tags that were generated. Variables with the Step 7 data types of DATE, DATE\_AND\_TIME, STRING, TIME, and TIME\_OF\_DAY generate tags with the string data type (for which arrays are not supported). During automatic tag generation for arrays of complex types (such as structures, user-defined types, function blocks, or system function blocks), this warning message only occurs for tags of the first element of the complex type array.

#### Unable to connect to device. |

### Error Type:

#### Warning

#### Possible Cause:

- 1. An RFC1006 error (ISO over TCP/IP) occurred. This is the portion of the packet that encapsulates the S7 Messaging packet.
- 2. The device's CPU work load is too high.
- 3. This portion is malformed or contains incorrect packet lengths.

#### **Possible Solution:**

- 1. Cable noise may cause distortion in the frame, resulting in erroneous data or dropped frames. Verify the cabling between the PC and the PLC device.
- 2. Reduce network traffic or increase the Request Timeout and/or Fail After Attempt count.
- 3. Decrease the tag group Scan Rate to reduce the load on the PLC CPU.
- 4. Increase the values for properties: Scan Cycle Load from Communication and Scan Cycle Monitoring Time.

#### See Also:

Error Matrix

#### Unable to establish association with device. |

#### Error Type:

Warning

#### Possible Cause:

1. An S7 Messaging error occurred. This will occur if this portion is malformed or contains incorrect packet lengths.

- An RFC1006 error (ISO over TCP/IP) occurred. This is the portion of the packet that encapsulates the S7 Messaging packet.
- 3. The TPDU response size is incorrect.
- 4. An unexpected frame was received. The response code may be incorrect.
- 5. The frame sequence is out of order.
- 6. The device CPU workload is too high.

#### **Possible Solution:**

- 1. Cable noise may cause distortion in the frame, resulting in erroneous data. It may also cause dropped frames. Verify the cabling between the PC and the PLC device.
- 2. Reduce network traffic. If this error occurs frequently, increase the Request Timeout and/or Fail After attempt count.
- 3. If this error occurs frequently, decrease the tag group scan rate to reduce the work load on the PLC's CPU.
- 4. Increase the Scan Cycle Load from Communication and Scan Cycle Monitoring Time.

#### See Also:

Error Matrix

#### Unable to read from address on device. | Address = '<address>',

#### Error Type:

Warning

#### Possible Cause:

- 1. A data access error occurred. The requested address may be out of range or referenced incorrectly.
- 2. An S7 messaging error occurred. A portion is malformed or contains incorrect packet lengths.
- 3. A TCP/IP error occurred. A portion is malformed or contains incorrect packet lengths.
- 4. An attempt was made to read an array larger than the PDU size negotiated with the device.

#### **Possible Solution:**

- 1. Verify and correct the address range.
- 2. Verify and correct the packet format and length.
- 3. Verify and correct the communications configuration and connections.
- 4. Verify and correct the data type, values, and ranges.
- 5. Verify the device's address limits and correct the tag references causing the error.

#### See Also:

Error Matrix

#### Unable to read from address on device. Tag deactivated. | Address = '<address>',

Error Type: Warning

Possible Cause:

- 1. A data access error occurred. The requested address may be out of range or referenced incorrectly.
- 2. An S7 Messaging error occurred. A portion is malformed or contains incorrect packet lengths.
- 3. A TCP/IP error occurred. A portion is malformed or contains incorrect packet lengths.
- 4. The device CPU work load is too high.
- 5. If the tag address references a TOD data type, the DWORD value may be larger than the number of milliseconds in a day. For example, 86400000.
- 6. If the error code=0x11, an incorrect MPI ID may be set.
- 7. If the error code=0x87, users may be accessing data out of range in the device.

#### **Possible Solution:**

- 1. Verify and correct the address range.
- 2. Verify and correct the packet format and length.
- 3. Verify and correct the communications configuration and connections.
- 4. Verify and correct the data type, values, and ranges.
- 5. Reduce network traffic or increase the Request Timeout and/or Fail After attempt count.
- 6. Decrease the tag group scan rate to reduce the workload on the PLC CPU.
- 7. Increase the Scan Cycle Load from Communication and Scan Cycle Monitoring Time.
- Change the value in the device to a valid DWORD that can be converted to a time that is less than or equal to 23:59:59.999.
- 9. Determine the MPI ID in use for communications and re-enter it in the MPI ID Device Property field.
- 10. Verify the device's address limits and correct the tag references causing the error.

#### See Also:

Error Matrix

### Unable to read data from device. | Data block = '<block>', block start = <address>, block size = <size>,

### Error Type:

Warning

#### Possible Cause:

- 1. A TCP/IP error occurred. A portion is malformed or contains incorrect packet lengths.
- 2. The device CPU work load is too high.
- 3. If the tag address references a TOD data type, the DWORD value may be larger than the number of milliseconds in a day. For example, 86400000.
- 4. An error was returned from the PLC or NetLink adapter.
- 5. Cable noise may cause distortion in the frame, resulting in erroneous data or dropped frames. Verify the cabling between the PC and the PLC device.
- 6. If the error code=0x11, an incorrect MPI ID may be set.
- 7. If the error code=0x87, users may be accessing data out of range in the device.

#### Possible Solution:

- 1. Verify and correct the address range.
- 2. Verify and correct the packet format and length.
- 3. Verify and correct the communications configuration and connections.
- 4. Verify and correct the data type, values, and ranges.
- 5. Reduce network traffic or increase the Request Timeout and/or Fail After attempt count.
- 6. Decrease the tag group scan rate to reduce the workload on the PLC CPU.
- 7. Increase the Scan Cycle Load from Communication and Scan Cycle Monitoring Time.
- 8. Change the value in the device to a valid DWORD that can be converted to a time that is less than or equal to 23:59:59.999.
- 9. Determine the MPI ID in use for communications and re-enter it in the MPI ID Device Property field.
- 10. Verify the device's address limits and correct the tag references causing the error.

#### See Also:

Error Matrix

### Unable to read data from device. Block deactivated. | Data block = '<block>', block start = <address>, block size = <size>,

#### Error Type:

Warning

#### Possible Cause:

- 1. A TCP/IP error occurred. A portion is malformed or contains incorrect packet lengths.
- 2. The device CPU work load is too high.
- 3. If the tag address references a TOD data type, the DWORD value may be larger than the number of milliseconds in a day. For example, 86400000.
- 4. An error was returned from the PLC or NetLink adapter.
- 5. Cable noise may cause distortion in the frame, resulting in erroneous data or dropped frames. Verify the cabling between the PC and the PLC device.
- 6. If the error code=0x11, an incorrect MPI ID may be set.
- 7. If the error code=0x87, users may be accessing data out of range in the device.

#### **Possible Solution:**

- 1. Verify and correct the address range.
- 2. Verify and correct the packet format and length.
- 3. Verify and correct the communications configuration and connections.
- 4. Verify and correct the data type, values, and ranges.
- 5. Reduce network traffic or increase the Request Timeout and/or Fail After attempt count.
- 6. Decrease the tag group scan rate to reduce the workload on the PLC CPU.
- 7. Increase the Scan Cycle Load from Communication and Scan Cycle Monitoring Time.

- 8. Change the value in the device to a valid DWORD that can be converted to a time that is less than or equal to 23:59:59.999.
- 9. Determine the MPI ID in use for communications and re-enter it in the MPI ID Device Property field.
- 10. Verify the device's address limits and correct the tag references causing the error.

#### See Also:

Error Matrix

### Unable to read data from device. | Memory type = '<type>', block start = <address>, block size = <size> (bytes),

#### Error Type:

Warning

#### Possible Cause:

- 1. An S7 Messaging error occurred. A portion is malformed or contains incorrect packet lengths.
- 2. The device CPU work load is too high.
- 3. If the tag address references a TOD data type, the DWORD value may be larger than the number of milliseconds in a day. For example, 86400000.
- 4. An error was returned from the PLC or NetLink adapter.
- 5. Cable noise may cause distortion in the frame, resulting in erroneous data or dropped frames. Verify the cabling between the PC and the PLC device.
- 6. If the error code=0x11, an incorrect MPI ID may be set.
- 7. If the error code=0x87, users may be accessing data out of range in the device.

#### **Possible Solution:**

- 1. Verify and correct the address range.
- 2. Verify and correct the packet format and length.
- 3. Verify and correct the communications configuration and connections.
- 4. Verify and correct the data type, values, and ranges.
- 5. Reduce network traffic or increase the Request Timeout and/or Fail After attempt count.
- 6. Decrease the tag group scan rate to reduce the workload on the PLC CPU.
- 7. Increase the Scan Cycle Load from Communication and Scan Cycle Monitoring Time.
- 8. Change the value in the device to a valid DWORD that can be converted to a time that is less than or equal to 23:59:59.999.
- 9. Determine the MPI ID in use for communications and re-enter it in the MPI ID Device Property field.
- 10. Verify the device's address limits and correct the tag references causing the error.

#### See Also:

Error Matrix

### Unable to read data from device. Block deactivated. | Memory type = '<type>', block start = <address>, block size = <size> (bytes),

Error Type:

#### Warning

#### Possible Cause:

- 1. An S7 Messaging error occurred. A portion is malformed or contains incorrect packet lengths.
- 2. The device CPU work load is too high.
- 3. If the tag address references a TOD data type, the DWORD value may be larger than the number of milliseconds in a day. For example, 86400000.
- 4. An error was returned from the PLC or NetLink adapter.
- 5. Cable noise may cause distortion in the frame, resulting in erroneous data or dropped frames. Verify the cabling between the PC and the PLC device.
- 6. If the error code=0x11, an incorrect MPI ID may be set.
- 7. If the error code=0x87, users may be accessing data out of range in the device.

#### Possible Solution:

- 1. Verify and correct the address range.
- 2. Verify and correct the packet format and length.
- 3. Verify and correct the communications configuration and connections.
- 4. Verify and correct the data type, values, and ranges.
- 5. Reduce network traffic or increase the Request Timeout and/or Fail After attempt count.
- 6. Decrease the tag group scan rate to reduce the workload on the PLC CPU.
- 7. Increase the Scan Cycle Load from Communication and Scan Cycle Monitoring Time.
- 8. Change the value in the device to a valid DWORD that can be converted to a time that is less than or equal to 23:59:59.999.
- 9. Determine the MPI ID in use for communications and re-enter it in the MPI ID Device Property field.
- 10. Verify the device's address limits and correct the tag references causing the error.

#### See Also:

Error Matrix

#### Unable to write to address on device. | Address = '<address>',

#### Error Type:

Warning

#### Possible Cause:

- 1. The connection between the device and the host PC is broken.
- 2. The named device may have been assigned an incorrect IP address.
- 3. The device CPU workload is too high.
- 4. An attempt was made to write to an array larger than the PDU size negotiated with the device.

#### Possible Solution:

- 1. Verify the cabling between the PC and the PLC device.
- 2. Verify the IP address given to the named device matches that of the actual device.

- 3. Decrease the tag group scan rate to reduce the work load on the PLC CPU.
- 4. Increase the Scan Cycle Load from Communication and Scan Cycle Monitoring Time.

#### See Also:

Error Matrix

# Unable to write to address on device. HEXSTRING length is different from tag length. | Address = '<address>', HEXSTRING length = <length> (bytes), tag length = <length> (bytes).

Error Type: Warning

#### **Possible Cause:**

The tag and hexstring length do not match. The syntax for the HEXSTRING subtype is HEXSTRINGy.n, where y is the byte offset and n is the length. The n value must be specified in the range of 1 through 932. String is the only valid data type for a HEXSTRING tag. The value assigned to a HEXSTRING must be an even number of characters. There is no padding, so the entire string must be specified. For example, tag HexStr defined as DB1,STRING0.10 uses 10 bytes of storage and has a display length of 20. To assign a value, the string must be 20 characters long and contain only valid hexadecimal characters.

#### **Possible Solution:**

Correct the mismatch between the tag and hexstring length.

### Unable to write to address on device. HEXSTRING contains a non-hexadecimal character. | Address = '<address>'.

Error Type: Warning

#### Possible Cause:

The hexstring format is invalid. The syntax for the HEXSTRING subtype is HEXSTRINGy.n, where y is the byte offset and n is the length. The n value must be specified in the range of 1 through 932. String is the only valid data type for a HEXSTRING tag. To assign a value, the string must be 20 characters long and contain only valid hexadecimal characters.

#### **Possible Solution:**

Correct the format and syntax of the hexstring.

### Unable to write to address on device. HEXSTRING length must be an even number of characters. | Address = '<address>'.

#### Error Type:

Warning

#### Possible Cause:

The hexstring length contains on odd number of characters, which is not valid.

#### Possible Solution:

Correct the hexstring to contain an even number of hexadecimal characters.

### Unable to write to address on device. Time of Day string contains a syntax error. Expected 'hh:mm:ss.hhh' format. | Address = '<address>', Time of Day string = '<string>'.

Error Type: Warning

#### Possible Cause:

The string written is not in the correct hh:mm:ss.hhh format.

#### **Possible Solution:**

Format the string as hh:mm:ss.hhh and retry.

#### **Error Codes**

#### **NetLink Errors**

Error Code	Source	Description
0x00		Service could be executed without an error
0x01	Remote Station	Timeout from remote station
0x02	Remote Station	Resource unavailable
0x03	Remote Station	Requested function of Siemens client is not activated within the remote station
0x11	Remote Station	No response of the remote station
0x12	Network	Siemens client not into the logical token ring
0x14	Host	Resource of the local FDL controller not available or not sufficient
0x15	Host	The specified msg.data_cnt parameter is invalid
0x30	Remote Station	Timeout. The requested message was accepted but no indication was sent back by the remote station
0x39	Remote Station	Sequence fault, internal state machine error
0x85	Host	Specified offset address out of limits or unknown in the remote station
0x86	Device	Wrong PDU coding in the MPI response of the remote station
0x87	Host	Specified length to write or to read results in an access outside of limits

#### Transport Errors

Error Code	Description	
0x00	Error reason not specified	
0x01	Invalid parameter code	
0x02	Invalid TPDU type	
0x03	nvalid parameter value	

#### **Protocol Errors**

Error Class	Description	
0x00	No error	
0x81	Error in the application ID of the request	
0x82	Error in the object definition (e.g. bad data type)	
0x83	No resources available	
0x84	Error in the structure of the service request	
0x85	Error in the communication equipment	
0x87	Access error	
0xD2	OVS error	
0xD4	Diagnostic error	

Error Class	Description
0xD6	Protection system error
0xD8	BuB error
0xEF	Layer 2 specific error

#### **Data Access Errors**

Error Code	Description
0xFF	No error
0x01	Hardware fault
0x03	Illegal object access
0x04	Protection error
0x05	Invalid address (incorrect variable address)
0x06	Data type is not supported
0x07	Invalid data size / too much data
0x0A	Object does not exist or length error

Note: the [Class=0x81, Code=0x04] warning message can occur when the rack and/or slot is incorrect.
 See Also: How To Configure S7-1500 Connections

#### Siemens TCP/IP Ethernet Channel Properties

Below is a full list of all Siemens TCP/IP Ethernet channel-level properties.

```
1
"common.ALLTYPES_NAME": "MyChannel",
"common.ALLTYPES_DESCRIPTION": "",
"servermain.MULTIPLE_TYPES_DEVICE_DRIVER": "Siemens TCP/IP Ethernet",
"servermain.CHANNEL_DIAGNOSTICS_CAPTURE": false,
"servermain.CHANNEL_UNIQUE_ID": 2799355699,
"servermain.CHANNEL_ETHERNET_COMMUNICATIONS_NETWORK_ADAPTER_STRING": "",
"servermain.CHANNEL_WRITE_OPTIMIZATIONS_METHOD": 2,
"servermain.CHANNEL_WRITE_OPTIMIZATIONS_DUTY_CYCLE": 10,
"servermain.CHANNEL_NON_NORMALIZED_FLOATING_POINT_HANDLING": 0
}
```

#### Siemens TCP/IP Ethernet Device Properties

Below is a full list of all Siemens TCP/IP Ethernet device-level properties.

<pre>"common.ALLTYPES_NAME": "MyDevice", "common.ALLTYPES_DESCRIPTION": "",</pre>
"servermain.MULTIPLE_TYPES_DEVICE_DRIVER": "Siemens TCP/IP Ethernet",
"servermain.DEVICE_MODEL": 4,
"servermain.DEVICE_UNIQUE_ID": 3569401335,
"servermain.DEVICE_CHANNEL_ASSIGNMENT": "Siemens",
"servermain.DEVICE_ID_FORMAT": 0,
"servermain.DEVICE_ID_STRING": "10.10.114.61",
"servermain.DEVICE_ID_HEXADECIMAL": 0,
"servermain.DEVICE_ID_DECIMAL": 0,
"servermain.DEVICE_ID_OCTAL": 0,
"servermain.DEVICE_DATA_COLLECTION": true,
"servermain.DEVICE_SIMULATED": false,
"servermain.DEVICE_SCAN_MODE": 0,
"servermain.DEVICE_SCAN_MODE_RATE_MS": 1000,
"servermain.DEVICE_SCAN_MODE_PROVIDE_INITIAL_UPDATES_FROM_CACHE": false,
"servermain.DEVICE_CONNECTION_TIMEOUT_SECONDS": 3,
"servermain.DEVICE_REQUEST_TIMEOUT_MILLISECONDS": 2000,
"servermain.DEVICE_RETRY_ATTEMPTS": 2,
"servermain.DEVICE_INTER_REQUEST_DELAY_MILLISECONDS": 0,
"servermain.DEVICE_AUTO_DEMOTION_ENABLE_ON_COMMUNICATIONS_FAILURES": false,
"servermain.DEVICE_AUTO_DEMOTION_DEMOTE_AFTER_SUCCESSIVE_TIMEOUTS": 3,
"servermain.DEVICE_AUTO_DEMOTION_PERIOD_MS": 10000,
"servermain.DEVICE_AUTO_DEMOTION_DISCARD_WRITES": false,
"servermain.DEVICE_TAG_GENERATION_ON_STARTUP": 0,
"servermain.DEVICE_TAG_GENERATION_DUPLICATE_HANDLING": 0,
"servermain.DEVICE_TAG_GENERATION_GROUP": "",
"servermain.DEVICE_TAG_GENERATION_ALLOW_SUB_GROUPS": true,
"siemens_tcpip_ethernet.DEVICE_COMMUNICATIONS_PORT_NUMBER": 102,
"siemens_tcpip_ethernet.DEVICE_COMMUNICATIONS_MPI_ID": 0,
"siemens_tcpip_ethernet.DEVICE_S7_COMMUNICATIONS_MAX_PDU": 960,
"siemens_tcpip_ethernet.DEVICE_S7_COMMUNICATIONS_200_LOCAL_TSAP": 19799,
"siemens_tcpip_ethernet.DEVICE_S7_COMMUNICATIONS_200_REMOTE_TSAP": 19799,
"siemens_tcpip_ethernet.DEVICE_S7_COMMUNICATIONS_300_400_1200_1500_LINK_TYPE": 3,

```
"siemens_tcpip_ethernet.DEVICE_S7_COMMUNICATIONS_CPU_RACK": 0,
"siemens_tcpip_ethernet.DEVICE_S7_COMMUNICATIONS_CPU_SLOT": 1,
"siemens_tcpip_ethernet.DEVICE_ADDRESSING_BYTE_ORDER": 0,
"siemens_tcpip_ethernet.DEVICE_TAG_IMPORT_TYPE": 1,
"siemens_tcpip_ethernet.DEVICE_TAG_IMPORT_CODE_PAGE": 4294967295,
"siemens_tcpip_ethernet.DEVICE_TAG_IMPORT_STEP_7_PROJECT_FILE": "",
"siemens_tcpip_ethernet.DEVICE_TAG_IMPORT_PROGRAM_PATH": "",
"siemens_tcpip_ethernet.DEVICE_TAG_IMPORT_TIA_EXPORT_FILE": ""
```

#### Siemens TCP/IP Ethernet Tag Properties

Below is a full list of all Siemens TCP/IP Ethernet tag properties.

"common.ALLTYPES\_NAME": "MyTag", "common.ALLTYPES\_DESCRIPTION": "" "servermain.TAG\_ADDRESS": "DB1,W0.00", "servermain.TAG\_DATA\_TYPE": 1, "servermain.TAG READ WRITE ACCESS": 1, "servermain.TAG\_SCAN\_RATE\_MILLISECONDS": 100, "servermain.TAG AUTOGENERATED": false, "servermain.TAG SCALING TYPE": 0, "servermain.TAG\_SCALING\_RAW\_LOW": 0, "servermain.TAG\_SCALING\_RAW\_HIGH": 1000, "servermain.TAG SCALING SCALED DATA TYPE": 9, "servermain.TAG\_SCALING\_SCALED\_LOW": 0, "servermain.TAG\_SCALING\_SCALED\_HIGH": 1000, "servermain.TAG\_SCALING\_CLAMP\_LOW": false, "servermain.TAG SCALING CLAMP HIGH": false, "servermain.TAG SCALING NEGATE VALUE": false, "servermain.TAG SCALING UNITS": ""

### Appendix – Configuring Siemens Connections

How To Configure S7-200 Connections in Micro/WIN

How To Configure S7-300/400 Connections in STEP 7

How To Configure S7-1200 Connections with the Totally Integrated Automation (TIA) Portal How To Configure S7-1500 Connections


#### How To Configure S7-200 Connections in Micro/WIN

Configured connections are accomplished through the Ethernet wizard in Micro/WIN. The following instructions illustrate each step in the Ethernet wizard and also describe any precautions that should be taken. Follow these instructions closely to use configured connections with the Siemens TCP/IP Ethernet Driver correctly.


• Note: The Micro/WIN software may require an upgrade before the Ethernet wizard is made available.

#### Step 1: Launching the Ethernet Wizard

1. In the Micro/WIN main menu, click Tools | Ethernet Wizard.

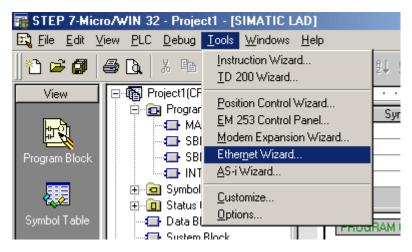

2. Then, click Next.

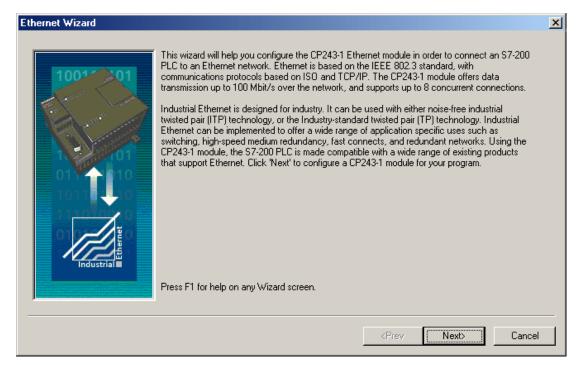

#### 3. Click Yes to proceed.

STEP 7-	Micro/WIN 32
?	To use the wizard, the project must be compiled, and be in Symbolic Addressing Mode. Compile and use symbols now?
	<u>Yes</u> <u>N</u> o

• Note: The program must be compiled before the Ethernet wizard can execute. Correct any errors in the program before continuing.

#### Step 2: Setting CP243-1 Module Position

#### 1. Click Read Modules.

Ethernet Wizard	×
	This wizard will help you define the parameters for the CP243-1 Ethernet module. The wizard will then place this configuration in your project. Specify Module Position To configure the module, specify the module's position relative to the PLC. Click 'Read Modules' to search for installed CP243-1 Ethernet modules.
	Module Position
	<prev next=""> Cancel</prev>

Note: While it is recommended that the Read Modules function be used, this does require that the PLC be connected to the PC either serially or by Ethernet. In either case, the communications parameters for Micro/WIN must be properly set for the Read Modules operation to occur.

2. To view the results of Read Modules, select the Ethernet module. Click Next.

Ethernet Wizard	×
	This wizard will help you define the parameters for the CP243-1 Ethernet module. The wizard will then place this configuration in your project.           Specify Module Position           To configure the module, specify the module's position relative to the PLC. Click 'Read Modules' to search for installed CP243-1 Ethernet modules.           Module Position
Industrial	Omega     Bead Modules       Position     Module ID       O     CP243-1 ETHERNET
	<prev next=""> Cancel</prev>

#### Step 3: Assigning Module Address

1. Enter the IP Address, Subnet Mask and Gateway Address if applicable. Alternatively, enable BOOTP if applicable.

2. Select **Auto Detect Communications** to allow the module to automatically select either **10BaseT** or **100BaseT**. In rare cases where there may be a cable issue that does not allow the module to operate properly at 100BaseT, force the module to use 10BaseT. This will increase the modules' tolerance to a bad Ethernet line.

Ethernet Wizard	×
	Module Address         Please select the address to assign to this CP243-1 module. If your network provides a BOOTP server (a service that will automatically assign IP addresses at startup), you may choose to have an IP address automatically assigned.         IP Address:       IP Address:         Subnet Mask:       IP Address:         Gateway Address:       IP Address         Allow the BOOTP server to automatically assign an IP address for the module.         Module Connection Type         Specify the communications connection type for this module.
	<prev next=""> Cancel</prev>

3. The image shown below contains demonstration values.

Ethernet Wizard	×
	Module Address         Please select the address to assign to this CP243-1 module. If your network provides a BOOTP server (a service that will automatically assign IP addresses at startup), you may choose to have an IP address automatically assigned.         IP Address:       192.168.111.135         Subnet Mask:       255.255.0         Gateway Address:       192.168.111.1         Allow the BOOTP server to automatically assign an IP address for the module.         Module Connection Type         Specify the communications connection type for this module.
	<prev next=""> Cancel</prev>

#### Step 4: Number of Configured Connections

1. Enter the number of desired available connections for this device. If 0 is entered, the only connection available will be the PG connection used by Micro/WIN.

Ethernet Wizard		×
	Module Command Byte         Determine the Q-address by counting the output bytes used by any 1/0 modules attached to the PLC before the CP243-1 module.         QB       2         Peer-to-Peer Connections         The CP243-1 module will support a maximum of 8 asynchronouse, concurrent connections. Select how many connections you wish to configure for this module.         Number of connections to configure for this module:         Image: Ima	t
	<prev next=""> Cancel</prev>	

Note: The number of connections selected determines how many simultaneous connections the PLC can support. When intending to have only one OPC server talking to the PLC, set up only one connection. This will ensure the best performance for the OPC server. When intending to have more than one active connection to the PLC, use multiple connections. Keep in mind, however, that the performance of the module will be impacted as each connection is used.

2. The image shown below contains 4 connections.

Ethernet Wizard		×
Ethernet wizard	Module Command Byte         Determine the Q-address by counting the output bytes used by any I/O modules attached to the PLC before the CP243-1 module.         QB	
	<prev next=""> Cancel</prev>	

#### **Step 5: Configuring Connections**

Each connection is configured individually. For this example, 4 connections have been selected.

#### Step 5a: Connection 0

There are two types of connections, client and server. In a client connection, the device is a client and makes request with servers (other devices). In a server connection, the device is a server and handles requests from clients (such as the OPC server and other devices). The latter is required for communications with the Siemens TCP/IP Ethernet Driver.

1. Select This is a Server Connection.

Configure Connections	×	
You have requested 4 connection(s). For each connection, specify whether the connection should act as a client or server, and configure its associated properties.		
Connection 0 (4 connections requested)		
This is a Client Connection: Client connections red	quest data transfers between the local PLC and a	
remote server. C This is a Server Connection: Servers respond to c		
<ul> <li>This is a server connection, servers respond to c</li> </ul>	onnection requests from remote clients.	
Local Properties (Client) TSAP 10.00	Remote Properties (Server) TSAP 10.00	
You may define up to 32 data transfers between this connection and the remote server.	Specify the IP address of the server for this connection.	
Data Transfers	0.0.0.0	
Enable the Keep Alive function for this connection		
Please specify a symbolic name for this client connect symbolically when initiating data transfers with the rem		
	< Prev Connection > Next Connection >	
	OK Cancel	

2. From this standpoint, the **CP243-1** is considered the **Server** (local) and the **OPC Server Channel**. The device is considered the **Client (Remote)**.

3. Enter a Remote TSAP or accept the default. This will be the Local TSAP in the OPC Server.

4. Optional: Accept all connection requests or limit to a particular remote machine. It is recommended that Accept all connection requests be selected. If concerned about device security (or if intending to access this device over the Internet) select a specific IP address. Users must ensure that the OPC server is running on a PC that has a known and fixed IP address.

5. Select Enable the Keep Alive.

6. Click Next Connection.

61 \_\_\_\_\_

Configure Connections	×
You have requested 4 connection(s). For each connection(s) for each connection of server, and configure its associated properties.	
<ul> <li>Connection 0 (4 connections requested)</li> <li>This is a Client Connection: Client connections remote server.</li> <li>This is a Server Connection: Servers respond to a</li> </ul>	
Local Properties (Server) TSAP 10.00 This server will connection with an Operator Panel (OP). Accept all connection requests. Accept connection requests from the following clients only: Enable the Keep Alive function for this connection Please specify a symbolic name for this client connect symbolically when initiating data transfers with the rem	Remote Properties (Client) TSAP 10.00
	< Prev Connection Next Connection >
	OK Cancel

Step 5b: Connection 1 1. Select This is a Server Connection.

Configure Connections	×
You have requested 4 connection(s). For each conne client or server, and configure its associated properties	
Connection 1 (4 connections requested)	
<ul> <li>This is a Client Connection: Client connections re remote server.</li> </ul>	quest data transfers between the local PLC and a
C This is a Server Connection: Servers respond to	connection requests from remote clients.
Local Properties (Client) TSAP 11.00	Remote Properties (Server) TSAP 10.00
You may define up to 32 data transfers between this connection and the remote server.	Specify the IP address of the server for this connection.
Data Transfers	0.0.0
Enable the Keep Alive function for this connection	n.
Please specify a symbolic name for this client connect symbolically when initiating data transfers with the rem	
Connection0_1	
	< Prev Connection Next Connection >
	OK Cancel

- 2. Notice the Local TSAP automatically incremented to 11.00.
- 3. Enter a Remote TSAP or accept the default. This will be the Local TSAP in the OPC Server.
- 4. Optional: Accept all connection requests.
- 5. Select Enable the Keep Alive.
- 6. Click Next Connection.

Configure Connections
You have requested 4 connection(s). For each connection, specify whether the connection should act as a client or server, and configure its associated properties.
Connection 1 (4 connections requested)
O This is a Client Connection: Client connections request data transfers between the local PLC and a remote server.
This is a Server Connection: Servers respond to connection requests from remote clients.
Local Properties (Server)         TSAP         11.00         This server will connection with an Operator Panel (OP).         Accept all connection requests.         Accept connection requests from the following clients only:         Image: I
Please specify a symbolic name for this client connection. Your program can reference this connection
symbolically when initiating data transfers with the remote server.
< Prev Connection Next Connection >
OK Cancel

Step 5c: Connection 2 1. Select This is a Server Connection.

Configure Connections	×
You have requested 4 connection(s). For each connection(s) for each connection or server, and configure its associated properties.	
Connection 2 (4 connections requested)	
<ul> <li>This is a Client Connection: Client connections re- remote server.</li> </ul>	quest data transfers between the local PLC and a
C This is a Server Connection: Servers respond to c	connection requests from remote clients.
Local Properties (Client) TSAP 12.00	Remote Properties (Server) TSAP 10.00
You may define up to 32 data transfers between this connection and the remote server.	Specify the IP address of the server for this connection.
Data Transfers	0.0.0
Enable the Keep Alive function for this connection	n
Please specify a symbolic name for this client connec symbolically when initiating data transfers with the rem	
Connection0_2	
	< Prev Connection
	OK Cancel

- 2. Notice the Local TSAP automatically incremented to 12.00.
- 3. Enter a Remote TSAP or accept the default. This will be the Local TSAP in the OPC Server.
- 4. Optional: Accept all connection requests.
- 5. Select Enable the Keep Alive.
- 6. Click Next Connection.

Configure Connections
You have requested 4 connection(s). For each connection, specify whether the connection should act as a client or server, and configure its associated properties.
Connection 2 (4 connections requested)
O This is a Client Connection: Client connections request data transfers between the local PLC and a remote server.
This is a Server Connection: Servers respond to connection requests from remote clients.
Local Properties (Server) TSAP 12.00 This server will connection with an Operator Panel (OP). Accept all connection requests. Accept connection requests from the following clients only:
Enable the Keep Alive function for this connection.
Please specify a symbolic name for this client connection. Your program can reference this connection symbolically when initiating data transfers with the remote server.
< Prev Connection Next Connection >
OK Cancel

Step 5d: Connection 3 1. Select This is a Server Connection....

Configure Connections
You have requested 4 connection(s). For each connection, specify whether the connection should act as a client or server, and configure its associated properties.
Connection 3 (4 connections requested)
This is a Client Connection: Client connections request data transfers between the local PLC and a remote server.
C This is a Server Connection: Servers respond to connection requests from remote clients.
Local Properties (Client) TSAP 13.00 10.00
You may define up to 32 data transfers between this connection and the remote server.       Specify the IP address of the server for this connection.         Data Transfers       0 . 0 . 0 . 0
<ul> <li>Enable the Keep Alive function for this connection.</li> <li>Please specify a symbolic name for this client connection. Your program can reference this connection symbolically when initiating data transfers with the remote server.</li> </ul>
Connection0_3
< Prev Connection Next Connection >
OK Cancel

- 2. Notice the Local TSAP automatically incremented to 13.00.
- 3. Enter a  $\ensuremath{\text{Remote TSAP}}$  or accept the default. This will be the Local TSAP in the OPC server.
- 4. Optional: Accept all connection requests.
- 5. Select Enable the Keep Alive.
- 6. Click Next Connection.

67 \_\_\_\_\_

Configure Connections
You have requested 4 connection(s). For each connection, specify whether the connection should act as a client or server, and configure its associated properties.
Connection 3 (4 connections requested)
O This is a Client Connection: Client connections request data transfers between the local PLC and a remote server.
This is a Server Connection: Servers respond to connection requests from remote clients.
Local Properties (Server) TSAP 13.00 This server will connection with an Operator Panel (OP). Accept all connection requests. Accept connection requests from the following clients only:
Enable the Keep Alive function for this connection.
Please specify a symbolic name for this client connection. Your program can reference this connection symbolically when initiating data transfers with the remote server.
< Prev Connection Next Connection >
OK Cancel

That completes the configuration of the four connections that were selected.

Note: Notice that the Local TSAP in the Connection dialog was automatically advanced for each connection. This TSAP number will need to be used in the OPC server setup when defining a device as the remote TSAP number.

#### Step 6: CRC and Keep Alive Interval

**Optional:** Enable CRC protection to monitor for accidental configuration corruption.

1. Set the **Keep Alive Interval**. The longer the interval, the longer the connection between the device and the OPC server will exist during idle time. A long Keep Alive Interval may not be desirable if connections are being shared (nonconcurrent). Each remote client will need to wait this amount of time before it will be able to connect with the device once the last connected remote client is finished communications. The 30 second default is suggested.

Ethernet Wizard		×		
1001 01	CRC Protection The wizard can generate a CRC to help protect the module configuration from unintentional memory overwrites. However, this protection will also prevent your program from making modifications to the configuration at run time.			
terested in the second se	<ul> <li>Yes, generate CRC protection for this configuration in the data block.</li> <li>No, do not generate CRC protection for this configuration.</li> </ul>			
	<ul> <li>Keep Alive Interval</li> <li>When connected with a remote communications partner, or when communicating with STEP</li> <li>7-Micro/WIN, the CP243-1 module can ensure the connection on a timed interval. Specify the interval for the Keep Alive function, in seconds.</li> </ul>			
	30 ≖ sec. <prev next=""> Cancel</prev>			

#### Step 7: Memory for Configuration

1. Click Suggest Address to let the wizard find the best available location to store the Ethernet configuration.

Ethernet Wizard		×
	locate Memory for Configuration ne configuration block for this module requires 24 bytes of V-Memory. With the options you ave chosen, the total size of the configuration is 159 bytes. Please specify a starting address here the configuration will be placed in the Data Block. ne wizard can suggest an address that represents an unused block of V-memory of the correct ze. Suggest Address VB0 through VB158	
	<prev next=""> Cancel</prev>	

2. The image shown below displays the results.

Ethernet Wizard	×
Allocate Memory for Configuration         The configuration block for this module requires 24 bytes of V-Memory. With the options you have chosen, the total size of the configuration is 159 bytes. Please specify a starting address where the configuration will be placed in the Data Block.         The wizard can suggest an address that represents an unused block of V-memory of the correct size.         Suggest Address         YB159       through VB317	
<prev next=""> Cancel</prev>	

Note: It is recommended that the Micro/WIN software pick this location for the application. If a CRC was not generated for the configuration data, please take steps to ensure that no other aspect of the PLC program will overwrite this area of memory.


#### Step 8: Ethernet Wizard Summary

1. Click Finish or Prev to modify the Configured Connections.

Ethernet Wizard		×
	The Ethernet Wizard will now generate the project components for your selected configuration, and make that code available for use by your program. Your requested configuration consists of the following project components:           Subroutine "ETHO_CTRL"           The module configuration will be placed at (VB159 - VB317) in the Data Block	
	Call the initialization and control subroutine "ETH0_CTRL" every scan. The CP243-1 module configuration must be downloaded to the PLC before use.	
	<prev cano<="" finish="" th=""><th>:el</th></prev>	:el

2. To review what the Ethernet wizard produced, double-click ETH0\_CTRL under the Program Block. All TSAPs configured are listed for future reference. Remember, the Local TSAP below is the Remote TSAP in the OPC server and the remote TSAP below is the Local TSAP in the OPC server.

3. The image below shows ETH0\_CTRL.

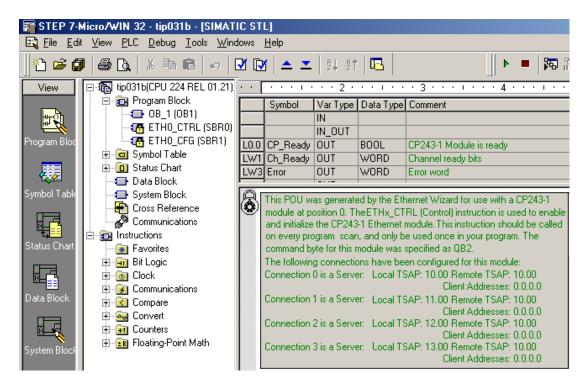

4. The image below shows ETH0\_CFG.


🌇 STEP 7-Micro/WIN 32 - tip031b - [SIMATIC STL]						
🕰 File Edit View PLC Debug Tools Windows Help						
]12 ≌ 🕼	🥌 🗅 🖌 🖄 📾 💼 🖉 🛛	<b>X</b>   4	▲ ⊻	8↓ 8↑		🕨 =   輝 福 (
View	⊡ 🚯 tip031b(CPU 224 REL 01.21)	· · [		2	$(x_1,y_2,y_3,y_4,y_4,y_4,y_4,y_4,y_4,y_4,y_4,y_4,y_4$	• • • 3 • • • 1 • • • 4 • • • 1 • •
	E Program Block		Symbol	Var Type	Data Type	Comment
1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1		L0.0	START	IN	BOOL	Send command to CP243-1if not active
	ETHO_CTRL (SBRO)			IN		
Program Block	ETHO_CFG (SBR1)			IN_OUT		
	⊡ ⊡ Symbol Table	L0.1	Done	OUT		High when the CP243-1 completes the comm
	⊡ Status Chart ⊡Data Block	LB1	Error	OUT	BYTE	Error status from the CP243-1 module
Symbol Table						
Symbol rable	System Block					Ethernet Wizard for use with a CP243-1
						_CFG (Reload Configuration) instruction
	Instructions				module to r figuration tab	ead its configuration block from the location ble pointer.

5. Now that the results of the Ethernet wizard have been confirmed, a connection can be made using the OPC server.

#### How To Configure S7-300/400 Connections in STEP 7

To configure the S7-300/400 for communications with the Siemens TCP/IP Ethernet Driver, both the CPU and the Ethernet module will need to be configured as well. To do so, follow the directions below.


1. From the Simatic Manager, launch HW Config by double-clicking Hardware under the SIMATIC Station.

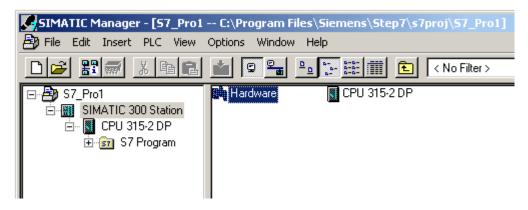

2. If this is a new Simatic project, add the necessary modules to the **Rack** in HW Config. For the Siemens TCP/IP Ethernet Driver to communicate with the CPU, there will need to be at least one Ethernet module capable of **S7 Communications**. This may be built into the CPU.

#### **Configuring an Ethernet Module**

1. Right-click on the particular module in the rack and then select Object Properties.

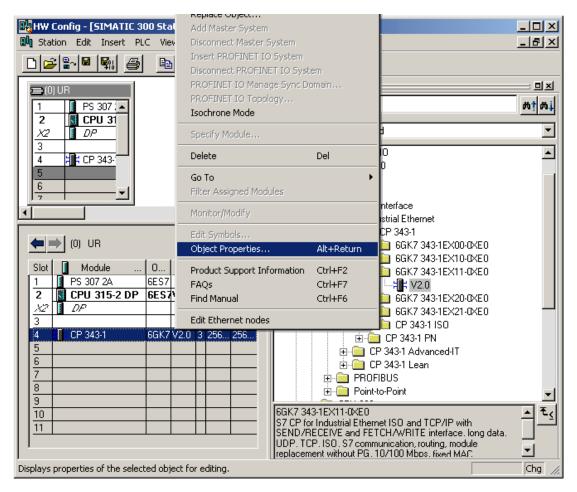

2. The dialog should appear as shown below.

Properties - CP 343-1 - (	(R0/54)	X
General Addresses 0	ptions Diagnostics	
Short Description:	CP 343-1	
	S7 CP for Industrial Ethernet ISO and TCP/IP with SEND/RECEIVE and FETCH/WRITE interface, long data, UDP, TCP, ISO, S7 communication, routing, module replacement without PG, 10/100 Mbps, fixed MAC address, initialization over LAN, IP multicast, firmware V2.0	<u>∧</u>
Order No./ firmware	6GK7 343-1EX11-0XE0 / V2.0	
Name:	CP 343-1	
_ Interface	Backplane Connection	- I
Type: Ethe	ernet MPI Address: 3	]
Address: 10.1	0.110.70	
Networked: Yes	Properties	
Comment:		
	<u>-</u>	
ОК	Cancel Help	

3. From the **General** tab, click the **Interface** | **Properties** button.

Properties - Ethernet interface CP 343-1 (R	:0/54)	×
General Parameters		
Set MAC address / use ISO protocol		
MAC address:	If a subnet is selected, the next available addresses are suggested.	
☑ IP protocol is being used		
IP address: 192.168.0.1	Gateway © Do not use router	
Subnet mask: 255.255.255.0	C Use router	
	Address: 192.168.0.1	
Subnet:		
not networked Ethernet(1)	New	
	Properties	
	Delete	
OK	Cancel Help	

- 4. Specify the IP and Subnet Mask for this module.
- 5. To network this module, click New under Subnet. Next, select the network created and the click OK.
- 6. Return to the HW Config main window.

#### **Configuring Connections**

1. Right-click on the CPU module in the rack and select Object Properties.

1 Station Edit Insert □ 🚅 🗟~ 🖼 📢 (0) UR 1 1 1 PS 307 : ▲	Discopport BROEINET TO Such		
2 CPU 31	Specify Module		<u></u>
<u>X2</u> ] DP 3	Delete	Del	Standard
4 H CP 343- 5 6	Go To Filter Assigned Modules	•	ROFIBUS DP ROFIBUS-PA ROFINET IO
7	Monitor/Modify		IMATIC 300 - IMATIC 400
	Edit Symbols		IMATIC PC Based Control 300/400
(0) UR	Object Properties  Product Support Information	Alt+Return Ctrl+F2	IMATIC PC Station
Slot 🚺 Module	FAQs	Ctrl+F7	1
1 📕 PS 307 2A	Find Manual	Ctrl+F6	]
2 CPU 315-2 D <u>X2</u> DF 3	P 6ES7V1.2 2 7/223		-
4 H CP 343-1 5 6	6GK7V2.0 3 256 256		
7			
8			
9			US-DP slaves for SIMATIC S7, M7, and
10 11			ibuted rack)

2. The dialog should appear as shown below.

Properties - CPU 315-2 DP - (R0/52)	×
General Startup Cycle/Clock Memory Retentive	
Time-of-Day Interrupts Cyclic Interrupts Diagnostics/Clock Pr	otection Communication
Connection Resources Reserved for	
PG Communication:	
OP Communication: 1	
S7 Standard Communication: 4	
S7 Communication: 0 (already	configured)
Maximum Number of Connection Resources: 12	
OK	Cancel Help

#### 3. Configure the desired number of PG/OP and PC (S7 Communication) connections.

Туре	Description
PG Communication	Used for program loading, diagnostics
OP Communication	Used for operator control and monitoring
S7 Standard Com- munication	Communication connections not configured, MPI communications with PUT/GET function blocks
S7 Communication (PC)	Configured connections, data communications

Note: The maximum number of PC connections for the CPU equals the Maximum Number of Connection Resources minus the S7 Standard Communication resources minus the OP Communication resources minus the PG Communication resources. Note that the Maximum Number of Connection Resources is based on the CPU/version/firmware.

In the example shown above, there are six S7 communication (PC) connections available (12-4-1-1=6). Likewise, the number of PG and OP connections can be increased using the same concept.

If the **Device returned protocol [Class=0x83, Code=0x04]** error is encountered, increase the number of S7 Standard Communication connections, thereby decreasing the number of S7 Communication connections.

4. After the connections have been configured, click **OK**. Next, in the main HW Config window click **Station | Save and Compile**.

5. Click PLC | Download to commit to the changes.

# How To Configure S7-1200 Connections with the Totally Integrated Automation (TIA) Portal

To configure the S7-1200 for communications with the Siemens TCP/IP Ethernet Driver, an online connection is required between the programming device and the target system. Users may have to configure the programming device to talk to the target system. For more information, follow the instructions below.

Note: For new Simatic projects, refer to the PLC's documentation for information on the default IP address settings.

- Siemens Totally Integrated Automation PORTAL Start Create new project Project name: Project1 Open existing project Path: C\My Documents\Automation an Create new project Author. Comment Migrate project Create Online & Installed products Help Project view **Opened** project:
- 1. Start the TIA Portal. In the Portal View, click **Create new project**.

2. Next, select the Online & Diagnostics tab and then click Accessible Devices.

Siemens								_ #>
						1	otally integrat	ed Automation PORTAL
Start	-		Accessible devices					>
Deriver A Dependent	- 17	<ul> <li>More all devices</li> <li>Online status</li> </ul>		PGIPC interfac	e to show accessible	e devices fo	r 🖳 Vilhware	Accelerated AMD F 💌
ric Hagiladdau								
Wandhiddae -	1			Accessible de	evices in target subr	vet		
Online &	1			Device IKEPS71200	Device type CPU 1212C ACID	ТСРАР	Address 10 10 110 150	MAC address 00-10-06-00-BC-OF
Diagnostics		🥚 Accessible devices	Pastur	JUEP4/1200	O'U 1212C ACD	itrar	10 10 110 150	001006008032
		Help						Betreah
							There is builded	Clase
Project view		Opened project:						

3. Select the appropriate PG/PC interface. This will prompt the TIA to scan the network for the device.

- 4. Once the scan is complete, select the device and then click **Show**. This will invoke the Project View.
- 5. In the General tab, select Protection. Then, ensure that Full access (no protection) is enabled.

Note: At this time, the Siemens TCP/IP Ethernet Driver does not support the use of a password.

- 6. Next, check Permit access with PUT/GET communication from remote partner. Then, save the settings.
- 7. In the project tree, locate the IP address and then open Online & Diagnostics.
- 8. Next, double-click **Online & Diagnostics** to invoke **Online Access**.
- 9. Select Functions and then click Assign IP Address.

			+ IP-10/18/110/150 XER511200 - 211 - 4	- • ×		
Devices					· CPU operator panel	
Constant of the second se	 Vogenstein General Dagmenten status Dagmenten status Dagmenten ber Hermen Dagmenten befer Hermen Bertens of day Antopolision Periot to tachory settings	T atheis	100 000 000 000 000 20 10 00 000 05 200 00 00 00 000 000 000 0000000		Invita 10 sto teoremistratori (c) Invita 10 sto teoremistratori (c) Invita 1000 Invita 10000 Invita 1000 Invita 10000 Invita 10000 Invita 100	PU
Brogram Minck       Gard Technological Objects      Statility, Card Tecater						All and a state of the
B Program Mucha     Sign Technological Objects	IF=10.10.310.350 KEPS7420	2	्र Properties के Infa - यु Diagnost	ics 💌	the second se	a manual second
Brogram Minch     Safety Control of Control	Device information Device information Devices information Devices with publicon Orders Devices Orders Devices Orders Devices			elp :	0 5 150*	the last of the

10. Enter the communication settings and click Assign IP Address.

• Note: The device is now ready to be configured.

11. Return to the Portal View and then select the Device & Networks tab. Then, click Add new device.

nens - Project1					Totally Integrated Automation PORT
Start 😽		Add new device			
Devices 6 Networks PLC Programming Viscalization Costine 8	<ul> <li>Shnw all devices</li> <li>Add now device</li> </ul>	SIMATIC PLC	PAC     DRAATIC 57-9200     OFU     OFU     OFU 1211C     OFU 1212C     OFU 1212C     OFU 1212C     OFU 1212C     OFU 1212C     OFU 1212C     OFU 1214C     OFU 1214C     OFU 1214C     OFU 1214C		CPU 1212C ACDCMy
Disgeratica	Canligure networks	SIBATIC HBB		Description 2018 work with DB v 2 Al2 onlocar (regardials) pulse outpoint for senal of for senal of for senal of for senal of modules for	memory, 120/240/46 power suppl, AVDC SHRISOURCE, DOA v relay and 4 A high speed counters worth digital capacito and a cl at only one of communication modules remainscation, up to 2 signal remainscation, up to 2 signal (10 expansion), 11 mol1600 , PHOPMET consection for my AHB and PECCO PAC
				щ	

12. Next, select the device's configuration and then click **Add device**. This will invoke the Project View, where the device's hardware can be further configured.

Project1>57-1200						_# <b>#</b> X	Hardware catalog .	•
df \$7-1200 \$7-1200 rack			100%		📥 Network view	Device view	Catalog Gearch Filer Filer Grunemuncation modu GrU	
Device overview	-	301			•	<u>×</u> 6	DEDO	
Blockale	5let Fa 103 102 101	ddress: © addr		Onlierns	Firmware Ceromo	ont	AGAO	
#5232_1 + 57-1200	1	-		2) 6857 241-14H30 KI 6857 212-16D30	Children and All	Comment		
General General FEOFEIETurterface		<ul> <li>General</li> <li>Project in</li> </ul>	formation					
<ul> <li>4/2</li> <li>High speed counters (</li> </ul>	and a						✓ Information	
<ul> <li>High speed counters</li> <li>Fulse generators (PTO Startup Time of day</li> </ul>		=	Name: 57- Comment:	1200		1	Device	al at the

13. Once finished, view the project tree. Locate **Program Blocks** and **PLC Tags** and then configure the addresses that will be used in the PLC project.

	🕻 🚡 🖄 🔝 😹 🥖 die online 🖋 Die uffine 🛔 🕅 🕅 🕅 🔍 💷			TAL
	hujasti + PEC_1 + PEC laga	_ # B ×	Tests	4
Devices		PLC tags Constants		
	21 T M		Find	-
A DESTRUCTION OF THE OWNER OWNER OF THE OWNER OWN	PLC tags			- 10
· Properti	Name Datation Address Retain Comment		244	
Devices & Networks	a <u>*</u> 1898		R.	
- (1 NLC, 1 [ONO 1212C AODORIA]				
Deuton configuration			White exists 2019	
W Onine & diagnostics			✓ Match case	
- Gel the participant			Find in mainteamates	18
Billion (2001)			Fyrid to builders beats	
Technological Objects			Ane wildtards	
• C FLC tags			Use regular repressions.	
PLC tags (0)			Which discovery	
<ul> <li>Watch tables</li> <li>Test lots</li> </ul>			· Portagement position	
• Carta and recordance			Texture them	
Common data	d Properties	Info 👷 Diagnostics 🐨		10
• @ Languages & Resources	Device information	AVION IN DECK AND SOLD	• Dewn	
Confine anists	1 Devices with problems		64pt	
	Onine To Opera Desicelmodule Message Details	Help	First First week	. *
	2 PLC,1 not available Establish new unline core	nection 7	▼Languages & Resources	
			Editing language	-
			H 10	
				1
			Reference language	11

• Note: The device is now configured and can be placed in Run Mode for communications.


# How To Configure S7-1500 Connections

The S7-1500 controller has an embedded Ethernet port that supports S7 communications over the Ethernet protocol. It must be configured to allow access from the server, however. For more information, refer to the instructions below.

- 1. To start, open the PLC project in the S7 TIA Portal software.
- 2. Next, open PLC Properties.
- 3. In the General tab, select Protection. Then, ensure that Full access (no protection) is enabled.

• Note: At this time, the Siemens TCP/IP Ethernet Driver does not support the use of a password.



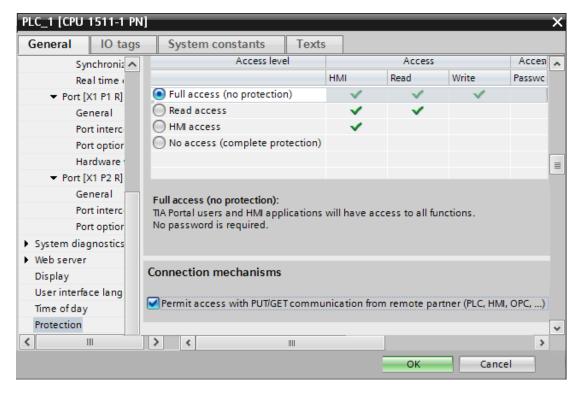

- 5. In the server, create a new channel. In **Device Driver**, select **Siemens TCP/IP Ethernet Driver** from the drop-down list. Continue through the channel wizard, specifying channel properties as needed. Then, click **Finish**.
- 6. Next, create a new device. In **Model**, select **S7-1500** from the **Device Model** drop-down list. Continue through the device wizard, specifying device properties as needed. Then, click **Finish**.

Note: The controller Protection settings are directly related to the device returning protocol error [Class=0x81, Code=0x04]. If this error occurs, the controller's memory (such as the Simatic memory card) may need to be reset. Once the controller's memory is reset, downloading the S7 project to the controller should not prompt for a password.

# Appendix – Alternate Syntax Support

Limited addressing support is available for the following applications.

Applicom Direct-Link Item Syntax INAT OPC-Server TCPIPH1 Item Syntax Siemens Simatic Net Item Syntax Softing S7/S5 OPC Server Item Syntax

Note: All brand and product names are trademarks, registered trademarks, or service marks of their respective holders.

**Note**: The offset for an atomic type tag in a data block is denoted by the column "Address" in Step 7, as shown above. This offset is denoted by the column "Offset" in the Siemens TIA Portal programming environment.

## Applicom Direct-Link Item Syntax

The following support for the Applicom Direct-Link OPC server is considered to be limited. Care must be taken because the data type for a given S7 data type/suffix may differ from the data type for the same S7 data type/suffix in the specified product. Applicom ASCII strings are not supported by this driver. The following information is intended to be a guideline for users that are already familiar with and/or prefer the syntax of the specified product. For preferred item syntax, refer to Standard S7-300/400/1200/1500 Item Syntax.

#### Address Syntax

#### Input, Output, Peripheral, Flag Memory Types

<memory type><S7 data type><address>[<Data Type suffix>] [<Byte Switching suffix>] <memory type><S7 data type><address>[<Data Type suffix>]<\_row\_col>

#### **Timer and Counter Memory Types**

<memory type><address>

#### DB Memory Type

DB<num>.<S7 data type><address>[<Data Type suffix>][< Byte Switching suffix>] DB<num>.<S7 data type><address>[<Data Type suffix>]<\_row\_col> where <num> ranges from 1 to 65535. See Also: Examples

#### Memory Types

Memory Type	Description	Address Range	Data Type	Access
l E	Inputs			Read / Write
Q A	Outputs		Read / Write	
PI PE	Peripheral Inputs	Dependent on S7 Data	Read Only	
PQ PA	Peripheral Outputs		Read / Write	
M F	Flag Memory			Read / Write
DB	Data Blocks			Read / Write
Т	Timers	T0-T65535	DWord, Long	Read / Write
C Z	Counters	C0-C65535         Word, Short           Z0-Z65535         Word, Short		Read / Write

🌻 See Also: <u>Examples</u>

#### S7 Data Types

The S7 data type is used to coerce the data type for a tag. It does not apply to Timers and Counters. The default data types are shown in **bold**. Suffixes are not required.

Data Type	Description	Address Range	Data Type	Suffix	Data Type w/ Suffix
None* DBX**	Bit	0.b-65534.b DBX0.b- DBX65534.b .b is Bit Number 0- 15	Boolean		
B DBB**	Unsigned Byte	B0-B65535 DBB0-DBB65535	<b>Byte</b> , Char		
W DBW**	Unsigned Word	W0-W65534 DBW0-DBW65534	Word, Short, BCD		
D DBD**	Unsigned Double Word	D0-D65532 DBD0-DBD65532	<b>DWord</b> , Long, LBCD, Float	F	Float

\*No S7 data type specified. Applies to non-DB memory types only. \*\*Applies to DB memory types only.

#### See Also: Examples

#### Data Type Suffixes

Suffix	Description	Data Type	
F	32-bit IEEE floating point value	Float	

#### **Byte Switching Suffixes**

These suffixes are used to switch the bytes that compose data of type 16-bit Word, 32-bit DWord, or 32-bit Float. The switching is applied after the device-level addressing option for byte Order is applied. For more information, refer to Addressing Options.

Byte Switching Suffixes can be used with all memory types except Timers and Counters (T, C, and Z) and Peripheral Inputs and Outputs (PI, PE, PQ, and PA). For information on the various types of switching that depend on the suffix and data type of the item, refer to the table below.

Suffix	16-Bit Data Types (Word, Short, BCD)	32-Bit Data Types (DWord, Long, LBCD, Float)
_X1	O1 O2 -> O2 O1 (byte switching)	O1 O2 O3 O4 -> O4 O3 O2 O1 (byte switch- ing)
_X2	O1 O2 -> O2 O1 (byte switching)	O1 O2 O3 O4 -> O3 O4 O1 O2 (Word switching)
_X3	O1 O2 -> O2 O1 (byte switching)	O1 O2 O3 O4 -> O2 O1 O4 O3 (Switching bytes in the words)

#### Array Support

The <.*array size*> notation is appended to an address to specify an array (such as "MW0.10"). Boolean arrays and string arrays are not supported.

#### Examples

S7 Data Type	Data Type	Input	Flags	Data Blocks
None	Boolean	10.7	M0.7	
DBX	Boolean			DB1.DBX0.7
В	Byte	IB0	MB0	

S7 Data Type	Data Type	Input	Flags	Data Blocks
				DB1.DBB0
DBB	Array	IB0_2_5	MB0_2_5	
				DB1.DBB0_2_5
		IW0	MW0	
w	Word			DB1.DBW0
DBW		IW0_X1	MW0_X2	DB1.DBW0_X3
	Array	IW0_10	MW0_10	
				DB1.DBW0_10
		ID0	MD0	
				DB1.DBD0
	DWord	ID0_X1	MD0_X2	DB1.DBD0_X3
D DBD	Float (F)	ID0F	MD0F	DB1.DBD0F
	Array	ID0F_X1	MD0F_X2	DB1.DBD0F_X3
		ID0_4_3	MD0_4_3	
				DB1.DBD0F_4_3

All brand and product names are trademarks, registered trademarks, or service marks of their respective holders.

# INAT OPC Server TCPIPH1 Item Syntax

The following support for the INAT OPC Server TCPIPH1 (V1.22 and up) is considered to be limited. Care must be taken as the data type for a given S7 data type/suffix may differ from the data type for the same S7 data type/suffix in the specified product. S7 data type and suffixes not included below are not supported by this driver. The following information is intended to be a guideline for users that are already familiar with and/or prefer the syntax of the specified product. For preferred item syntax, refer to Standard S7-300/400/1200/1500 Item Syntax.

#### **Address Syntax**

Input, Output, Peripheral, Flag Memory Types <memory type><S7 data type><address>[<suffix>] <memory type><S7 data type><address><.string length>\* <memory type><S7 data type><address><.array size>[<suffix>]

#### **Timer and Counter Memory Types**

<memory type><address>

#### **DB Memory Type**

DB<num>.<S7 data type><address>[<suffix>] DB<num>.<S7 data type><address><.string length>\* DB<num>.<S7 data type><address><.array size>[<suffix>]

where <num> ranges from 1 to 65535.

\*Applies to S7 data types that support string.

See Also: Examples

#### Memory Types

Memory Type	Description	Address Range	Data Type	Access
l E	Inputs	Dependent on S7 Data Type		Read / Write
Q A	Outputs			Read / Write
PI PE	Peripheral Inputs			Read Only
PQ	Peripheral Outputs			Read / Write

Memory Type	Description	Address Range	Data Type	Access
PA				
M	Flag Memory			Read / Write
F				
DB	Data Blocks			Read / Write
Т	Timers	T0-T65535	DWord, Long	Read / Write
С	Counters	C0-C65535	Word, Short	Read / Write
Z	Counters	Z0-Z65535	word, Short	i teau / Wille

#### See Also: <u>Examples</u>

## S7 Data Types

The S7 data type is used to coerce the data type for a tag. It does not apply to Timers and Counters. Default data types are shown in **bold**. A suffix is not required.

Data Type	Description	Address Range	Data Type	Suffix	Data Type w/ Suffix
х	Bit	X0.b-X65534.b .b is Bit Number 0-15	Boolean		
B Byte	Unsigned Byte	B0-B65535 BYTE0-BYTE65535	Byte, Char	KF	Char
W Word	Unsigned Word	W0-W65534 WORD0- WORD65534	Word, Short, BCD	BCD KF	BCD Short
I INT	Signed Word	10-165534 INT0-INT65534	Word, Short, BCD	BCD	BCD
D DWORD	Unsigned Double Word	D0-D65532 DWORD0- DWORD65532	<b>DWord</b> , Long, LBCD, Float	BCD IEEE KF	LBCD Float Long
DI	Signed	DI0-DI65532	DWord, Long,	BCD	LBCD
DINT	Double Word	DINT0-DINT65532	LBCD, Float	IEEE	Float
R REAL	IEEE Float	R0-R65532 REAL0-REAL65532	Float		
G String	S7 String	G0.n-G65532.n STRING0.n- STRING65532.n .n is string length 0 <n<= (pdu="" 254="" size<br="">of 480 and above) 0<n<= (pdu="" 210="" size<br="">below 480) 0<n<= (netlink<br="" 254="">S7300 and Netlink S7400 Models)</n<=></n<=></n<=>	String		

#### See Also: <u>Examples</u>

## Suffixes

Suffix	Description	Data Type
BCD	Two-byte packed BCD for Word references	BCD
вср	Value range is 0-9999	

Suffix	Description	Data Type
	Four-byte packed BCD for DWord references Value range is 0-99999999	LBCD
IEEE	32-bit IEEE floating point value	Float
		Char
KF	Signed	Short
		Long

# Array Support

The <.*array size*> notation is appended to an address to specify an array (such as MW0.10). Boolean arrays and string arrays are not supported.

S7 Data Type	Data Type	Input	Flags	Data Blocks
Х	Boolean	IX0.7	MX0.7	DB1.X0.7
		IB0	MB0	DB1.B0
	Dista	IBYTE0	MBYTE0	DB1.BYTE0
В	Byte	IB0KF	MB0KF	DB1.B0KF
Byte	Char (KF)	IBYTE0KF	MBYTE0KF	DB1.BYTE0KF
	Array	IB0KF.10	MB0KF.10	DB1.B0KF.10
		IBYTE0KF.10	MBYTE0KF.10	DB1.BYTE0KF.10
		IW0	MW0	DB1.W0
		IWORD0	MWORD0	DB1.WORD0
	Word	IW0BCD	MW0BCD	DB1.W0BCD
W	BCD (BCD)	IWORD0BCD	MWORD0BCD	DB1.WORD0BCD
Word	Short (KF)	IW0KF	MW0KF	DB1.W0KF
	Array	IWORD0KF	MWORD0KF	DB1.WORD0KF
		IW0BCD.10	MW0BCD.10	DB1.W0BCD.10
		IWORD0BCD.10	MWORD0BCD.10	DB1.WORD0BCD.10
		110	MIO	DB1.I0
	Short	IINT0	MINT0	DB1.INT0
1	BCD (BCD)	II0BCD	MI0BCD	DB1.I0BCD
INT	Array	IINT0BCD	MINT0BCD	DB1.INT0BCD
		110.10	MI0.10	DB1.I0.10
		IINT0.10	MINT0.10	DB1.INT0.10
		ID0	MD0	DB1.D0
		IDWORD0	MDWORD0	DB1.DWORD0
	DWord	ID0BCD	MD0BCD	DB1.D0BCD
	LBCD (BCD)	IDWORD0BCD	MDWORD0BCD	DB1.DWORD0BCD
D	Float (IEEE)	ID0IEEE	MD0IEEE	DB1.D0IEEE
DWORD	Long (KF)	IDWORD0IEEE	MDWORD0IEEE	DB1.DWORD0IEEE
	Array	ID0KF	MD0KF	DB1.D0KF
	, and y	IDWORD0KF	MDWORD0KF	DB1.DWORD0KF
		ID0IEEE.10	MD0IEEE.10	DB1.D0IEEE.10
		IDWORD0IEEE.10	MDWORD0IEEE.10	DB1.DWORD0IEEE.10
	Long	IDI0	MDI0	DB1.DI0
DI	LBCD (BCD)	IDINT0	MDINT0	DB1.DINT0
DINT	Float (IEEE)	IDI0BCD	MDI0BCD	DB1.DI0BCD
	Array	IDINT0BCD	MDINT0BCD	DB1.DINT0BCD
		IDI0IEEE	MDI0IEEE	DB1.DI0IEEE

# Examples

S7 Data Type	Data Type	Input	Flags	Data Blocks
		IDINT0IEEE	MDINT0IEEE	DB1.DINT0IEEE
		IDI0BCD.10	MDI0BCD.10	DB1.DI0BCD.10
		IDINT0BCD.10	MDINT0BCD.10	DB1.DINT0BCD.10
		IR0	MR0	DB1.R0
R	Float	IREAL0	MREAL0	DB1.REAL0
REAL	Array	IR0.10	MR0.10	DB1.R0.10
		IREAL0.10	MREAL0.10	DB1.REAL0.10
G	String	IG0.10	MG0.10	DB1.G0.10
String	Sung	ISTRING0.10	MSTRING0.10	DB1.STRING0.10

All brand and product names are trademarks, registered trademarks, or service marks of their respective holders.

# **Siemens Simatic Net Item Syntax**

The following support for the Siemens Simatic Net OPC server is considered to be limited. Care must be taken as the data type for a given S7 data type may differ from the data type for the same S7 data type in the specified product. S7 data types not included below are not supported by this driver. The following information is intended to be a guideline for users that are already familiar with and/or prefer the syntax of the specified product. For preferred item syntax, refer to Standard S7-300/400/1200/1500 Item Syntax.

#### Address Syntax

#### Input, Output, Peripheral, Flag Memory Types

<memory type><S7 data type><address> <memory type><S7 data type><address><.string length> <memory type><S7 data type><address><,array size>

#### Timer and Counter Memory Types

<memory type><address>

#### **DB Memory Type**

DB<num>,<S7 data type><address> DB<num>,<S7 data type><address><.string length>\* DB<num>,<S7 data type><address><,array size>

where <num> ranges from 1 to 65535.

\*Applies to S7 data types that support String.

🌻 See Also: <u>Examples</u>

#### Memory Types

Memory Type	Description	Address Range	Data Type	Access	
	Inputs		Read / Write		
E					
Q	Outputs			Read / Write	
A	e alpaie				
PI	Peripheral Inputs		Read Only		
PE		Dependent on S7 Data Type		Read Only	
PQ	Derinheral Outpute			Dood / Write	
PA	Peripheral Outputs			Read / Write	
М	Flag Memory			Read / Write	
F			neau / White		
DB	Data Blocks			Read / Write	
Т	Timers	T0-T65535	DWord, Long	Read / Write	

Memory Type	Description	Address Range	Data Type	Access
С	Countero	C0-C65535	Word. Short	Read / Write
Z	Counters	Z0-Z65535	word, Short	Reau / White

#### See Also: <u>Examples</u>

## S7 Data Types

The S7 data type is used to coerce the data type for a tag. It does not apply to Timers and Counters. The default data types are shown in **bold**.

Data Type	Description	Address Range	Data Type
x	Bit	X0.b-X65534.b	Boolean
~	Dit	.b is Bit Number 0-15	Dooloan
В	Unsigned Byte	B0-B65535	<b>Byte</b> , Char
Byte	Unsigned byte	BYTE0-BYTE65535	Dyte, Char
Char	Signed Byte	CHAR0-CHAR65535	Byte, <b>Char</b>
W	Unsigned Word	W0-W65534	Word, Short, BCD
Word		WORD0-WORD65534	Word, Short, BCD
INT	Signed Word	INT0-INT65534	Word, <b>Short</b> , BCD
D	Unsigned	D0-D65532	DWord, Long, LBCD, Float
DWORD	Double Word	DWORD0-DWORD65532	Dword, Long, LDCD, Float
DINT	Signed	DINT0-DINT65532	DWord, Long, LBCD, Float
	Double Word		Dword, <b>Long</b> , LDCD, Float
REAL	IEEE Float	REAL0-REAL65532	Float
		STRING0.n-STRING65532.n	
String	S7 String	.n is string length.	String
		0 <n<= 254.<="" td=""><td></td></n<=>	

## See Also: <u>Examples</u>

#### Array Support

The <.array size> notation is appended to an address to specify an array (such as MW0.10). Boolean arrays and string arrays are not supported.

## Examples

S7 Data Type	Data Type	Input	Flags	Data Blocks
Х	Boolean	IX0.7	MX0.7	DB1,X0.7
		IB0	MB0	DB1,B0
В	Byte	IBYTE0	MBYTE0	DB1,BYTE0
Byte	Array	IB0,10	MB0,10	DB1,B0,10
		IBYTE0,10	MBYTE0,10	DB1,BYTE0,10
Char	Char	ICHAR0	MCHAR0	DB1,CHAR0
Cildi	Array	ICHAR0,10	MCHAR0,10	DB1,CHAR0,10
		IW0	MW0	DB1,W0
W	Word	IWORD0	MWORD0	DB1,WORD0
Word	Array	IW0,10	MW0,10	DB1,W0,10
		IWORD0,10	MWORD0,10	DB1,WORD0,10
INT	Short	lint0	MINT0	DB1,INT0
	Array	IINT0,10	MINT0,10	DB1,INT0,10
D	DWord	ID0	MD0	DB1,D0
DWORD	Array	IDWORD0	MDWORD0	DB1,DWORD0

S7 Data Type	Data Type	Input	Flags	Data Blocks
		ID0,10	MD0,10	DB1,D0,10
		IDWORD0,10	MDWORD0,10	DB1,DWORD0,10
DINT	Long	IDINT0	MDINT0	DB1,DINT0
	Array	IDINT0,10	MDINT0,10	DB1,DINT0,10
REAL	Float	IREAL0	MREAL0	DB1,REAL0
REAL	Array	IREAL0,10	MREAL0,10	DB1,REAL0,10
String	String	ISTRING0.10	MSTRING0.10	DB1,STRING0.10

All brand and product names are trademarks, registered trademarks, or service marks of their respective holders.

## Siemens STEP 7 Item Syntax

The following support for Siemens STEP 7 Variable Table (VAT) syntax is considered to be limited. Care must be taken as the data type for a given S7 data type/suffix may differ from the data type for the same S7 data type/suffix in the specified product. S7 data types not included below are not supported by this driver. The following information is intended to be a guideline for users that are already familiar with and/or prefer the syntax of the specified product. For preferred item syntax, refer to **Standard S7-300/400/1200/1500 Item Syntax**.

#### Address Syntax

## Input, Output, Peripheral, Flag Memory Types

<memory type><S7 data type><address>

#### Timer and Counter Memory Types

<memory type><address>

#### DB Memory Type

DB<num>.<S7 data type><address>

where <num> ranges from 1 to 65535.

#### See Also: <u>Examples</u>

#### Memory Types

Memory Type	Description	Address Range	Data Type	Access
I	Inputs			Read / Write
E				
Q	Outputs			Read / Write
А	Culpulo			
PI	Peripheral Inputs		Read Only	
PE		Dependent on S7 Dat		
PQ	Peripheral Outputs			Read / Write
PA				Iteau / Wille
М	Flag Memory			Read / Write
F				
DB	Data Blocks			Read / Write
Т	Timers	T0-T65535         DWord, Long           C0-C65535         Word, Chart		Read / Write
С	Counters			Read / Write
Z	Counters	Z0-Z65535	Word, Short	

#### See Also: <u>Examples</u>

#### Accessing Structured Elements in STEP 7

For the Siemens S7-1200 model, STEP 7 accesses the Counter and Timer structured elements as complete whole structures instead of individual tags. For more information on the element offset and its server address equivalent, refer to the tables below.

#### Counters

Element	Data Type	Offset	Server Address Equivalent
Count_UP	Boolean	0.0	DB1,C00.0
Count_Down	Boolean	0.1	DB1,C00.1
Reset	Boolean	0.2	DB1,C00.2
Load	Boolean	0.3	DB1,C00.3
Q_UP	Boolean	0.4	DB1,C00.4
Q_Down	Boolean	0.5	DB1,C00.5
PAD	Byte	1.0	DB1,B1
Preset_Value	Short	2.0	DB1,I2
Count_Value	Short	4.0	DB1,I4

#### Timers

Element	Data Type	Offset	Server Address Equivalent
Start	DWord	0.0	DB1,D0
Preset	DWord	4.0	DB1,D4
Elapsed	DWord	8.0	DB1,D8
Running	Bool	12.0	DB1,DBX12.0
IN	Bool	12.1	DB1,DBX12.1
Q	Bool	12.2	DB1,DBX12.2
PAD	Byte	13.0	DB1,DBB13
PAD_2	Byte	14.0	DB1,DBB14
PAD_3	Byte	15.0	DB1,DBB15

For more information, refer to Standard S7-300/400/1200/1500 Item Syntax.

## S7 Data Types

The S7 data type is used to coerce the data type for a tag. It does not apply to Counters and Timers. The default data types are shown in **bold**.

Data Type	Description	Address Range	Data Type	Suffix	Data Type w/ Suffix
None* DBX**	Bit	0.b-65534.b DBX0.b- DBX65534.b .b is Bit Number 0- 15	Boolean		
B DBB**	Unsigned Byte	B0-B65535 DBB0-DBB65535	<b>Byte</b> , Char		
W DBW**	Unsigned Word	W0-W65534 DBW0-DBW65534	Word, Short, BCD		
D DBD**	Unsigned Double Word	D0-D65532 DBD0-DBD65532	<b>DWord</b> , Long, LBCD, Float	F	Float

\*No S7 data type specified. Applies to non-DB memory types only. \*\*Applies to DB memory types only.

#### See Also: <u>Examples</u>

S7 Data Type	Data Type	Input	Flags	Data Blocks
None	Boolean	10.7	M0.7	
DBX	Doolean			DB1.DBX0.7
В	Puto.	IB0	MB0	
DBB	Byte			DB1.DBB0
W	Word	IW0	MW0	
DBW	vvora			DB1.DBW0
D	DWord	ID0	MD0	
DBD				DB1.DBD0

#### Examples

All brand and product names are trademarks, registered trademarks, or service marks of their respective holders.

**Note**: The offset for an atomic type tag in a data block is denoted by the column "Address" in Step 7, as shown above. This offset is denoted by the column "Offset" in the Siemens TIA Portal programming environment.

## Softing S7/S5 OPC Server Item Syntax

The following support for the Softing S7/S5 OPC server is considered to be limited. Care must be taken as the data type for a given S7 data type/suffix may differ from the data type for the same S7 data type/suffix in the specified product. The following information is intended to be a guideline for users that are already familiar with and/or prefer the syntax of the specified product. For preferred item syntax, refer to <u>Standard S7-300/400/1200/1500 Item Syntax</u>.

## Address Syntax

Input, Output, Peripheral, Flag Memory Types <memory type><S7 data type><address>:[<suffix>]

#### Timer and Counter Memory Types

<memory type><address>

## **DB Memory Type**

DB<num>.<S7 data type><address>:[<suffix>]

Where <num> ranges from 1 to 65535.

#### 🌻 See Also: Examples

#### Memory Types

Memory Type	Description	Address Range	Data Type	Access
1	Inputs			Read / Write
E				
Q	Outputs			Read / Write
A	<b>F</b>			
PI	Peripheral Inputs		Read Only	
PE		Dependent on S7 Data T	Read Only	
PQ	Daviahawal Outauta			
PA	Peripheral Outputs			Read / Write
М				Read / Write
F	Flag Memory			Read / White
DB	Data Blocks		Read / Write	
Т	Timers	T0-T65535	Read / Write	
С	Counters	C0-C65535	Road / Write	
Z	Counters	Z0-Z65535	Word, Short	Read / Write

## See Also: Examples

## S7 Data Types

The S7 data type is used to coerce the data type for a tag. It does not apply to Timers and Counters. The default data types are shown in **bold**. Suffix is not required.

Data Type	Description	Address Range	Data Type	Suffix	Data Type w/ Suffix
None* DBX**	Bit	0.b-65534.b DBX0.b- DBX65534.b .b is Bit Number 0- 15	Boolean		
B DBB**	Unsigned Byte	B0-B65535 DBB0-DBB65535	Byte, Char	Byte Char String	Byte Char String
W DBW**	Unsigned Word	W0-W65534 DBW0-DBW65534	Word, Short, BCD	Word INT BCD	Word INT BCD
D DBD**	Unsigned Double Word	D0-D65532 DBD0-DBD65532	<b>DWord</b> , Long, LBCD, Float	DWord DINT BCD REAL	DWord DINT BCD REAL

\*No S7 data type specified. Applies to non-DB memory types only. \*\*Applies to DB memory types only.

#### See Also: Examples

## Suffixes

Suffix	Description	Data Type
Byte	Unsigned Byte	Byte
Char	Signed Byte	Char
Word	Unsigned Word	Word
INT	Signed Word	Short
DWORD	Unsigned DWord	DWord
DINT	Signed DWord	Long
	Two byte packed BCD for Word references	
BCD	Value range is 0-9999	BCD
всо	Four byte packed BCD for DWord references	LBCD
	Value range is 0-99999999	
REAL	32-bit IEEE floating point value	Float
String	S7 String	String

## Examples

S7 Data Type	Data Type	Input	Flags	Data Blocks
None	Boolean	10.7	M0.7	
DBX				DB1.DBX0.7
В	Byte	IB0	MB0	
DBB	String (String)			DB1.DBB0

S7 Data Type	Data Type	Input	Flags	Data Blocks
		IB0:String	MB0:String	
				DB1.DBB0:String
		IW0	MW0	
W	Word			DB1.DBW0
DBW	BCD (BCD)	IW0:BCD	MW0:BCD	
				DB1.DBW0:BCD
D DBD	DWord LBCD (BCD) Float (REAL)	ID0	MD0	
				DB1.DBD0
		ID0:BCD	MD0:BCD	
				DB1.DBD0:BCD
		ID0:REAL	MD0:REAL	
				DB1.DBD0:REAL

All brand and product names are trademarks, registered trademarks, or service marks of their respective holders.

# Index

# Α

A required code page is unavailable on this machine. Tag generation may fail or tag names and descriptions may not appear as expected. | Required code page = page>. 43

Address Descriptions 24 Address Syntax 28, 81, 83 Addressing Options 16 Allow Sub Groups 13 Appendix – Channel Properties 54

Appendix – Device Properties 54

Appendix – Device i Topenties 5

Appendix – Tag Properties 55

Applicom Direct-Link Item Syntax 81

Array Support 32, 82, 85

Arrays 38

Attempts Before Timeout 11

Auto-Demotion 12

Auto-generated tag names and descriptions may not appear as expected due to string conversion error. 43

# В

BCD 23 Big Endian 16 Bits 16 Boolean 23 Byte 23 Byte Order 16 Byte Switching Suffix 82

# С

Channel Assignment 9 Channel Properties – Advanced 9 Channel Properties – Ethernet Communications 8 Channel Properties – General 7 Channel Properties – Write Optimizations 8 Char 23 Communications Parameters 14 Communications Timeouts 11 Configured connection 15 Configuring Connections 60 Configuring Siemens Connections 56

93

Connect Timeout 11 Counters 32, 39, 84 CPU Rack 16 CPU Slot 16 Create 14 Created tag in group due to internal block size. | Tag address = '<address>', tag name = '<name>', group name = '<name>'. 44

# D

Data Access Errors 53 Data Block 23 Data Blocks 84 Data Collection 10 Data Types Description 23 Date 23 DB Memory Type 28, 83 Delete 13 Demote on Failure 12 Demotion Period 12 Device Properties – Auto-Demotion 12 Device Properties - Redundancy 18 Device Properties - Tag Generation 12 Device Properties - Timing 11 Diagnostics 7 Discard Requests when Demoted 12 Do Not Scan, Demand Poll Only 11 Double 23 Driver 9 Duty Cycle 8 DWord 23

# Ε

Error Codes 52 Ethernet Settings 8 Ethernet Wizard 56 Event Log Messages 40

# F

Failed to resolve host. | Host = '<host name>'. 42 Flag Memory 84 Float 23

# G

General 9 Generate 13

# Η

Help Contents 5 Hex Strings 32, 37 How To Configure S7-1200 Connections with the Totally Integrated Automation (TIA) Portal 76 How To Configure S7-1500 Connections 79 How To Configure S7-200 Connections in Micro/WIN 56 How To Configure S7-300/400 Connections in STEP 7 71

# I

ID 9 Identification 7 INAT OPC Server TCPIPH1 Item Syntax 83 Initial Updates from Cache 11 Inputs 83 Inter-Device Delay 9 Internal Tags 27

# L

LBCD 23 Legacy S7-300/400 Item Syntax 34 Link Type 15 Little Endian 16 LLong 23 Local TSAP 15 Long 23

# М

Memory exception reading the Step 7 language file. 43 Memory Types 28, 81, 83 Micro/WIN 15 MicroWin 56 Model 9 MPI ID 14

# Ν

NetLink 14 NetLink adapter 14 NetLink Errors 52 NetLink: S7-300 Address Descriptions 27 NetLink: S7-400 Address Descriptions 27 Network Adapter 8 Non-Normalized Float Handling 9

# 0

On Device Startup 13 On Duplicate Tag 13 On Property Change 13 Operating Mode 10 Optimization Method 8 Optimizing Communications 22 Outputs 83 Overview 5 Overwrite 13

# Ρ

Parent Group 13 Peripheral Inputs 83 Peripheral Outputs 83 PG connection 15 Port Number 14 Program Path 17 Protocol Errors 52

# Q

QWord 23

# R

Reason = 'Device is not responding'. 41

Reason = 'Device returned data access error'. Error code = <error>. 41 Reason = 'Device returned protocol error'. Error class = <class>, Error code = <error>. 40 Reason = 'Device returned transport error'. Error code = <error>. 40 Reason = 'Frame contains errors'. 40 Reason = 'Unknown error occurred'. 42 Reason = NetLink returned error. Error code = <error>. 42 Redundancy 18 Remote TSAP 15 Replace with Zero 9 Request Timeout 11 Respect Tag-Specified Scan Rate 11

# S

S7-1200 Address Descriptions 27 S7-1500 Address Descriptions 27 S7-200 Address Descriptions 24 S7-300 Address Descriptions 26 S7-300/400/1200/1500 15 S7-400 Address Descriptions 26 S7 Communications Parameters 14 Scan Mode 10 Setup 6 Short 23 Siemens Simatic Net Item Syntax 86 Siemens STEP 7 Item Syntax 88 Simulated 10 Softing S7/S5 OPC Server Item Syntax 90 Standard S7-300/400/1200/1500 Item Syntax 28 STEP 7 71 Step 7 language file failed to open. | OS error = '<error>'. 44 STEP 7 Project 17-18 STEP 7 Tag Import 17 String 23 String Subtype 37 String Support 31 Suffixes 84 Supported Devices 6 Supported Models via Siemens STEP 7 17 Supported Models via Siemens TIA Portal 17 Supported NetLink Cables and Gateways 6 Syntax 81

## Т

Tag Counts 7 Tag Generation 12 Tag generation failure. | Data block name = '<block name>', data block number = <block number>. 44 Tag Import 17 Tag Import Type 17-18 Tag not created because arrays are not supported with specified data type. | Tag name = '<name>', group name = '<name>', data type = '<type>'. 45 Third-Party 81 TIA Portal 76 TIA Portal Tag Import 18 Timeouts to Demote 12 Timers 32, 38, 84 Timing 11 Transport Errors 52 TSAP 15

# U

Unable to connect to device. | 45

Unable to establish association with device. | 45

Unable to load the Step 7 language file. 43

Unable to read data from device. | Data block = '<block>', block start = <address>, block size = <size>, 47

- Unable to read data from device. | Memory type = '<type>', block start = <address>, block size = <size> (bytes), 49
- Unable to read data from device. Block deactivated. | Data block = '<block>', block start = <address>, block size = <size>, 48
- Unable to read data from device. Block deactivated. | Memory type = '<type>', block start = <address>, block size = <size> (bytes), 49

Unable to read from address on device. | Address = '<address>', 46

Unable to read from address on device. Tag deactivated. | Address = '<address>', 46

Unable to write to address on device. | Address = '<address>', 50

- Unable to write to address on device. HEXSTRING contains a non-hexadecimal character. | Address = '<address>'. 51
- Unable to write to address on device. HEXSTRING length is different from tag length. | Address = '<address>', HEXSTRING length = <length> (bytes), tag length = <length> (bytes). 51
- Unable to write to address on device. HEXSTRING length must be an even number of characters. | Address = '<address>'. 51

Unable to write to address on device. Time of Day string contains a syntax error. Expected 'hh mm

ss.hhh' format. | Address = '<address>', Time of Day string = '<string>'. 51

Unmodified 9

# W

Word 23 Write All Values for All Tags 8 Write Only Latest Value for All Tags 8 Write Only Latest Value for Non-Boolean Tags 8